


EZ-SCREEN Type 2 Lens Shields



Datasheet

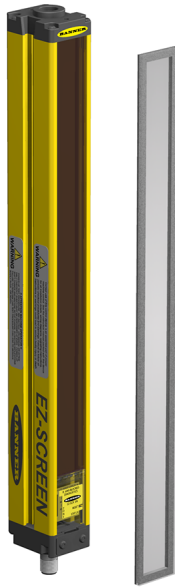

- 1.5 mm (0.06 in) clear polycarbonate
- Neoprene foam gasket
- Easy to install
- Available in sizes for all EZ-SCREEN Type 2 emitter and receiver models

Lens Shield Models	Fits EZ-SCREEN Type 2 HD Models	Lens Shield Lengths
LSS-150	LS2..30-150	210 mm
LSS-300	LS2..30-300	360 mm
LSS-450	LS2..30-450	510 mm
LSS-600	LS2..30-600	660 mm
LSS-750	LS2..30-750	810 mm
LSS-900	LS2..30-900	959 mm
LSS-1050	LS2..30-1050	1109 mm
LSS-1200	LS2..30-1200	1259 mm
LSS-1350	LS2..30-1350	1409 mm
LSS-1500	LS2..30-1500	1558 mm

Description

The model LSS-.. Lens Shield is a replaceable protective cover for the lens of an EZ-SCREEN Type 2 sensor.

The shield is made of 1.5 mm (0.06 in) thick clear polycarbonate to protect the emitter or receiver lens from damage from weld flash or impact.

Shield models are available for every sensor length and attach to the sensor with an adhesive-backed neoprene foam gasket.

Application Note: When shields are installed on both the emitter and receiver, excess gain is reduced by 36 percent and maximum operating range is reduced by 20 percent.

Installing the Lens Shield

Remove all dust, dirt, and oil from the metal surfaces on all four sides of the emitter or receiver lens, using a mild detergent or window cleaner and a soft cloth. Also clean the sensor lens, if needed.



Note: Avoid cleaning agents containing alcohol, as they will damage the sensor's acrylic lens. If in doubt about the composition of a cleaning agent, test a small area of the acrylic sensor lens away from a beam location (as indicated on the housing sides) by applying the cleaning agent and allowing it to evaporate.



The foam gasket is pre-attached to the lens shield. Peel the paper backing from the foam gasket. Press one end of the lens shield to the bottom end of the sensor, aligned with the end cap's bottom edge, and apply pressure, moving slowly to the top end. The width of the lens shield corresponds closely to the width of the sensor, so it is easy to keep it centered during mounting. Peel away the protective coating from the lens shield's outer surface.

Maintaining the Lens Shield

To prevent loss of excess gain, clean the shields when they become dirty. Remove dirt and/or oil from the front face of the shield using a mild detergent or window cleaner and a soft cloth. Avoid industrial cleaning agents or cleaning agents containing alcohol, as they may damage the shield material or the sensor.

Replacing the Lens Shield

Replace the shield when it becomes pitted or scratched, or excess gain will be decreased.

To remove, peel the lens shield away from the sensor starting at either end, and continuing to the opposite end. All or most of the gasket will remain attached to the sensor; peel the gasket material away. Clean the sensor and install the new lens shield as described in these instructions.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.