

Sure Cross® DX99 FlexPower Node (Metal Housing)



Datasheet

The Sure Cross® wireless system is a radio frequency network with integrated I/O that can operate in most environments and eliminate the need for wiring runs. DX99 wireless networks are formed around a Gateway, which acts as the wireless network master device, and one or more Intrinsically Safe Nodes.



- Wireless industrial I/O device with two selectable discrete inputs and two analog inputs
- FlexPower® technology driven by one lithium primary battery integrated into the housing
- DIP switches for user configuration
- Frequency Hopping Spread Spectrum (FHSS) technology and Time Division Multiple Access (TDMA) control architecture ensure reliable data delivery within the unlicensed Industrial, Scientific, and Medical (ISM) band
- Transceivers provide bidirectional communication between the Gateway and Node, including fully acknowledged data transmission
- Lost RF links are detected and relevant outputs set to user-defined conditions
- DX99 Metal housings are certified for use in Class I, Division 1, Groups A, B, C, D; Class II, Division 1, Groups E, F, G; Class III, Division 1; and Zone 0 (Category 1G) and Zone 20 (Category 1D) when properly installed in accordance with the National Electrical Code, the Canadian Electrical Code, or applicable local codes/regulations

For additional information, updated documentation, and accessories, refer to Banner Engineering's website, www.bannerengineering.com/surecross.

Model	Frequency	Boost Voltage	I/O
DX99N9X1S2N0M2X0D2	900 MHz ISM Band	18 V	Discrete Mode Inputs: Two selectable discrete Switch Power: Two, Configurable
DX99N2X1S2N0M2X0D2	2.4 GHz ISM Band		
DX99N9X1S2N0M2X0D1	900 MHz ISM Band	10 V	Analog Mode Inputs: Two selectable discrete, two 0 to 20 mA analog Switch Power: One, Configurable
DX99N2X1S2N0M2X0D1	2.4 GHz ISM Band		

Model	Frequency	Boost Voltage	I/O
DX99N9X1S2N0V2X0D2	900 MHz ISM Band	18 V	Discrete Mode Inputs: Two selectable discrete Switch Power: Two, Configurable
DX99N2X1S2N0V2X0D2	2.4 GHz ISM Band		
DX99N9X1S2N0V2X0D1	900 MHz ISM Band	10 V	Analog Mode Inputs: Two selectable discrete, two 0 to 10V analog Switch Power: One, Configurable
DX99N2X1S2N0V2X0D1	2.4 GHz ISM Band		

These models ship with the battery disconnected. To install the battery, refer to the battery replacement instructions in this datasheet.




WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel protection. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.



Sure Cross® User Configuration Tool

The User Configuration Tool (UCT) offers an easy way to link I/O points in your wireless network, view I/O register values graphically, and set system communication parameters when a host system is not part of the wireless network.

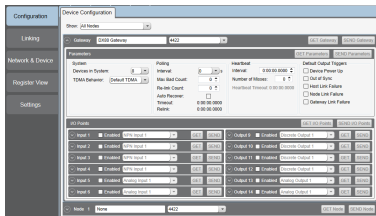

The User Configuration Tool (UCT) software runs on any computer with the Windows 7, Windows 8, or Windows 10 operating system. Use a USB to RS-485 adapter cable to connect a standalone DX80 Gateway to the computer. For DXM Controllers with an internal DX80 radio, connect a computer to the DXM Controller using a USB or Ethernet connection. Download the most recent revisions of the UCT software from Banner Engineering's website: <http://www.bannerengineering.com/wireless>.

The USB to RS-485 adapter cable is not required for the DXM Controller. For standalone DX80 Gateway devices use:

- USB to RS-485 adapter cable model BWA-UCT-900 for 1 Watt radios
- USB to RS-485 adapter cable model BWA-HW-006 for all other radios

Setting Up Your Wireless Network

To set up and install your wireless network, follow these steps.

Disconnect the power from your Sure Cross devices.

1. Configure the DIP switches of all devices.
2. If your device has I/O, connect the sensors to the Sure Cross devices. If your device does not have I/O, skip this step.
3. Refer to the wiring diagrams to apply power to all devices.
 - For two LED models, the Gateway's LED 1 is solid green and the Node's LED 2 flashes red to indicate there is no radio link to the Gateway.
 - For one LED models, the Gateway's LED is solid green and the Node's LED flashes red to indicate there is no radio link to the Gateway.
4. Form the wireless network by binding the Nodes to the Gateway. If the binding instructions are not included in the datasheet, refer to the product manual for binding instructions.
5. Observe the LED behavior to verify the devices are communicating with each other.
 - For two LED models, the Gateway's LED 1 is solid green and the Node's LED 1 flashes green to indicate it is communicating with the Gateway.
 - For one LED models, the Gateway's LED is solid green and the Node's LED flashes green to indicate it is communicating with the Gateway.
6. Conduct a site survey between the Gateway and Nodes. If the site survey instructions are not included in this datasheet, refer to the product manual for detailed site survey instructions.
7. Install your wireless sensor network components. If installation instructions are not included in this datasheet, refer to the product manual for detailed installation instructions.

For additional information, including installation and setup, weatherproofing, device menu maps, troubleshooting, and a list of accessories, refer to one of the following product manuals.

- Sure Cross® Wireless I/O Network Instruction Manual: [132607](#)
- Web Configurator Instruction Manual (used with "Pro" and DX83 models): [134421](#)
- Host Controller Systems Instruction Manual: [132114](#)

Configure the DIP Switches


Before making any changes to the DIP switch positions, disconnect the power. DIP switch changes will not be recognized if power isn't cycled to the device. For devices with batteries integrated into the housing, remove the battery for at least one minute.

Accessing the DIP Switches of a Single-Chamber Metal Housing

The DIP switches are located behind the rotary dials.

To access the DIP switches, follow these steps:

1. Unscrew and remove the top of the DX99 metal housing. The top section is the section with the glass window.
2. Pull the radio cover section off the bracket assembly. Two pins hold the radio cover to the bracket assembly.
3. Gently unplug the ribbon cable from the back of the radio cover.
4. Remove the black cover plate from the bottom of the device's cover.
The DIP switches are located behind the rotary dials.

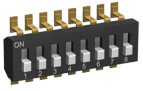

After making the necessary changes to the DIP switches, place the black cover plate back into position and gently push into place. Plug the ribbon cable in after verifying that the blocked hole lines up with the missing pin. Mount the cover back onto the bracket assembly.

DIP Switch Settings

Device Settings	Switches	
	1	2
Rotary dial address mode	OFF*	
Extended address mode	ON	
Analog Configuration		OFF*
Discrete Configuration		ON

* Default configuration

Address Mode

The SureCross wireless devices may use one of two types of addressing modes: rotary dial addressing or extended addressing. In rotary dial address mode, the left rotary dial establishes the network ID and the right rotary dial sets the device ID. The wireless network is restricted to a maximum of 16 devices.

Extended address mode uses a security code to "bind" Nodes to a specific Gateway. Bound Nodes can only send and receive information from the Gateway to which they are bound. In extended address mode, wireless networks may contain up to 48 radio devices. For more information on extended address mode, refer to the SureCross™ Wireless I/O Network product manual.

The device ships in rotary dial address mode by default, with the DIP switch in the OFF position. To use extended address mode, change the DIP switch to the ON position.

Analog or Discrete Configuration

Select between an analog configuration or a discrete configuration using the DIP switch specified in the table. The default switch settings for this device are all in the OFF position.

Analog Configuration - Switch 2 OFF (10V Boost Models)

For analog configuration, DIP switch 2 is in the OFF position (factory default). Analog configuration has analog IN 1 linked to switch power 1 (SP1) and is programmable using switches four through eight. Sample and report rates for analog input 2 are listed in the specifications. Discrete inputs 1 and 2 are also active in this configuration and the input types are defined using switch 3.

Analog Configuration, Switch 2 OFF	DIP Switches					
Descriptions	3	4	5	6	7	8
Discrete Input Sinking (NPN)	OFF*					
Discrete Input Sourcing (PNP)	ON					
Warm-up Time 10 milliseconds		OFF*	OFF*			
Warm-up Time 62.5 milliseconds		OFF	ON			
Warm-up Time 125 milliseconds		ON	OFF			
Warm-up Time 2 seconds		ON	ON			
Sample/Report Rate 1 second				OFF*	OFF*	OFF*
Sample/Report Rate 2 seconds				OFF	OFF	ON
Sample/Report Rate 4 seconds				OFF	ON	OFF
Sample/Report Rate 16 seconds				OFF	ON	ON
Sample/Report Rate 64 seconds				ON	OFF	OFF
Sample/Report Rate 5 minutes				ON	OFF	ON
Sample/Report Rate 15 minutes				ON	ON	OFF

Analog Configuration, Switch 2 OFF	DIP Switches					
Descriptions	3	4	5	6	7	8
Modbus or UCT configured (overrides DIP switches)				ON	ON	ON

Analog IN 2, Discrete 1, and Discrete 2 are not powered from switched power terminals. In this configuration, SP2 is disabled. If you need SP2, contact the factory.

* Default positions

Discrete Configuration - Switch 2 ON (10V and 18V Boost Models)

The discrete configuration matches the switch power outputs (SP1, SP2) with the discrete inputs. The analog inputs are disabled. The discrete configuration is selected when switch 2 is in the ON position.

Discrete Configuration, Switch 2 ON	DIP Switches					
Descriptions	3	4	5	6	7	8
Discrete Inputs Sinking (NPN)	OFF*					
Discrete Inputs Sourcing (PNP)	ON					
Warm-up Time 5 milliseconds		OFF*	OFF*			
Warm-up Time 10 milliseconds		OFF	ON			
Warm-up Time 62.5 milliseconds		ON	OFF			
Warm-up Time 125 milliseconds		ON	ON			
Sample/Report Rate 62.5 milliseconds				OFF*	OFF*	OFF*
Sample/Report Rate 125 milliseconds				OFF	OFF	ON
Sample/Report Rate 250 milliseconds				OFF	ON	OFF
Sample/Report Rate 500 milliseconds				OFF	ON	ON
Sample/Report Rate 1 second				ON	OFF	OFF
Sample/Report Rate 2 seconds				ON	OFF	ON
Sample/Report Rate 16 seconds				ON	ON	OFF
Modbus or UCT configured (overrides DIP switches)				ON	ON	ON

Discrete IN 1 uses switched power 1 (SP1). Discrete IN 2 uses switched power 2 (SP2). Analog inputs 1 and 2 are disabled.

* Default positions

Analog Configuration - Switch 2 OFF (18V Boost Models)

For analog configuration, DIP switch 2 is in the OFF position (factory default). Analog configuration has analog IN 1 linked to switch power 1 (SP1) and is programmable using switches four through eight. Sample and report rates for analog input 2 are listed in the specifications. Discrete inputs 1 and 2 are also active in this configuration and the input types are defined using switch 3.

Analog Configuration, Switch 2 OFF	DIP Switches					
Descriptions	3	4	5	6	7	8
Discrete Inputs Sinking (NPN)	OFF*					
Discrete Inputs Sourcing (PNP)	ON					
Warm-up Time 20 milliseconds		OFF*	OFF*			
Warm-up Time 2 seconds		OFF	ON			
Warm-up Time 4 seconds		ON	OFF			
Warm-up Time 8 seconds		ON	ON			
Sample/Report Rate 4 second				OFF*	OFF*	OFF*
Sample/Report Rate 8 seconds				OFF	OFF	ON

Analog Configuration, Switch 2 OFF	DIP Switches					
Descriptions	3	4	5	6	7	8
Sample/Report Rate 16 seconds				OFF	ON	OFF
Sample/Report Rate 64 seconds				OFF	ON	ON
Sample/Report Rate 5 minutes				ON	OFF	OFF
Sample/Report Rate 15 minutes				ON	OFF	ON
Sample/Report Rate 30 minutes				ON	ON	OFF
Modbus or UCT configured (overrides DIP switches)				ON	ON	ON

Analog IN 2, Discrete 1, and Discrete 2 are not powered from switched power terminals. In this configuration, SP2 is disabled. If you need SP2, contact the factory.

* Default positions

Discrete Input Type

Select the type of discrete input sensors to use with this device: sourcing (PNP) sensors or sinking (NPN) sensors.

Modbus/User Configuration Tool (UCT) or DIP Switch Configured

In Modbus/UCT Configured mode, the device parameters are changed using the User Configuration Tool (UCT) or a Modbus command. All DIP switch positions are ignored. In DIP Switch Configured mode, use the DIP switches to configure the parameters listed in the table.

Sample and Report Rates

The sample interval, or rate, defines how often the Sure Cross device samples the input. For battery-powered applications, setting a slower rate extends the battery life.

The report rate defines how often the Node communicates the I/O status to the Gateway. Change of state reporting sets the system to report only when the value crosses the threshold setting. For FlexPower® applications, setting the report rate to a slower rate extends the battery life.


Warm-Up Time

The warm-up time defines how long the device must power up the sensor before a stable sensor reading is taken.

Terminal Blocks and Wiring

The complete control drawing is document 141513 at www.bannerengineering.com.

The GND connection can be considered the same as the housing ground when using a stainless steel antenna feedthrough (model BWA-HW-016 or BWA-HW-017). When the stainless steel antenna feedthroughs are not used, the GND connection is isolated from the metal housing.

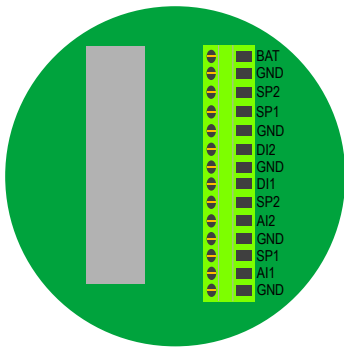

Ax+ and Ax-. Analog IN x. Analog inputs for devices requiring more than one connection, such as thermocouples or RTDs. When there is no Ax-, use Ax+ as an analog input.

DIx. Discrete IN x

GND. Ground/dc common connection


SPx. Switch Power; provides variable power sources for external devices

Control Drawings


FlexPower Node (2020) - Single Chamber Metal Housing (DX99..D)

For the DX99..D with the single battery supply.

Hazardous Location

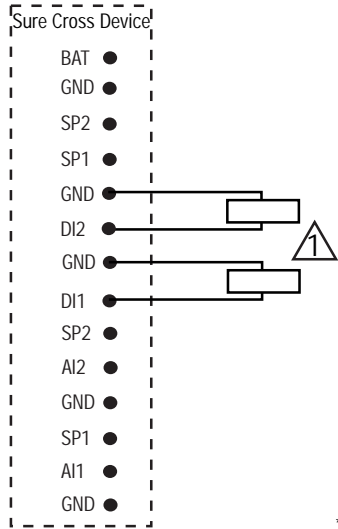


Hazardous Location

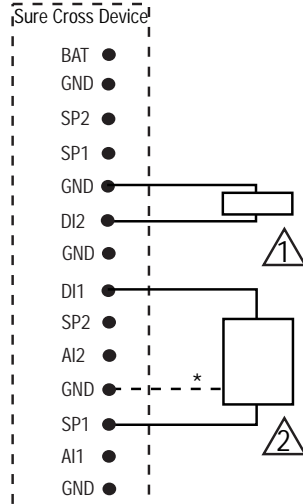


* Denotes an optional 3-wire GND connection

Hazardous Location

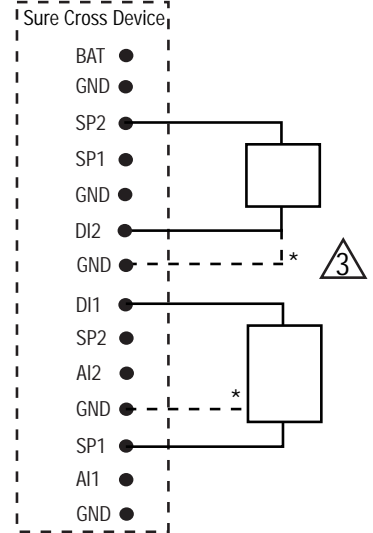


* Denotes an optional 3-wire GND connection

Hazardous Location

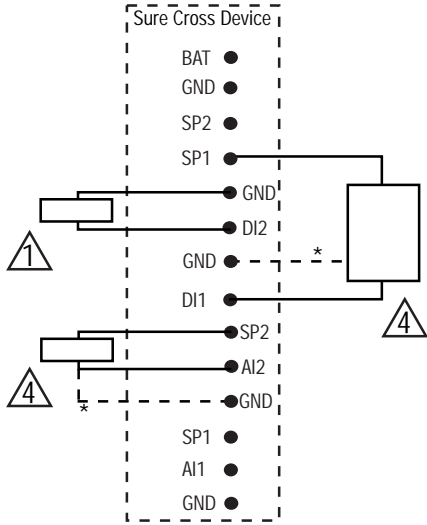


* Denotes an optional 3-wire GND connection

Hazardous Location

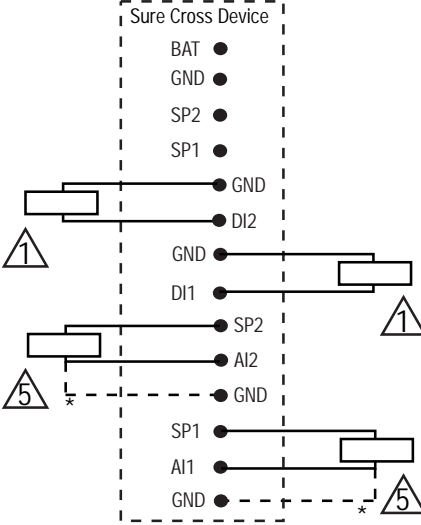


* Denotes an optional 3-wire GND connection

Hazardous Location

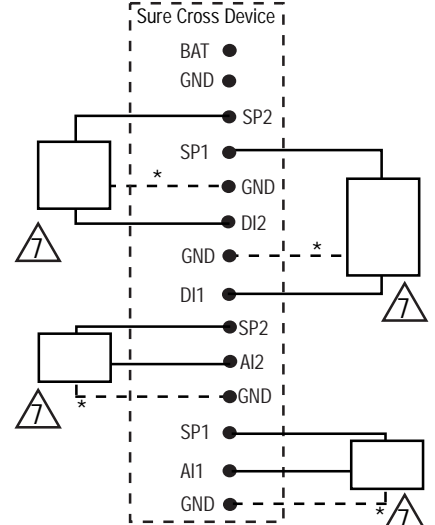


* Denotes an optional 3-wire GND connection

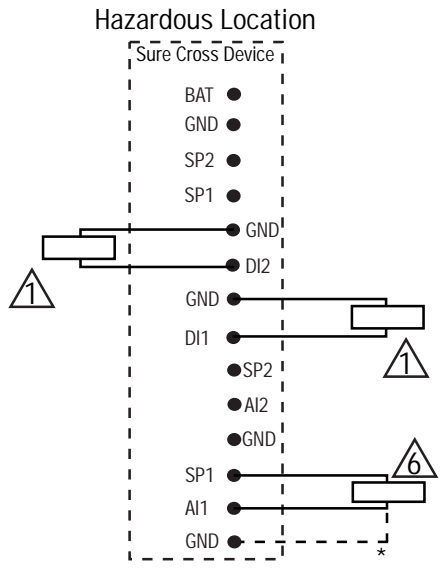


* Denotes an optional 3-wire GND connection

Powered Externally from FlexPower Node

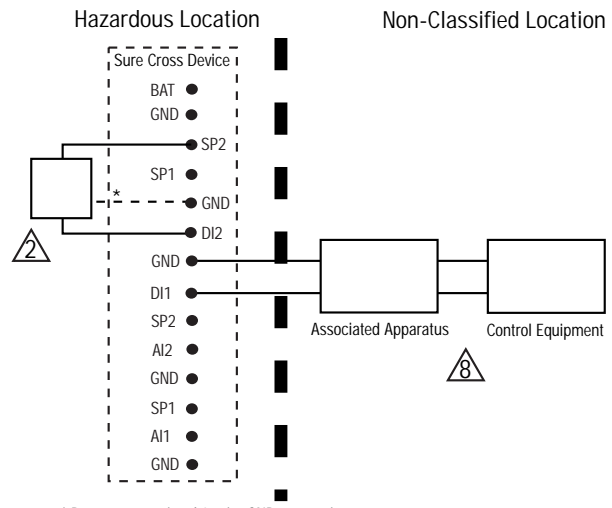


* Denotes an optional 3-wire GND connection

Powered Externally from FlexPower Node

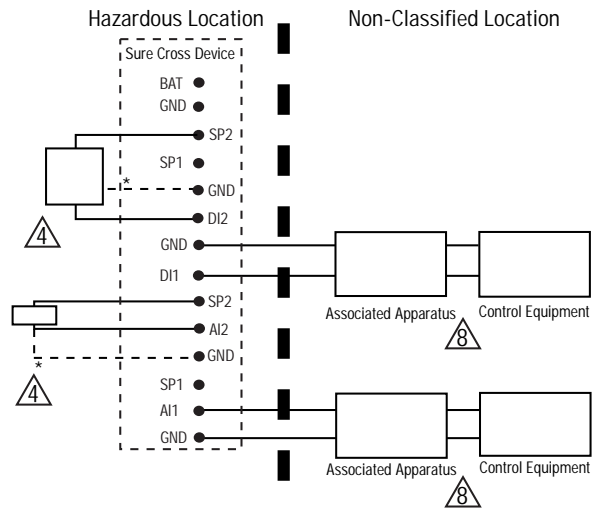

* Denotes an optional 3-wire GND connection

Powered Externally from FlexPower Node

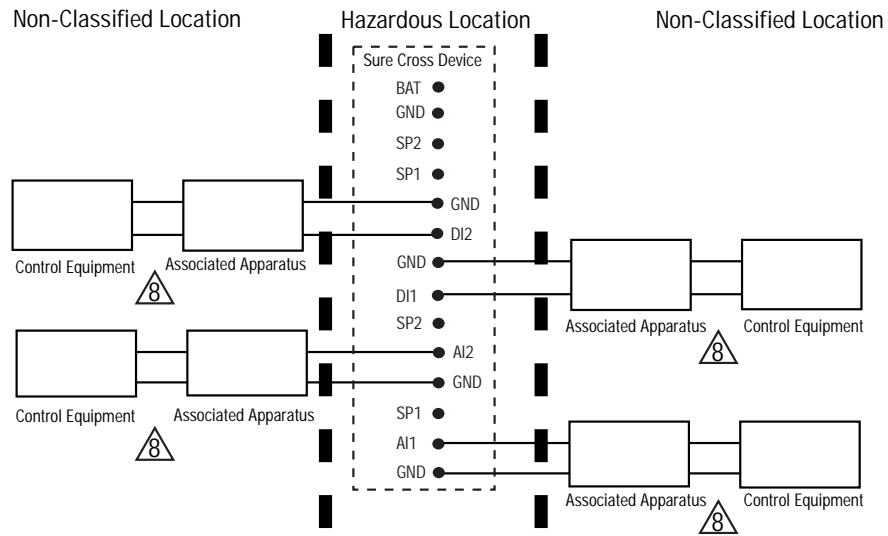

Entity Parameters - 1	
Uo/Voc	5.88 V
Io/Isc	2.02 mA
Po	2.97 mW
Co/Ca	43 µF
Lo/La	9.8 H

Entity Parameters - 2			
	10 V SP	18 V SP	20 V SP
Uo/Voc	12.6 V	21.0 V	25.2 V
Io/Isc	36.55 mA	96.38 mA	95.47 mA
Po	115.1 mW	506.0 mW	601.5 mW
Co/Ca	1105 nF	142.9 nF	61.9 nF
Lo/La	29.94 mH	4.30 mH	4.38 mH

Entity Parameters - 3			
	10 V SP	18 V SP	20 V SP
Uo/Voc	12.6 V	21.0 V	25.2 V
Io/Isc	38.57 mA	98.40 mA	97.48 mA
Po	121.5 mW	516.6 mW	614.1 mW
Co/Ca	552 nF	71.4 nF	30.9 nF
Lo/La	13.4 mH	2.06 mH	2.10 mH

Entity Parameters - 4			
	10 V SP	18 V SP	20 V SP
Uo/Voc	12.6 V	21.0 V	25.2 V
Io/Isc	36.64 mA	96.47 mA	95.56 mA
Po	115.4 mW	506.5 mW	602.0 mW
Co/Ca	552 nF	71.4 nF	30.9 nF
Lo/La	14.9 mH	2.14 mH	2.19 mH

Entity Parameters - 5			
	10 V SP	18 V SP	20 V SP
Uo/Voc	12.6 V	21.0 V	25.2 V
Io/Isc	34.71 mA	94.54 mA	93.63 mA
Po	109.3 mW	496.3 mW	589.9 mW
Co/Ca	552 nF	71.4 nF	30.9 nF
Lo/La	16.6 mH	2.23 mH	2.28 mH

Entity Parameters - 6			
	10 V SP	18 V SP	20 V SP
Uo/Voc	12.6 V	21.0 V	25.2 V
Io/Isc	34.62 mA	94.45 mA	93.54 mA
Po	109.1 mW	495.9 mW	589.3 mW
Co/Ca	1105 nF	142.9 nF	61.9 nF
Lo/La	33.3 mH	4.48 mH	4.57 mH

Entity Parameters - 7			
	10 V SP	18 V SP	20 V SP
Uo/Voc	12.6 V	21.0 V	25.2 V
Io/Isc	38.75 mA	98.58 mA	97.66 mA
Po	122.1 mW	517.5 mW	615.3 mW
Co/Ca	276 nF	35.7 nF	15.4 nF
Lo/La	6.65 mH	1.02 mH	1.04 mH

Entity Parameters - 8			
	10 V SP	18 V SP	20 V SP
Ui/Vmax	30 V	30 V	30 V
Ii/Imax	100 mA	100 mA	100 mA
Pi	3 W	3 W	3 W
Ci	0	0	0
Li	0	0	0

Metal Enclosure	
CSA C/US	Class I, Division 1, Groups A, B, C, D Class II, Division 1, Groups E, F, G Class III, Division 1 Class I, Zone 0, Group IIC
LCIE/ATEX	Group IIC, Zone 0 Dust, Zone 20

Models	
DX99N9X1S2N0M2X0D1	DX99N9X1S2N0V2X0D2
DX99N2X1S2N0M2X0D1	DX99N2X1S2N0V2X0D2
DX99N9X1S2N0M2X0D2	DX99N9X1S2N0F1X0D1
DX99N2X1S2N0M2X0D2	DX99N2X1S2N0F1X0D1
DX99N9X1S2N0V2X0D1	DX99N9X1S2N0E2X0D1
DX99N2X1S2N0V2X0D1	DX99N2X1S2N0E2X0D1

LED Behavior for the Nodes

Nodes do not sample inputs until they are communicating with the Gateway. The radios and antennas must be a minimum distance apart to function properly. Recommended minimum distances are:

- 2.4 GHz 65 mW radios: 1 foot
- 900 MHz 150 mW and 250 mW radios: 6 feet
- 900 MHz 1 Watt radios: 15 feet

LED 1	LED 2	Node Status
Flashing green		Radio Link Ok
Flashing red	Flashing red	Device Error
	Flashing red, 1 per 3 sec	No Radio Link

Modbus Register Table

I/O	Modbus Holding Register		I/O Type	I/O Range		Holding Register Representation		Terminal Block Labels
	Gateway	Any Node		Min.	Max.	Min. (Dec.)	Max. (Dec.)	
1	1	1 + (Node# × 16)	Discrete IN 1	0	1	0	1	D11
2	2	2 + (Node# × 16)	Discrete IN 2	0	1	0	1	D12
3	3	3 + (Node# × 16)	Analog IN 1 (mA or V)	0.0	20.0 or 10.0	0	65535	A1+
4	4	4 + (Node# × 16)	Analog IN 2 (mA or V)	0.0	20.0 or 10.0	0	65535	A2+
		...						
7	7	7 + (Node# × 16)	Reserved					
8	8	8 + (Node# × 16)	Device Message					
		...						
15	15	15 + (Node# × 16)	Control Message					

I/O	Modbus Holding Register		I/O Type	I/O Range		Holding Register Representation		Terminal Block Labels
	Gateway	Any Node		Min.	Max.	Min. (Dec.)	Max. (Dec.)	
16	16	16 + (Node# × 16)	Reserved					

Storage and Sleep Modes

Storage Mode (applies to battery-powered models only)—While in storage mode, the radio does not operate. All Sure Cross® radios powered from an integrated battery ship from the factory in storage mode to conserve the battery. To wake the device, press and hold button 1 for 5 seconds. To put any *FlexPower*® or integrated battery Sure Cross radio into storage mode, press and hold button 1 for 5 seconds. The radio is in storage mode when the LEDs stop blinking, but in some models, the LCD remains on for an additional minute after the radio enters storage mode. After a device has entered storage mode, you must wait 1 minute before waking it.

Sleep Mode (applies to both battery and 10–30 V dc powered models)—During normal operation, the Sure Cross radio devices enter sleep mode after 15 minutes of operation. The radio continues to function, but the LCD goes blank. To wake the device, press any button.

Replacing the Battery (DX99...D Models)

To replace the lithium "D" cell battery in the metal housings, follow these steps.

1. Unscrew the lid of the metal enclosure.
2. Lift the radio out of the metal enclosure and pull the spacer frame off the back side of the radio.
3. Disconnect the radio by unplugging the ribbon cable from the radio board and set aside the radio and spacer frame.
4. Remove the discharged battery.
5. Replace with a new battery. Only use a 3.6 V lithium battery from Xeno, model number XL-205F.
6. Verify the battery's positive and negative terminals align to the positive and negative terminals of the battery holder mounted within the case. Caution: There is a risk of explosion if the battery is replaced incorrectly.
7. Wait two minutes.
8. Insert the ribbon cable through the center of the spacer frame, then plug the ribbon cable back into the radio board.
9. Insert the radio back onto the spacer frame pins. Push the radio and spacer frame assembly back into the enclosure until it is seated.
10. Screw on the lid and tighten.
11. After replacing the battery, allow up to 60 seconds for the device to power up.
12. Properly dispose of your used battery according to local regulations by taking it to a hazardous waste collection site, an e-waste disposal center, or other facility qualified to accept lithium batteries.



As with all batteries, these are a fire, explosion, and severe burn hazard. Do not burn or expose them to high temperatures. Do not recharge, crush, disassemble, or expose the contents to water.

The battery may be replaced in explosive gas atmospheres. Replacement battery model number: BWA-BATT-001. For pricing and availability, contact Banner Engineering.



WARNING:

- Do not replace battery when an explosive dust atmosphere may be present.
- The replacement battery **MUST** be a Banner approved battery, model number BWA-BATT-001. Use of a different battery will **VOID** the intrinsic safety rating of this device and may result in an explosion!
- When replacing the battery, the negative end of the battery holder is the side by the large capacitors. This side is marked with a minus (–) sign.
- Do not attempt to recharge the battery. These batteries are not rechargeable. Recharging may cause serious injury to personnel or damage the equipment. Replace only with factory recommended batteries.

Assembly

Follow these steps to assemble your DX99...D Metal Housing with Dome Antenna model. The DX99 unit ships as a complete unit, including the radio core, housing, and integrated battery. One terminal header is also included in the shipment. To unpack and wire the unit:

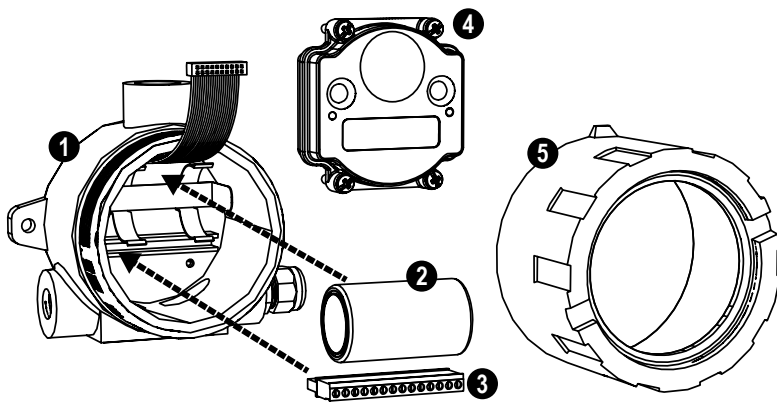


Figure 1. Installing the Battery and Terminal Header

Step 1. Open the end with the glass window (5) and gently lift the radio core unit (4) and the space frame it sits on. The core unit connects to the space frame using two pins and the radio core is connected to the wiring board with a ribbon cable.

Step 2. Disconnect the ribbon cable from the radio.

Step 3. Insert the battery (2) into the battery holder, verifying the position and negative poles of the battery are positioned according to the markings on the board.

Step 4. Install the terminal header (3) onto the terminal pins.

Step 5. Insert your sensor wires through a cable gland and one of the two 1/2-inch NPT ports. Wire the sensor wires into the terminal header (3) according to the control drawings, p/n 141513. Use a cable gland certified for your region and environment. For a waterproof seal, refer to the waterproofing instructions in Banner document 132607.

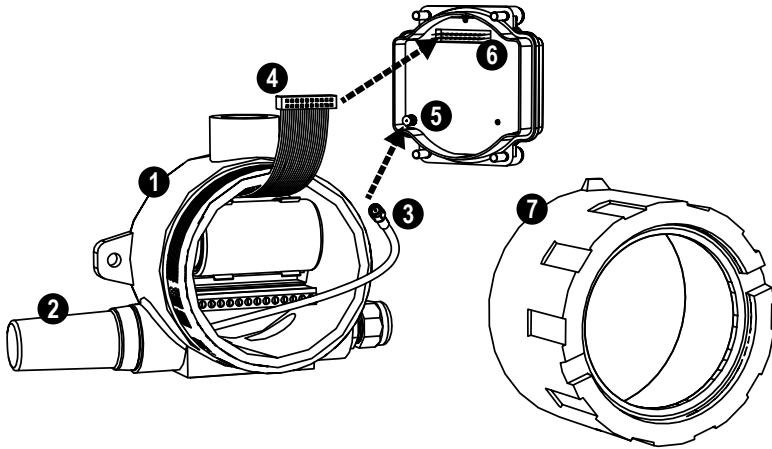


Figure 2. Installing and Connecting the Antenna

Step 6. To install the dome antenna (2), thread the antenna cable through the 1/2-inch NPT port and screw the dome antenna to the 1/2-inch NPT port.

Step 7. Connect the antenna cable (3) to the radio unit's antenna connector (5). (You may need to separate the space frame from the radio to do this.)

Step 8. Gently install the ribbon cable (4) into the ribbon cable pins (6), verifying the ribbon cable is seated on both rows of pins.

Step 9. Reconnect the space frame (not shown) to the radio core unit.

Step 10. Place the radio unit into the housing and gently push down until the spacer frame pin holes rest on the edge of the metal housing.

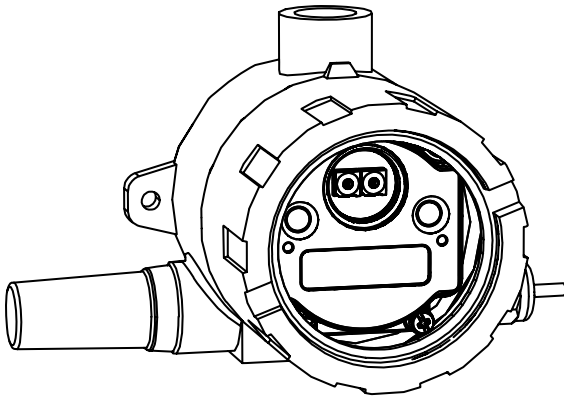


Figure 3. Final Assembly

Step 11. Close the metal cover firmly and lock closed using the set screw.

Specifications

Radio Range¹

900 MHz, 150 mW: Up to 4.8 km (3 miles)
2.4 GHz, 65 mW: Up to 3.2 km (2 miles)

Minimum Separation Distance

900 MHz, 150 mW: 2 m (6 ft)
2.4 GHz, 65 mW: 0.3 m (1 ft)

Transmit Power

900 MHz, 150 mW: 21 dBm (150 mW) conducted
2.4 GHz, 65 mW: 18 dBm (65 mW) conducted, less than or equal to 20 dBm (100 mW) EIRP

900 MHz Compliance

FCC ID TGUDX80 - This device complies with FCC Part 15, Subpart C, 15.247
IC: 7044A-DX8009

2.4 GHz Compliance

FCC ID UE300DX80-2400 - This device complies with FCC Part 15, Subpart C, 15.247
ETSI EN 300 328 V1.8.1 (2012-06)
IC: 7044A-DX8024

Discrete I Inputs

Rating: See control drawing
Sample/Report Rates: DIP switch configurable

Discrete Input ON Condition

PNP: Greater than 8 V
NPN: Less than 0.7 V

Discrete Input OFF Condition (DX99 Models)

PNP: Less than 4.5 V
NPN: Greater than 2.2 V or open

Environmental Rating

IEC IP68 ²

Operating Conditions³

-40 °C to +65 °C (-40 °F to +149 °F) (Electronics); -20 °C to +80 °C (-4 °F to +176 °F) (LCD)
95% maximum relative humidity (non-condensing)
Radiated Immunity: 10 V/m (EN 61000-4-3)

Shock and Vibration

IEC 68-2-6 and IEC 68-2-27
Shock: 30g, 11 millisecond half sine wave, 18 shocks
Vibration: 0.5 mm p-p, 10 to 60 Hz

Supply Voltage

3.6 V dc low power option from an internal battery

Power Consumption

Consumption: Application dependant

Housing

Glass and cast aluminium w/ chromating and chemically resistant paint (outside only)

Antenna Connection

Ext. Reverse Polarity SMA, 50 Ohms
Max Tightening Torque: 0.45 N-m (4 lbf-in)

Spread Spectrum Technology

FHSS (Frequency Hopping Spread Spectrum)

I Interface

Indicators: Two bi-color LEDs
Buttons: Two
Display: Six character LCD

Wiring Access

Two 1/2-inch NPT ports, one 3/4-inch NPT port (internal threads)

Link Timeout

Gateway: Configurable via User Configuration Tool (UCT) software
Node: Defined by Gateway

Analog Input Rating (mA Models)

Rating for 4 to 20 mA models: 24 mA
Impedance: Approximately 20 Ohms
Analog Input 1 Sample/Report Rates: DIP switch configurable
Analog Input 2 Sample/Report Rates: 1 second / 16 seconds
Accuracy: 0.1% of full scale +0.01% per °C
Resolution: 12-bit

Analog Input Rating (V Models)

Rating for 0 to 10V models: 10 V
Impedance: Approximately 20 Ohms
Analog Input 1 Sample/Report Rates: DIP switch configurable
Analog Input 2 Sample/Report Rates: 1 second / 16 seconds
Accuracy: 0.25% of full scale +0.01% per °C
Resolution: 12-bit

Notes

To verify the analog input's impedance, use an Ohm meter to measure the resistance between the analog input terminal (AIx) and the ground (GND) terminal.

Certifications



CSA: Class I, Division 1, Groups A, B, C, D; Class II, Division 1, Groups E, F, G; Class III, Division 1 (Ex ia IIC T4 / AEx ia IIC T4)
Certificate: 2008243



LCIE/ATEX: Zone 0 (Category 1G) and 20 (Category 1D),
Temperature Class T4 (II 1 GD / Ex ia IIC T4 Ga / Ex ia IIIC T82°C Da IP68) Certificate: LCIE 08 ATEX 6098 X

Special Conditions for Safe Use imposed by Intrinsic Safety Certificate LCIE 08 ATEX 6098 X: Ambient temperature range is -40 to 70 °C. Sure Cross® DX99 FlexPower devices can only be connected to Intrinsically Safe certified equipment or simple apparatus as defined by EN 60079-11. All connected equipment must comply with the Entity Parameters (Safety Parameters) listed in the [Control Drawings](#) (p/n 141513). The device must only use a lithium battery manufactured by XENO, type XL-205F.




¹ Radio range is with the 2 dB antenna that ships with the product. High-gain antennas are available, but the range depends on the environment and line of sight. Always verify your wireless network's range by performing a Site Survey.

² Refer to the [Sure Cross® Wireless I/O Networks Instruction Manual](#) (p/n 132607) for installation and waterproofing instructions.

³ Operating the devices at the maximum operating conditions for extended periods can shorten the life of the device.

Metal Housing Dimensions

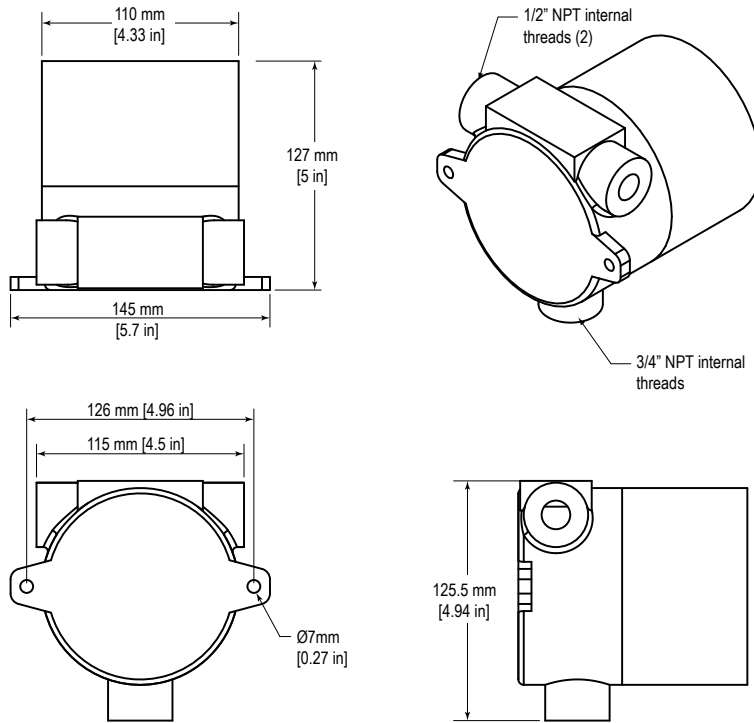




Included with Device (Metal Housing)

The following items ship with the metal housings.

- BWA-902-C (900 MHz) or BWA-202-C (2.4 GHz): Antenna, 2 dBd Omni, Rubber Swivel RP-SMA Male. (Not included with Internal antenna models)
- BWA-HW-025: Cable pack, Flexible antenna cable, terminal strip

Metal Housing Accessories

Model No.	Description	
BWA-HW-016	Antenna Feedthrough, Stainless Steel, 1/2" NPT	
BWA-HW-017	Antenna Feedthrough, Stainless Steel, 3/4" NPT	
BWA-HW-012	DX99 Antenna Extension Pack (M4-0.7 × 20 black steel pan head screw, flexible antenna cable 12" SMA male to SMA female)	
BWA-HW-037	Clear plastic retaining ring for DX99 metal housings (10 pack)	
BWA-AXFS0130	AXF™ Explosion-Proof Antenna Coupler	

Omni-Directional Dome Antennas				
Models	Frequency	Description	Connection	
BWA-902-001	900 MHz	2 dBi, 18-inch cable	1/2" SS NPT Port	
BWA-902-002		2 dBi, 18-inch cable	3/4" SS NPT Port	
BWA-202-001	2.4 GHz	2 dBi, 18-inch cable	1/2" SS NPT Port	
BWA-202-002		2 dBi, 18-inch cable	3/4" SS NPT Port	

Warnings

Install and properly ground a qualified surge suppressor when installing a remote antenna system. Remote antenna configurations installed without surge suppressors invalidate the manufacturer's warranty. Keep the ground wire as short as possible and make all ground connections to a single-point ground system to ensure no ground loops are created. No surge suppressor can absorb all lightning strikes; do not touch the Sure Cross® device or any equipment connected to the Sure Cross device during a thunderstorm.

Exporting Sure Cross® Radios. It is our intent to fully comply with all national and regional regulations regarding radio frequency emissions. Customers who want to re-export this product to a country other than that to which it was sold must ensure the device is approved in the destination country. A list of approved countries appears in the *Radio Certifications* section of the product manual. The Sure Cross wireless products were certified for use in these countries using the antenna that ships with the product. When using other antennas, verify you are not exceeding the transmit power levels allowed by local governing agencies. Consult with Banner Engineering Corp. if the destination country is not on this list.

Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change: Banner reserves the right to modify product specifications or update documentation at any time. For the most recent version of any documentation, refer to: www.bannerengineering.com. © Banner Engineering Corp. All rights reserved.

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp.