

# Programming a GatewayPro with the User Configuration Tool (UCT)

## THE USER CONFIGURATION TOOL (UCT)

The User Configuration Tool (UCT) is an easy way to link I/O points in your wireless network, view I/O register values graphically, and set system communication parameters when a host system is not part of the wireless network.

Typically, the UCT works with a standard SureCross® DX80 or Performance Gateway, but the UCT can be used with the GatewayPro when you follow these steps:

1. Remove all four jumpers that are normally used to select between RS-485 and RS-232 (shown).

Note how the jumpers are installed because you need to return the jumpers back into this position when you are finished.

2. Plug the UCT cable into the GatewayPro.
3. Launch the UCT. Follow the UCT instructions and program the GatewayPro just as you would program a Gateway.
4. When finished with the UCT, unplug the UCT cable.
5. Plug the four jumpers back into the same position you removed them from.

