

Changing the Baud Rate of a GatewayPro or DX83 Ethernet Bridge



Technical Note

Changing the Baud Rate of a GatewayPro or DX83 Ethernet Bridge

Use the Web Configurator to change the baud rate of a GatewayPro or DX83 Ethernet Bridge device.

1. Log into the Web Configurator using the device's IP address.
2. Go to System > Setup > Config File.

3. Select the BootConfig.xml file and click View. The working XML file opens.
4. Save the XML file to your computer (File > Save As).
5. Open the XML file using Notepad or any other text editor.
6. Enter the desired baud rate for the GatewayPro or DX83 Ethernet Bridge device. Any device parameter can be manually changed in the XML file using a text editor.
7. Save the updated version of the XML file.
8. Return to the System > Setup > Config File screen of the Web Configurator. Upload the new XML file to the device by clicking Upload, located near the bottom of the screen.