

Sure Cross® Wireless Q45VT-KR Vibration/ Temperature Node



Datasheet



Sure Cross® Wireless Q45 Sensors combine the best of Banner's flexible Q45 sensor family with its reliable, field-proven, Sure Cross wireless architecture to solve new classes of applications limited only by the user's imagination. Containing a variety of sensor models, a radio, and internal battery supply, this product line is truly plug and play.

The Sure Cross Vibration and Temperature Sensor works on a variety of machines to provide vibration and temperature measurements to effectively monitor and predict when maintenance of critical equipment is required.

The Wireless Q45 Vibration and Temperature Sensor Node:

- Provides high accuracy vibration and temperature measurements
- Achieves vibration accuracy of $\pm 10\%$ RMS velocity (in/sec) and temperature accuracy of $\pm 3\text{ }^\circ\text{C}$
- Houses the sensor element in a robust zinc alloy case
- Includes a red/amber LED that provides local visual indication of a change in machine conditions, similar to a "check engine" light

Available Models

- **DX80N2Q45VT-KR** - Must be paired with QM42VT1 Vibration and Temperature Sensor (sold separately)



WARNING:

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

General Operation

For the first 15 minutes after power up, the Node samples the sensor every two seconds (fast sample mode). After 15 minutes, the Node defaults to 5 minute sample intervals. **Activate fast sample mode by single clicking the button (the amber LED is solid).**

- The amber LED on the front of the Q45 Node flashes when the vibration threshold limit set in I/O 1 is met. To minimize false vibration triggering, two consecutive samples must be above the threshold before the output condition is satisfied.
- The red LED on the front of the Q45 Node flashes when the temperature threshold limit set in I/O 4 is met. Only one reading above the established threshold is required to trigger this alert.

Set the vibration thresholds using the DIP switches or using the UCT to define the Threshold parameter. The DIP switch vibration thresholds were determined using the guidance of Vibration Severity per ISO 10816.

The default setting for the temperature threshold is 80 °C. Change the temperature threshold using the User Configuration Tool (UCT) software and defining the Threshold parameter.

- Class I: Small (up to 15 kW) machines and subassemblies of larger machines.
- Class II: Medium size (15 kW to 75 kW) machines without special foundations, or machines up to 300 kW rigidly mounted on special foundations.
- Class III: Large rotating machines rigidly mounted on foundations which are stiff in the direction of vibration measurement.
- Class IV: Large rotating machines mounted on foundations which are flexible in the direction of vibration measurement.

ISO 10816 provides guidance for evaluating vibration velocity severity motors, pumps, fans, compressors, gear boxes, blowers, dryers, presses, and other machines that operate in the 10 to 1000 Hz frequency range.

| | Machine | | Class I | Class II | Class III | Class IV |
|-------------------------|---------|------|----------------|-----------------|------------------------|-----------------------|
| | in/s | mm/s | Small Machines | Medium Machines | Large Rigid Foundation | Large Soft Foundation |
| Vibration Velocity Vrms | 0.01 | 0.28 | | | | |
| | 0.02 | 0.45 | | | | |
| | 0.03 | 0.71 | | good | | |
| | 0.04 | 1.12 | | | | |
| | 0.07 | 1.80 | | | | |
| | 0.11 | 2.80 | | satisfactory | | |
| | 0.18 | 4.50 | | | | |
| | 0.28 | 7.10 | | unsatisfactory | | |
| | 0.44 | 11.2 | | | | |
| | 0.70 | 18.0 | | | | |
| | 1.10 | 28.0 | | unacceptable | | |
| | 1.77 | 45.9 | | | | |


Figure 1. Vibration Severity per ISO 10816



Storage Mode

While in **storage mode**, the Q45's radio does not operate. The Q45 ships from the factory in storage mode to conserve the battery. To wake the device, press and hold the binding button (inside the housing on the radio board) for five seconds. To put any Q45 into storage mode, press and hold the binding button for five seconds. The Q45 is in storage mode when the LEDs stop blinking.

Button, LEDs, and DIP Switches

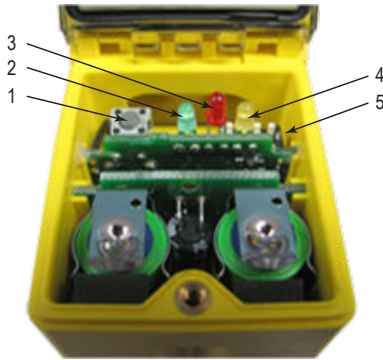

- 1 Button
- 2 Green LED (flashing) indicates a good radio link with the Gateway.
- 3 Red LED (flashing) indicates a radio link error with the Gateway.
- 4 Amber LED (flashing) indicates fast sample mode.
- 5 DIP Switches

DIP Switch Settings

After making any changes to any DIP switch position, reboot the Wireless Q45 Sensor by triple-clicking the button, waiting a second, then double-clicking the button. You may also reboot the device by removing the battery pack, then re-installing it. As shown in the image above, the DIP switches are in the OFF position. To turn a DIP switch on, push the switch toward the battery pack. DIP switches one through four are numbered from left to right.

| Description | DIP Switches | | | |
|--|--------------|-----|-----|-----|
| | 1 | 2 | 3 | 4 |
| Vibration Alarm at 0.15 in/sec (default setting) | ON | OFF | OFF | OFF |
| Vibration Alarm at 0.25 in/sec | ON | OFF | OFF | ON |
| Vibration Alarm at 0.35 in/sec | ON | OFF | ON | OFF |
| Vibration Alarm at 0.55 in/sec | ON | OFF | ON | ON |
| Local Light Disabled (conserves battery) | OFF | | | |
| UCT Configurable | | ON | ON | OFF |

Bind to the Gateway and Assign the Node Address

Before beginning the binding procedure, apply power to all the devices. Separate the devices by two meters when running binding procedure. Put only one Gateway into binding at a time to prevent binding to the wrong Gateway.


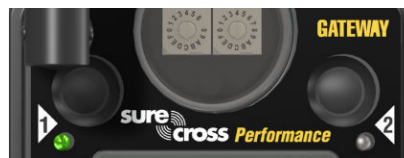


Figure 2. Buttons on a housed Gateway

1. Enter binding mode on the Gateway.
 - For housed DX80 Gateways, triple-click button 2 on the Gateway. Both LEDs flash red.
 - For board-level DX80 Gateways, triple-click the binding button on the Gateway. The green and red LED flashes.
2. Assign the Q45 a Node address using the Gateway's rotary dials. Use the left rotary dial for the left digit and the right rotary dial for the right digit. For example, to assign your Q45 to Node 10, set the Gateway's left dial to 1 and the right dial to 0. Valid Node addresses are 01 through 47.

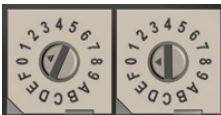

3. Loosen the clamp plate on the top of the Q45 and lift the cover.
4. Enter binding mode on the Q45 by triple-clicking the Q45's binding button. The red and green LEDs flash alternately and the sensor searches for a Gateway in binding mode. After the Q45 is bound, the LEDs stay solid momentarily, then they flash together four times. The Q45 exits binding mode.
5. Label the sensor with the Q45's Node address number for future reference.
6. Repeat steps 2 through 5 for as many Q45 as are needed for your network.

7. After binding all Q45, exit binding mode on the Gateway.
 - For housed DX80 Gateways, double-click button 2 on the Gateway.
 - For board-level DX80 Gateways, double-click the binding button on the Gateway.

For Gateways with single-line LCDs, after binding your Q45 to the Gateway, make note of the binding code displayed under the Gateway's *DVCFG menu, XADR submenu on the LCD. Knowing the binding code prevents having to re-bind all Q45s if your Gateway is ever replaced.

Modbus Register Table


The temperature = (Holding register value) ÷ 20.

| I/O # | Modbus Holding Register | | I/O Type * | I/O Range | | Holding Register Representation | |
|-------|-------------------------|-------------------|---|-----------|--------|---------------------------------|-------|
| | Gateway | Any Node | | Min. | Max. | Min. | Max. |
| 1 | 1 | 1 + (Node# × 16) | Input 1: Z-Axis RMS Velocity (in/sec) | 0 | 6.5535 | 0 | 65535 |
| 2 | 2 | 2 + (Node# × 16) | Input 2: Z-Axis RMS Velocity (mm/sec) | 0 | 65.535 | 0 | 65535 |
| 3 | 3 | 3 + (Node# × 16) | Input 3: Temperature (°F) | -1638.4 | 1638.3 | -32768 | 32767 |
| 4 | 4 | 4 + (Node# × 16) | Input 4: Temperature (°C) | -1638.4 | 1638.3 | -32768 | 32767 |
| 5 | 5 | 5 + (Node# × 16) | Input 5: X-Axis RMS Velocity (in/sec) | 0 | 6.5535 | 0 | 65535 |
| 6 | 6 | 6 + (Node# × 16) | Input 6: X-Axis RMS Velocity (mm/sec) | 0 | 65.535 | 0 | 65535 |
| 7 | 7 | 7 + (Node# × 16) | Reserved | | | | |
| 8 | 8 | 8 + (Node# × 16) | Device Message | | | | |
| 9 | 9 | 9 + (Node# × 16) | Discrete OUT 1: Red Light ¹ | 0 | 1 | 0 | 1 |
| 10 | 10 | 10 + (Node# × 16) | Discrete OUT 2: Yellow Light ¹ | 0 | 1 | 0 | 1 |
| 11 | 11 | 11 + (Node# × 16) | Discrete OUT 3: Green Light ¹ | 0 | 1 | 0 | 1 |
| 12 | 12 | 12 + (Node# × 16) | Discrete OUT 4: Blue Light ¹ | 0 | 1 | 0 | 1 |
| | | ... | | | | | |
| 15 | 15 | 15 + (Node# × 16) | Control Message | | | | |
| 16 | 16 | 16 + (Node# × 16) | Reserved | | | | |

* These are the default data types that output from the QM42VT1 serial sensor, corresponding to inputs 1 through 6 of the Q45 Node. If necessary, configure the QM42VT1 output data types using the Sensor Configuration Tool and adapter cable BWA-USB1WIRE-001 (datasheet [170020](#)). Refer to the QM42VT1 datasheet (p/n [186209](#)) for optional output data types with their corresponding I/O ranges and holding register representations.

Replace or Install the Batteries

To replace the lithium "AA" cell battery, follow these steps. As with all batteries, these are a fire, explosion, and severe burn hazard. Do not burn or expose them to high temperatures. Do not recharge, crush, disassemble, or expose the contents to water. Properly dispose of used batteries according to local regulations by taking it to a hazardous waste collection site, an e-waste disposal center, or other facility qualified to accept lithium batteries.

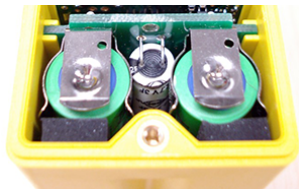

1. Lift the plastic cover.
2. Slide the board containing the batteries out of the Q45 housing.
3. Remove the discharged batteries and replace with new batteries. Use two 3.6 V AA lithium batteries, such as Xeno's XL-60F or equivalent.
4. Verify the battery's positive and negative terminals align to the positive and negative terminals of the battery holder mounted within the case. Caution: There is a risk of explosion if the battery is replaced incorrectly.
5. Slide the board containing the new batteries back into the Q45 housing.

The replacement battery model number is BWA-BATT-006. For pricing and availability, contact Banner Engineering.

Specifications

Radio Range

2.4 GHz, 65 mW (Internal antenna): Up to 1000 m (3280 ft) with line of sight²

Minimum Separation Distance

2.4 GHz, 65 mW: 0.3 m (1 ft)

Transmit Power

2.4 GHz: 65 mW

Default Sensing Interval

5 minutes

Indicators

Red and green LEDs (radio function)

Connection

One 5-pin threaded M12/Euro-style female quick disconnect

Construction

Molded reinforced thermoplastic polyester housing, oring-sealed transparent Lexan® cover, molded acrylic lenses, and stainless steel hardware. Designed to withstand 1200 psi washdown.

2.4 GHz Compliance for Korean Radio Models

KCC-CRM-BE2-DX

Spread Spectrum Technology

FHSS (Frequency Hopping Spread Spectrum)

Typical Battery Life

Up to 3 years, typical
Battery life is reduced to 1.5 years when the sample/report rate is increased to 64 seconds

Environmental Rating

NEMA 6P, IEC IP67

Operating Conditions

-40 °C to +70 °C (-40 °F to +158 °F); 90% at +50 °C maximum relative humidity (non-condensing)


¹ Not available when the vibration/temperature sensor is used with the P6 Node.

² Range depends on the environment and decreases significantly without line of sight. Always verify your wireless network's range by performing a Site Survey.

Battery Life for a Q45VT/Q45U Node with 1-Wire Serial Sensor

This is the battery life curve for the following models:

- Q45VT or Q45U 1-Wire Serial Interface Node connected to a 1-wire serial sensor (such as a VT1 Vibration/Temperature sensor)
- Q45VTP Node

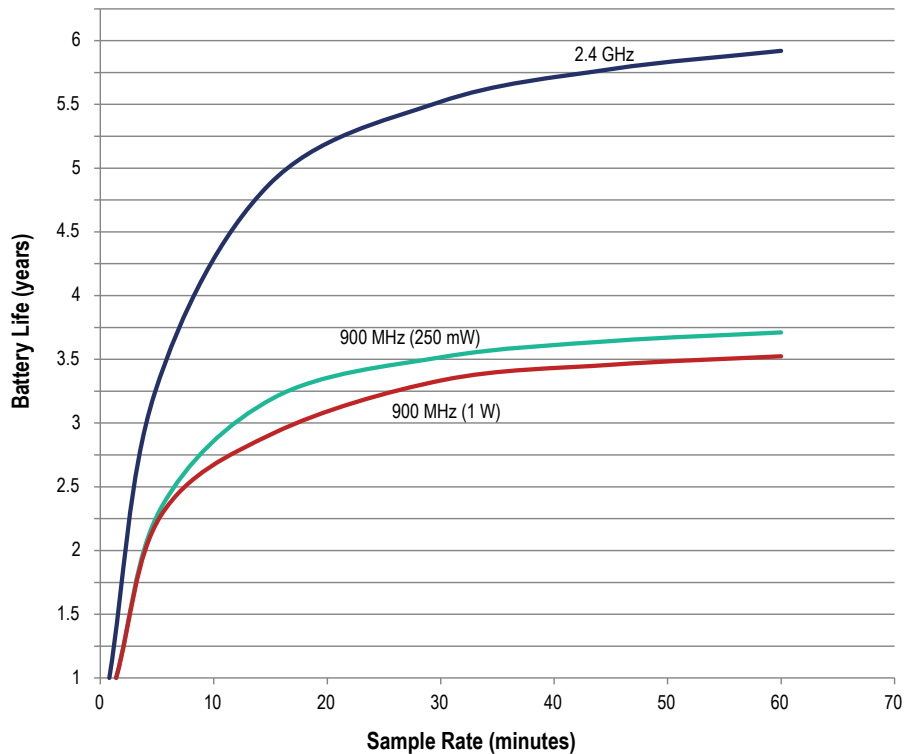

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

Exporting Sure Cross® Radios

Exporting Sure Cross® Radios. It is our intent to fully comply with all national and regional regulations regarding radio frequency emissions. **Customers who want to re-export this product to a country other than that to which it was sold must ensure the device is approved in the destination country.** A list of approved countries appears in the *Radio Certifications* section of the product manual. The Sure Cross wireless products were certified for use in these countries using the antenna that ships with the product. When using other antennas, verify you are not exceeding the transmit power levels allowed by local governing agencies. Consult with Banner Engineering Corp. if the destination country is not on this list.