

# D11 Expert™ Series: Visible Green, Blue or White LED Light Source



## Datasheet

Low-cost TEACH-mode sensors for use with plastic fiber optics



- Visible green, blue or white LED light source for use in color mark sensing and other low-contrast sensing applications
- Low-cost, 10 V dc to 30 V dc, self-contained sensors for use with all Banner plastic fiber optics
- Compact 11 mm-wide housing designed for DIN rail mounting; also mounts to other surfaces using the supplied mounting bracket
- Easy push-button TEACH-mode programming automatically adjusts sensitivity to optimal setting
- Designed for high performance, even in low-contrast sensing applications
- Fast, 200 microsecond (0.2 millisecond) output response; a 40 millisecond output pulse stretcher also may be programmed
- Models available with NPN (sinking) or PNP (sourcing) output
- Output may be programmed for either light operate (LO) or dark operate (DO)
- Separate input allows remote programming by an external device, such as a switch or a process controller
- LED status indications for power ON, output state, received signal strength, and sensing contrast
- Choose models with integral 2 m (6.5 ft) cable or pico-style quick disconnect (QD) connector; 9 m (30 ft) cables are also available



### WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel **protection**. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

## Models

Visible green, 525 nm			
Models	Cable <sup>1</sup>	Supply Voltage	Output Type
D11EN6FPG	2 m (6.5 ft)	10 V dc to 30 V dc	NPN (sinking)
D11EN6FPGQ	4-pin Pico QD		
D11EP6FPG	2 m (6.5 ft)		PNP (sourcing)
D11EP6FPGQ	4-pin Pico QD		
Visible blue, 470 nm			
Models	Cable <sup>1</sup>	Supply Voltage	Output Type
D11EN6FPB	2 m (6.5 ft)	10 V dc to 30 V dc	NPN (sinking)
D11EN6FPBQ	4-pin Pico QD		
D11EP6FPB	2 m (6.5 ft)		PNP (sourcing)
D11EP6FPBQ	4-pin Pico QD		
Visible white, 450 nm to 650 nm			
Models	Cable <sup>1</sup>	Supply Voltage	Output Type
D11EN6FPW	2 m (6.5 ft)	10 V dc to 30 V dc	NPN (sinking)
D11EN6FPWQ	4-pin Pico QD		
D11EP6FPW	2 m (6.5 ft)		PNP (sourcing)
D11EP6FPWQ	4-pin Pico QD		

<sup>1</sup> To order the 9 m (30 ft) PVC cable model, add the suffix "W/30" to the cabled model number. For example, D11EN6FPG W/30. Models with a quick disconnect require a mating cordset.




### Maximum Range

Range varies by sensing mode and fiber optics used:

- PIT46U fibers, opposed mode: 50 mm (2.0 in)<sup>2</sup>
- PIT66U fibers, opposed mode: 80 mm (3.1 in)
- PBT46U fiber, diffuse mode: 17 mm (0.7 in)
- PBT66U fiber, diffuse mode: 25 mm (1.0 in)


## Installation

Mount the D11 on a DIN rail or the included bracket.

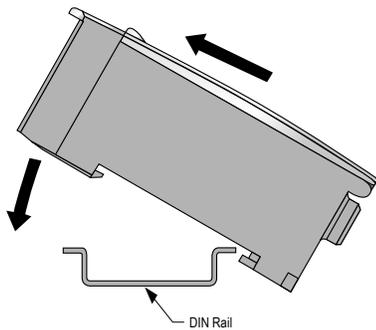

### Installing Plastic Fibers

1. Cut the fiber ends according to the instructions included with the fibers.
2. Slide the fiber gripper up (open).
3. If you are using 0.254 mm or 0.508 mm (0.010 inch or 0.020 inch) diameter fibers: Insert the adaptor into the ports as far as it will go.

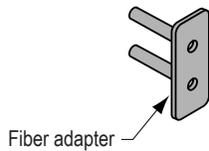

4. For all fiber diameters: Insert the prepared plastic fiber sensor ends gently into the ports as far as they will go.
5. Slide the fiber gripper back down to lock it.

## Wiring Diagrams

Sensors with NPN (Sinking) Outputs

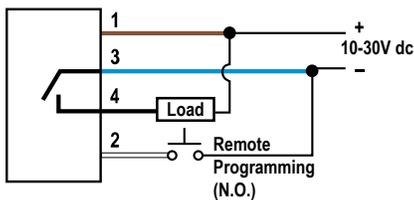


Figure 1. Cabled Hookup

Sensors with PNP (Sourcing) Outputs

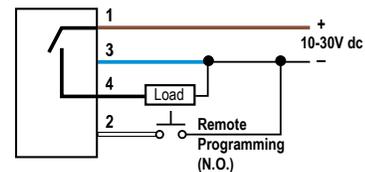



Figure 2. Cabled Hookup

Quick disconnect (QD) wiring diagrams are functionally identical.

<sup>2</sup> Opposed mode range may be extended using optional lenses (see [www.bannerengineering.com](http://www.bannerengineering.com) for available lenses)

## Run Mode

Run mode is the normal operation of the D11 Expert series. The LED indicators operate in Run mode, as follows:

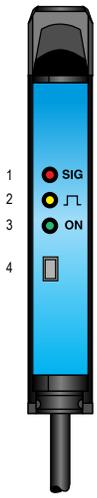	Indicator	LED Color	Function
	1	Signal Strength (SIG)	Red
	2	Output	Amber
	3	Power ON	Green
	4	Button	n/a

The Signal Strength indicator is Banner's exclusive AID™ (Alignment Indicating Device<sup>®</sup>). This feature simplifies accurate alignment during TEACH mode and provides a means of signaling when maintenance is needed during Run mode. When the pulse rate is slow, clean the fiber sensing ends and check the alignment.

### Maximum **Sensitivity/Factory** Defaults

The sensors are factory-programmed for maximum sensitivity. This default setting may be easily recalled by holding the push button for two or more seconds to enter TEACH mode, and then clicking the push button four times in a row.

The default program also is set for light operate output and pulse stretcher OFF, push button enabled.

Perform the procedures in this document to program your own settings.

### TEACH Mode

Sensitivity is automatically set (and optimized) by teaching the sensor the light and dark conditions. This is accomplished in TEACH mode. TEACH mode requires that each of the two sensing conditions be presented to the fiber optics; when the push button is clicked, the sensor samples the sensing condition and registers it into memory. After the second sensing condition is registered, the D11 Expert automatically sets the sensitivity to the optimum value for the application, and then returns to Run mode.



Note: There is a period of a few seconds at the end of TEACH mode, before Run mode begins.

### Light or Dark Operate **Selection**

The two sensing conditions may be presented in either order: the light condition first, and then the dark condition, or vice versa. The condition presented first is the condition for which the output energizes. In other words, the output will be light operated if the light condition is TEACH condition #1, or the output will be dark operated if the dark condition is TEACH condition #1.

## Contrast Indication

When the push button is clicked to teach the second sensing condition, the three LED indicators flash simultaneously to indicate relative sensing contrast. Contrast is the difference in light level between the two sensing conditions.

Higher contrast allows higher sensitivity level, and resulting higher excess gain. A high contrast level is directly related to sensing reliability, and is more forgiving of subtle changes in sensing conditions. The contrast display at the end of TEACH mode is shown, at right.



Note: If the relative contrast level is unacceptable (1 flash), the program returns to TEACH condition #1.

Table 1: Contrast Indication

Number of flashes at end of TEACH mode	Relative Contrast
1	Unacceptable
2	Low
3	Moderate
4	High

## TEACH Mode Programming

- | Action   | Result  |
|--|---|
| Press and hold the button for more than 2 seconds. | Green LED: Flashes at 1 Hz<br>Amber LED: Off<br>Red LED: Pulses to indicate relative received signal strength |
- TEACH Condition #1 (output ON state).
 

Action	Result
a. Present the first sensing condition to the sensor. b. Single-click the button. <sup>4</sup> This condition corresponds to the sensor output ON state.	Green: Flashes at 2 Hz Amber: OFF Red: Pulses to indicate relative received signal strength
- TEACH Condition #2 (output OFF state).
 

Action	Result
a. Present the second sensing condition to the sensor. b. Single-click the button. This condition corresponds to the sensor output OFF state.	Green, amber, and red indicators flash simultaneously one to four times to indicate relative sensing contrast (see <a href="#">Table 1</a> on page 4) . After a few seconds, the sensor returns to RUN mode.

## Output Pulse Stretcher

A 40 millisecond pulse stretcher (OFF-delay) may be enabled for applications where a very short sensing event might be missed because of the response of the load or input connected to the sensor output. Turn the pulse stretcher ON or OFF using the following procedure.

- | Action   | Result  |
|--|---|
| Press and hold the button for more than 2 seconds. | Green LED: Flashes at 1 Hz<br>Amber LED: Off<br>Red LED: Pulses to indicate relative received signal strength |

<sup>4</sup> The sensor returns to RUN mode if the first TEACH condition is not registered within 20 seconds. TEACH mode may be cancelled before either condition #1 or #2 by pressing the push button for more than 2 seconds.

2.	<b>Action</b>	<b>Result</b>
	a. Double-click the button to display status. b. Single-click the button to toggle pulse stretcher ON or OFF.	Pulse Stretcher ON Green: Off Amber: Off Red: Solid on  Pulse Stretcher OFF Green: Off Amber: Off Red: Double-flash
3.	<b>Action</b>	<b>Result</b>
	Double-click the button to save the configuration and return to Run mode.	See <a href="#">Run Mode</a> on page 3

## Remote Programming

Connect the D11 Expert's white wire to a remote switch for three sensor programming functions:

1. Disable or enable the push button
2. TEACH mode programming of sensitivity
3. Enable or disable the 40-millisecond pulse stretcher.

Connect a remote programming switch between the white wire and dc common (see [Wiring Diagrams](#) on page 2). The switch may be either a normally open contact, or an open-collector NPN transistor with its emitter connected to dc common.

Program the sensor using a specified sequence of input pulses. The duration of each pulse is defined as:  $0.04 \text{ seconds} < T < 0.8 \text{ seconds}$ .

The required spacing between adjacent pulses in a sequence (for example, a double-pulse) is:  $0.04 < T < 0.8 \text{ seconds}$ . The timing diagrams illustrate the input requirements.

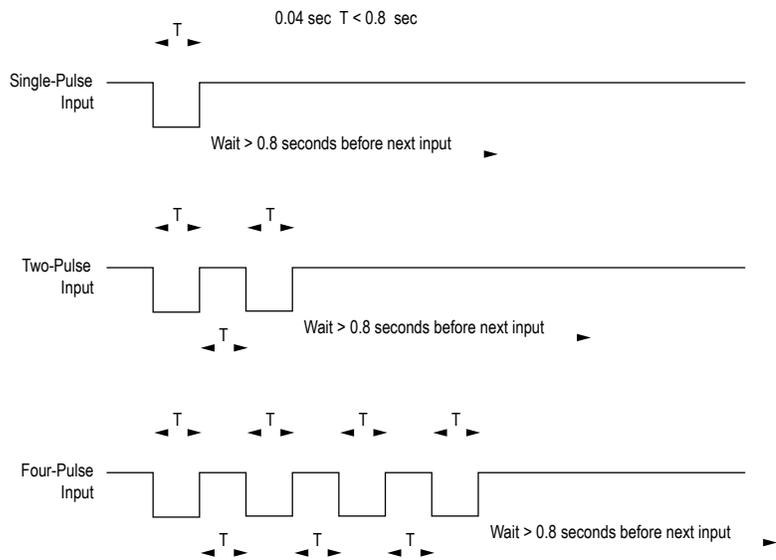


Figure 3. Timing Programs

### Disable or Enable the Push **Button**

When remote programming is used exclusively, it may be beneficial to disable the push button on the D11E to increase the security of the settings.

1. To disable the push button: Pulse the remote input four times.
2. To enable the push button at a later date: Pulse the input four times (again).



Note: The push button can be enabled and/or disabled via remote line only.

### Set **Sensitivity** Via TEACH Mode

1. Present the first (output ON) sensing condition to the sensor and pulse the remote input once.
2. Present the second (output OFF) sensing condition to the sensor and pulse the remote input once. The three LED indicators flash simultaneously one to four times to indicate relative sensing contrast. The sensor returns to RUN mode.

### Enable or Disable the 40-millisecond Pulse Stretcher

1. Pulse the remote input two times. The status of the pulse stretcher is indicated by the red LED: ON if the pulse stretcher is ON, and double-flash if the pulse stretcher is OFF.
2. Pulse the remote input once to toggle the pulse stretcher ON or OFF.
3. Pulse the remote input two times to save the setting and return to Run mode.

## Specifications

### Required Fiber **Optic** Cable

PI or PB series plastic fibers

### Sensing Beam

Visible green, 525 nm ; Visible blue, 470 nm; Visible white, 450 nm to 650 nm

### Supply Voltage and Current

10 V dc to 30 V dc (10% maximum ripple) at less than 45 mA, exclusive of load

### Supply **Protection** Circuitry

Protected against reverse polarity and transient voltages

### Output **Configuration**

One (SPST) NPN (sinking) or PNP (sourcing) open-collector transistor, depending on model  
Programmable for light or dark operate

### Output **Rating**

150 mA maximum  
Off-state leakage current: < 5 microamps at 30 V dc  
On-state saturation voltage: < 1 V at 10 mA dc; <1.5 V at 150 mA dc

### Output **Protection** Circuitry

Protected against false pulse on power-up and continuous overload or short-circuit

### Output Response Time

200 microseconds (0.2 milliseconds) ON and OFF (40 milliseconds OFF when pulse stretcher is programmed).



Note: 100 millisecond delay on power-up; output is non-conducting during this time.

### Output Timing **Functions**

ON/OFF (no delay) or fixed 40 millisecond OFF-delay pulse stretcher; selected by push button

### Repeatability

65 microseconds

### Adjustments

Push button TEACH mode sensitivity setting (see TEACH mode information); remote TEACH mode input is provided

### Indicators

Three LEDs: Green, amber, and red

Green LED lights for dc power ON and flashes when ready to register the sensing condition during TEACH mode: 1 Hz when waiting to learn first sensing condition; 2 Hz when waiting to learn second sensing condition; 4 Hz when the output is overloaded.

Amber LED lights for output ON (conducting).

Red LED is Banner's patented Alignment Indicating Device (AID™, U.S. patent #4356393) which lights whenever the sensor sees a light condition and superimposes a pulse rate which is proportional to the strength of the received light signal (the stronger the signal, the faster the pulse rate).

### **Construction**

Black ABS flame retardant housing with acrylic cover  
Stainless steel M3 x 0.5 hardware for use with ABS mounting bracket (supplied)

### Environmental **Rating**

IEC IP54; NEMA 2

### **Connections**

2 m (6.5 ft) or 9 m (30 ft) attached cable, or 4-pin Pico-style quick-disconnect fitting; cables for QD models are purchased separately

### **Operating Conditions**

Operating Temperature: -10 °C to +55 °C (+14 °F to +131 °F)  
90% at +50 °C maximum relative humidity (non-condensing)

### Required Overcurrent **Protection**



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to [www.bannerengineering.com](http://www.bannerengineering.com).

Supply Wiring (AWG)	Required Overcurrent <b>Protection</b> (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

### **Certifications**



## Dimensions

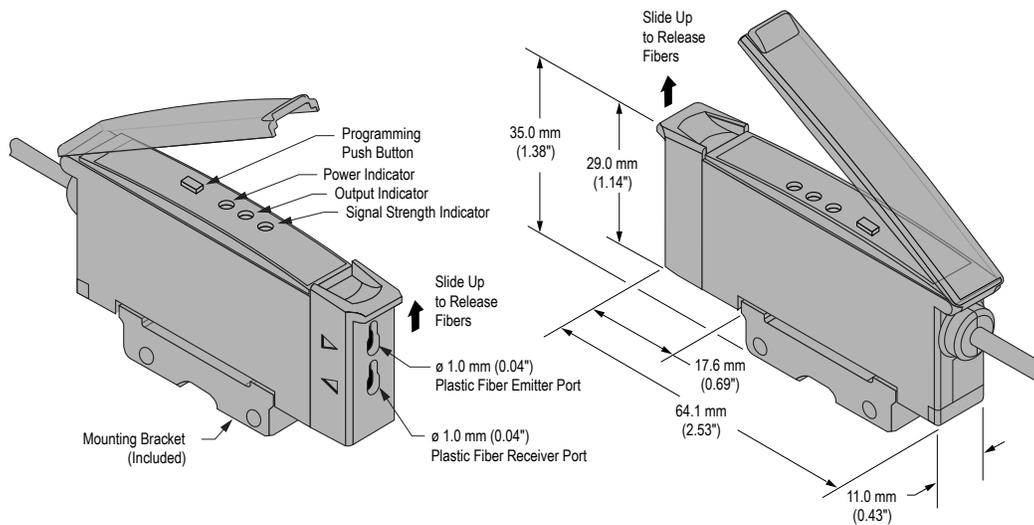


Figure 4. Cabled Models

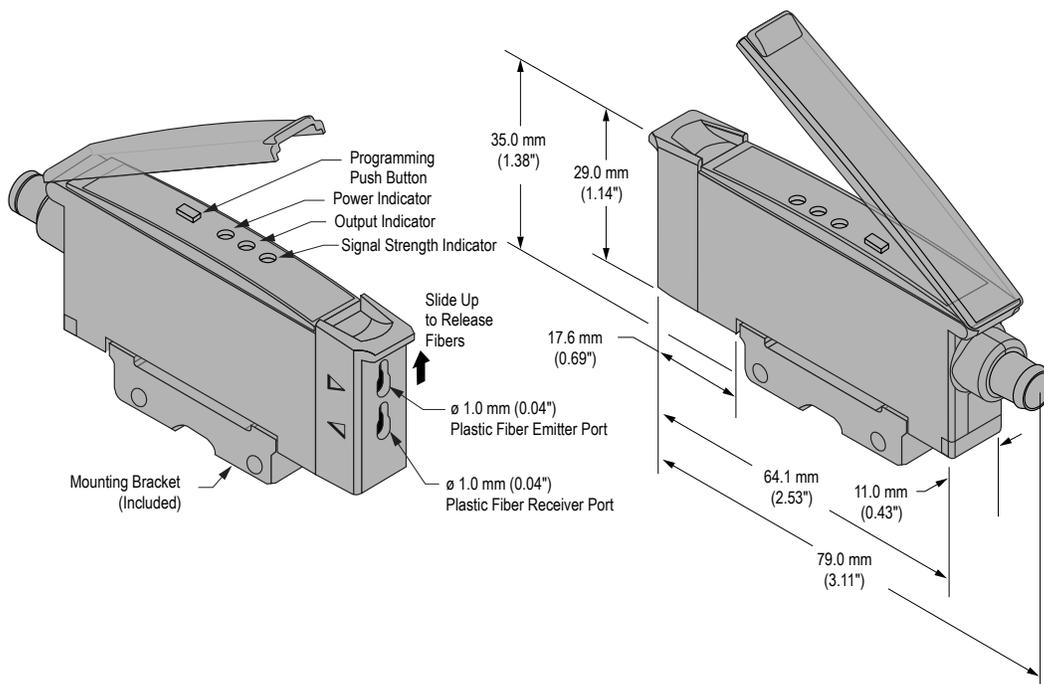


Figure 5. Quick Disconnect Models

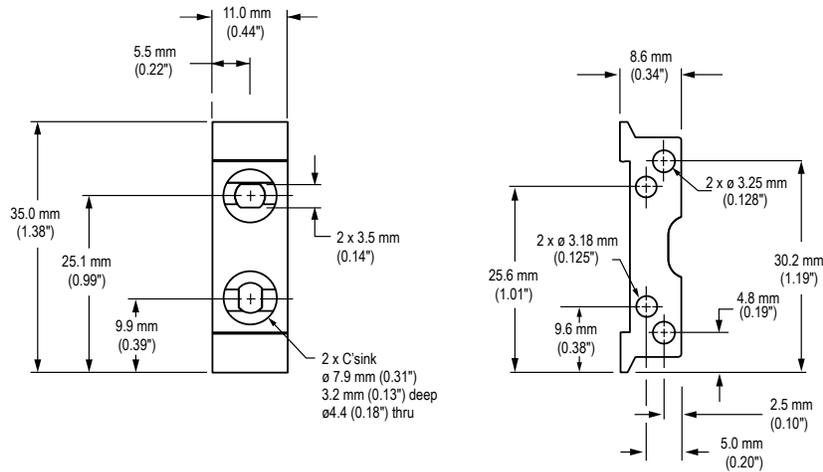


Figure 6. Mounting Bracket

## Accessories

4-Pin Snap-on M8/Pico-Style Cordsets				
Model	Length	Style	Dimensions	Pinout (Female)
PKG4-2	2 m (6.56 ft)	Straight		<p>1 = Brown 2 = White 3 = Blue 4 = Black</p>
PKW4Z-2	2 m (6.56 ft)	Right-Angle		

## Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to:

[www.bannerengineering.com](http://www.bannerengineering.com).