



Instruction Manual

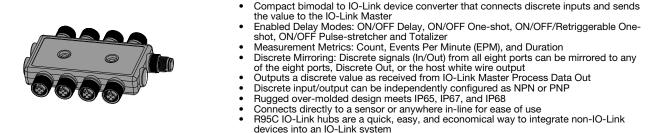

Models

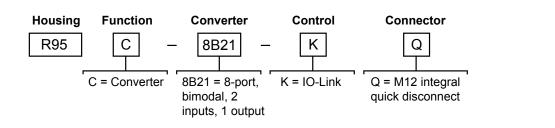

Overview

The R95C-8B21-KQ hub connects two discrete channels to each of the eight unique ports, providing access to monitoring and configuring those ports with an IO-Link master. Host mirroring is available where a selected port input/output discrete signal can be routed to Pin 2 (male) on the PLC/ Host connection.

Configuration

For more information, see P/N 227447 R95C-8B21-KQ IO-Link Data Reference Guide and P/N 227506 R95C-8B21-KQ IODD Files.

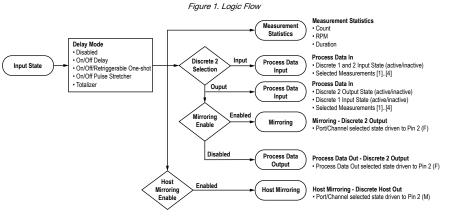


Table 1: Measurements - Female Pins

Port 1-Port 8 Pin Number: Description	t 1-Port 8 Pin Number: Description IO Metric Description	
	Count Value	Running count of the received input pulses
	Duration Value	Duration of the last input pulse in μ s with 500 μ s granularity
Pin 4 – Discrete 1	Events per Minute Value	Running count of the number of pulses received averaged over one minute Range: 1 to 37,500
	Reset Metrics	Do Not ResetReset
Pin 2 – Discrete 2	Count Value	Running count of the received input pulses
	Duration Value	Duration of the last input pulse in μ s with 500 μ s granularity



Port 1-Port 8 Pin Number: Description	IO Metric	Description	
	Events per Minute Value	Running count of the number of pulses received averaged over one minute Range: 1 to 37,500	
	Reset Metrics	Do Not ResetReset	

Table 2: Pin Configuration – Female Input

Port 1-Port 8 Pin Number: Description	Name	Values
	I/O Selection	NPN Input PNP Input
Pin 4 – Discrete 1	Discrete 1 Delay Mode	 Disabled On/Off Delay On One-shot Off One-shot On Pulse-stretcher Off Pulse-stretcher Totalizer Retriggerable On One-shot Retriggerable Off One-shot
	Discrete 1 Delay Timer 1	Discrete 1 On Delay, One-shot, Pulse-Stretcher Time, or Totalizer Count
	Discrete 1 Delay Timer 2	Discrete 1 Off Delay or Totalizer Time
	I/O Selection	NPN Input PNP Input NPN Output with Pull Up PNP Output with Pull Down NPN Output with Push/Pull PNP Output with Push/Pull
	Discrete 2 Delay Mode	 Disabled On/Off Delay On One-shot Off One-shot On Pulse-stretcher Off Pulse-stretcher Off Pulse-stretcher Totalizer Retriggerable On One-shot Retriggerable Off One-shot
Pin 2 – Discrete 2	Discrete 2 Delay Timer 1	Discrete 2 On Delay, One-shot, Pulse-stretcher Time, Or Totalizer Count
	Discrete 2 Delay Timer 2	Discrete 2 Off Delay or Totalizer Time
	Mirroring Enable	Disabled Enabled
	Mirroring Port Selection	 Port 1 Port 2 Port 3 Port 4 Port 5 Port 6 Port 7 Port 8
	Mirroring Channel Selection	 Pin 4 – Discrete 1 Pin 2 – Discrete 2
	Mirroring Inversion	Not Inverted Inverted

Table 3: Pin Configuration – Male Output

Pin Number: Description	Name	Values
Pin 2 – Discrete Host Out	Host Mirroring Enable	DisabledEnabled
	Host Mirroring Port Selection	 Port 1 Port 2 Port 3 Port 4 Port 5 Port 6 Port 7 Port 8
	Host Mirroring Channel Selection	 Pin 4 – Discrete 1 Pin 2 – Discrete 2
	Host Mirroring Inversion	Not InvertedInverted
	Host Mirroring Polarity	PNP NPN

Pin Number: Description	Name	Values	
	Host Mirroring Output Type	Open Collector Push/Pull	


IO-Link®

IO-Link[®] is a point-to-point communication link between a master device and a sensor and/or light. It can be used to automatically parameterize sensors or lights and to transmit process data. For the latest IO-Link protocol and specifications, please visit www.io-link.com. For the latest IODD files, please refer to the Banner Engineering Corp website at: www.bannerengineering.com.

Mechanical Installation

Install the R95C 8-Port Hub to allow access for functional checks, maintenance, and service or replacement. Do not install the R95C 8-Port Hub in such a way to allow for intentional defeat.

All mounting hardware is supplied by the user. Fasteners must be of sufficient strength to guard against breakage. Use of permanent fasteners or locking hardware is recommended to prevent the loosening or displacement of the device. The mounting hole (4.5 mm) in the R95C 8-Port Hub accepts M4 (#8) hardware. See the figure below to help in determining the minimum screw length.





CAUTION: Do not overtighten the R95C 8-Port Hub's mounting screw during installation. Overtightening can affect the performance of the R95C 8-Port Hub.


Wiring

Port 1-Port 8 - Female	Pin	Signal Description
	1	18 V DC to 30 V DC
	2	Discrete 2 (IN/OUT)
1 202 4	3	Ground
4 3	4	Discrete 1 (IN)

Male	Pin	Signal Description
	1	18 V DC to 30 V DC
	2	Banner-specific
	3	Ground
	4	IO-Link

Status Indicators

The R95C 8-Port Discrete Bimodal to IO-Link Hub has matching amber LED indicators on both sides for each discrete device port to allow for installation needs and still provide adequate indication visibility. There is also an additional amber LED indicator on both sides of the converter, which is specific to the IO-Link communication.

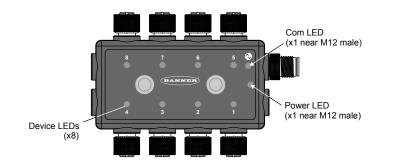

Discrete Devic	ce Amber LEDs	IO-Link Communication Amber LED		er LEDs IO-Link Communication Amber LED Power Indicator Green LED		en LED
Indication	Status	Indication Status		Indication	Status	
Off	Discrete OUT is inactive	Off	IO-Link communications are not present	Off	Power off	
Solid Amber	Discrete OUT is active	Flashing Amber (900 ms On, 100 ms Off)	IO-Link communications are active	Solid Green	Power on	

Specifications

Supply Voltage 18 V DC to 30 V DC at 400 mA maximum Power Pass-Through Current 500 mA per port maximum

Discrete Output Load Rating 100 mA

Supply Protection Circuitry Protected against reverse polarity and transient voltages Leakage Current Immunity

400 µA

Indicators

Green: Power Amber: IO-Link communications Amber: Discrete OUT status

Connections

(8) Integral 4-pin M12 female quick disconnect
 (1) Integral 4-pin M12 male quick-disconnect connector

Construction

Coupling Material: Nickel-plated brass Connector Body: PVC translucent black

Vibration and Mechanical Shock

Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 0.5 mm amplitude, 5 minutes sweep, 30 minutes dwell) Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wave)

Certifications

CE

Banner Engineering Europe Park Lane, Culliganlaan 2F bus 3, 1831 Diegem, BELGIUM

Turck Banner LTD Blenheim House, Blenheim Court, Wickford, Essex SS11 8YT, Great Britain



Environmental Rating

IP65, IP67, IP68 NEMA/UL Type 1

Operating Conditions

Temperature: -40 °C to +70 °C (-40 °F to +158 °F) 90% at +70 °C maximum relative humidity (non-condensing) Storage Temperature: -40 °C to +80 °C (-40 °F to +176 °F)

Required Overcurrent Protection




WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.


Overcurrent protection is required to be provided by end product application per the supplied table. Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply. Supply wiring leads < 24 AWG shall not be spliced. For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG) Required Overcurrent Protection (An	
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise.

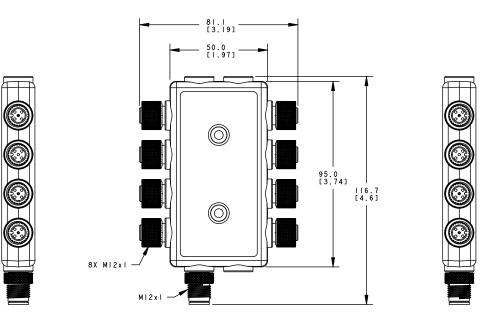



Accessories

Cordsets

4-Pin Threaded M12 Cordsets – Double Ended				
Model	Length	Style	Dimensions	Pinout
MQDEC-401SS	0.31 m (1 ft)			Female
MQDEC-403SS	0.91 m (2.99 ft)		40 Typ. [1.58]	
MQDEC-406SS	1.83 m (6 ft)	-		1 603 4
MQDEC-412SS	3.66 m (12 ft)			4 0 3
MQDEC-420SS	6.10 m (20 ft)			
MQDEC-430SS	9.14 m (30.2 ft)	-	M12 x 1	Male
MQDEC-450SS	15.2 m (49.9 ft)	Male Straight/Female Straight	¢ 14.5 [0.57]	2 1 3 4
			ø 14.5 [0.57"] ⊥	1 = Brown 2 = White 3 = Blue 4 = Black

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE. This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product of use of the product personal protection appreciations when the product is defined as not interface to such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

FCC Part 15 Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. ٠
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. •
- ٠

Industry Canada

This device complies with CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation. Cet appareil est conforme à la norme NMB-3(B). Le fonctionnement est soumis aux deux conditions suivantes : (1) ce dispositif ne peut pas occasionner d'interférences, et (2) il doit tolérer toute interférence, y compris celles susceptibles de provoquer un fonctionnement non souhaité du dispositif.

