

Q45RD Wireless Remote Device 900 MHz Sensor Node



Features

Sure Cross® Wireless Q45 Sensors combine the best of Banner's flexible sensor family with its reliable, field-proven, Sure Cross wireless architecture to solve new classes of applications limited only by the user's imagination. Containing a variety of sensor models, a radio, and an internal battery supply, this product line is truly plug-and-play.



Model DX80N9Q45RD-QPF-0.5

The Remote Device model is designed to interface with isolated dry contacts (pushbuttons), sourcing outputs, or Namur inductive proximity sensors.

Although these models support two dry contact inputs, the default Gateway I/O mapping configuration of the Banner Q45 wireless system supports one dry contact input. To map the second dry contact input on the Q45, use the Gateway's DIP switches to map the I/O. See the Gateway's datasheet for details.

Important: Because these sensors run on very low battery power, the contact wetting voltage is 3.3 volts. High voltage contacts are not designed to reliably switch these low voltages. Use a contact rated for operation at 3.3 volts.



Model DX80N9Q45RD

Models

Model	Frequency	Connector
DX80N9Q45RD-QPF-0.5	900 MHz ISM Band	18-inch cable with a 5-pin M12 female quick disconnect connector
DX80N9Q45RD		5-pin M12 female quick disconnect connector embedded in the front

Storage Mode

While in **storage mode**, the device's radio does not operate to conserve the battery. To put any device into storage mode, press and hold the binding button for five seconds. The device is in storage mode when the LEDs stop blinking. To wake the device, press and hold the binding button (inside the housing on the radio board) for five seconds.

Configuration Instructions

Buttons and LEDs


1. Binding button
2. Red LED (flashing) indicates a radio link error with the Gateway.
3. Green LED (flashing) indicates a good radio link with the Gateway.
4. Amber LED indicates when input 1 is active.
5. DIP switches

DIP Switches

DIP Switches for Dry Contact Input Mode (DIP Switch 5 OFF)

After making any changes to any DIP switch position, reboot the Wireless Q45 Sensor by triple-clicking the button, waiting a second, then double-clicking the button.

As shown in the image above, the DIP switches are in the OFF position. To turn a DIP switch on, push the switch toward the battery pack. DIP switches one through four are numbered from left to right as shown above.

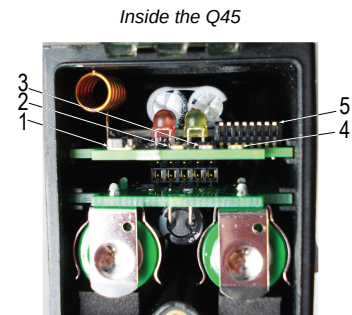

Description	DIP Switches							
	1	2	3	4	5	6	7	8
Transmit power: 500 mW (default)	OFF							
Transmit power: 250 mW (compatible with 150 mW radios)	ON							
Reserved (default)		OFF	OFF	OFF				
Dry contact input mode (default)					OFF			
3.3 V contact wetting voltage (default)						OFF		
5.5 V contact wetting voltage						ON		
Two dry contact inputs (default)							OFF	
One dry contact input							ON	
62.5 millisecond sample rate (default)								OFF
250 millisecond sample rate								ON

DIP Switches for Namur Input Mode (DIP Switch 5 ON)

After making any changes to any DIP switch position, reboot the Wireless Q45 Sensor by triple-clicking the button, waiting a second, then double-clicking the button.

As shown in the image above, the DIP switches are in the OFF position. To turn a DIP switch on, push the switch toward the battery pack. DIP switches one through four are numbered from left to right as shown above.

Description	DIP Switches			
	5	6	7	8
Namur input mode	ON			
5.5 V sensor voltage (default)		OFF		
8.2 V sensor voltage		ON		
2 millisecond warmup time, 62.5 ms sample rate (default)			OFF	OFF
2 millisecond warmup time, 250 ms sample rate			OFF	ON
5 millisecond warmup time, 125 ms sample rate			ON	OFF
5 millisecond warmup time, 500 ms sample rate			ON	ON

To use with Turck's Bi2-M12-Y1X-H1141, Bi5-M18-Y1X-H1141 Namur proximity sensor, set DIP switch 5 to ON and DIP switches 6 through 8 to OFF.


To use with Turck's Bi10-M30-Y1X-H1141 Namur proximity sensor, set DIP switch 5 and 7 to ON and DIP switches 6 and 8 to OFF.

Use cable MQDEC-406SS (male to female cable) to connect the Namur sensors to the Wireless Q45 Sensor - Remote Device model's interface.


Wiring

5-pin M12 Female Connection	Pin	Wire Color	Description
	1	Brown	V _{Out}
	2	White	Discrete IN 2 or Namur IN 1
	3	Blue	DC common (GND)
	4	Black	Discrete IN 1
	5	Gray	-

Wiring for dry contact mode

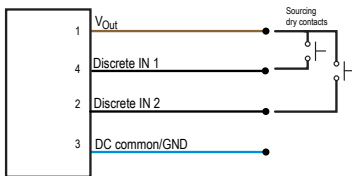


Wiring for NAMUR mode

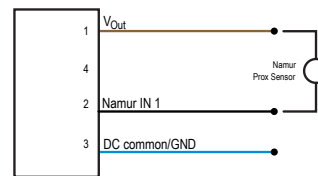

Continued on page 3

Continued from page 2

Wiring for externally-powered sourcing sensors

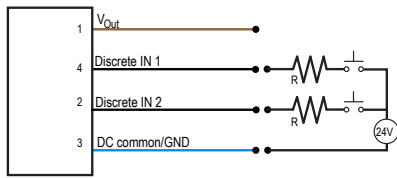

Voltage at the discrete IN:

- 0 V to 1 V = OFF
- 2 V to 5 V = ON
- More than 6 V will damage the Q45 sensor's input

Internal resistance is 800 Ohms. To connect the Wireless Q45 Sensor to a 24 V sourcing output, add a 3.0 KOhm to 5.6 KOhm external resistor in series to reduce the voltage applied to the Q45 Sensor's discrete input to less than 6 V.

R = 3.0 to 5.6 KOhm at 24 V

Q45RD Modbus Holding Registers

I/O #	Modbus Holding Register		I/O Type	I/O Range		Holding Register Representation	
	Gateway	Any Node		Min. Value	Max. Value	Min. (Dec.)	Max. (Dec.)
1	1	1 + (Node# × 16)	Discrete IN 1 OR Namur IN 1	0	1	0	1
2	2	2 + (Node# × 16)	Discrete IN 2	0	1	0	1
		...					
7	7	7 + (Node# × 16)	Reserved				
8	8	8 + (Node# × 16)	Device Message				
		...					
15	15	15 + (Node# × 16)	Control Message				
16	16	16 + (Node# × 16)	Reserved				

Bind to the Gateway and Assign the Node Address

Before beginning the binding procedure, apply power to all the devices. Separate the devices by two meters when running the binding procedure. Put only one Gateway into binding at a time to prevent binding to the wrong Gateway.

- On the Gateway: Enter binding mode.
 - For housed DX80 Gateways, triple-click button 2 on the Gateway. Both LEDs flash red.
 - For Gateway board modules, triple-click the button. The green and red LED flashes.
- Assign the Q45RD a Node address using the Gateway's rotary dials. Use the left rotary dial for the left digit and the right rotary dial for the right digit. For example, to assign your Q45RD to Node 10, set the Gateway's left dial to 1 and the right dial to 0. Valid Node addresses are 01 through 47.
- On the Q45: Loosen the clamp plate on the top of the Q45RD and lift the cover.
- Enter binding mode on the Q45RD by triple-clicking the Q45RD's button. The red and green LEDs flash alternately and the sensor searches for a Gateway in binding mode. After the Q45RD is bound, the LEDs stay solid momentarily, then they flash together four times. The Q45RD exits binding mode.
- Label the sensor with the Q45RD's Node address number for future reference.
- Repeat steps 2 through 5 for as many Q45RDs as are needed for your network.
- On the Gateway: After binding all Q45RDs, exit binding mode.
 - For housed DX80 Gateways, double-click button 2.
 - For board-level DX80 Gateways, double-click the button.

For Gateways with single-line LCDs: After binding your Q45RD to the Gateway, make note of the binding code displayed under the Gateway's *DVCFG menu, XADR submenu on the LCD. Knowing the binding code prevents having to re-bind all Q45RDs if your Gateway is ever replaced.

Apply Power to the Q45 AA-Cell Models


Follow these instructions to install or replace the lithium "AA" cell batteries.

CAUTION:



- **As with all batteries, these are fire, explosion, and severe burn hazards. There is a risk of explosion if the battery is replaced incorrectly.**
- Do not burn or expose them to high temperatures. Do not recharge, crush, disassemble, or expose the contents to water.
- Verify the battery's positive and negative terminals align to the positive and negative terminals of the battery holder mounted within the case.
- Properly dispose of used batteries according to local regulations by taking them to a hazardous waste collection site, an e-waste disposal center, or another facility qualified to accept lithium batteries.

1. Loosen the clamp plate with a small Phillips screwdriver and lift the cover.
2. Slide the battery board out of the Q45 housing.
3. If applicable, remove the discharged batteries.
4. Install the new batteries.
 - Use Banner's **BWA-BATT-006** replacement batteries or equivalent 3.6 V AA lithium batteries, such as Xeno's XL-60F.
5. Verify the battery's positive and negative terminals align to the positive and negative terminals of the battery holder mounted within the case.
6. Slide the board containing the new batteries back into the Q45 housing.
7. Close the cover and gently tighten the clamp plate with the small Phillips screwdriver.

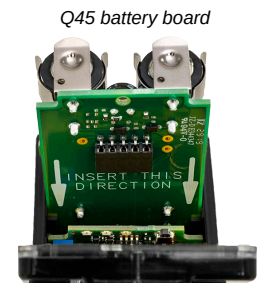

Specifications

Radio Specifications for 900 MHz Performance with Internal Antennas

Radio Transmit Power

900 MHz Conducted (internal antenna): 25 dBm

Radio Range

A 2 dB antenna ships with this device.

Transmit power and range are subject to many factors, including antenna gain, installation methods, characteristics of the application, and environmental conditions.

Please refer to the following documents for installation instructions and high-gain antenna options.

Installing Your Sure Cross® Radios ([151514](#))
 Conducting a Site Survey ([133602](#))
 Sure Cross® Antenna Basics ([132113](#))

Antenna Minimum Separation Distance

900 MHz radios transmitting at ≥ 500 mW: 4.57 m (15 ft) with the supplied antenna

Spread Spectrum Technology

FHSS (Frequency Hopping Spread Spectrum)

900 MHz Compliance (SX7023EXT Radio Module)

Radio module is indicated by the product label marking

Contains FCC ID: UE3SX7023EXT

Contains IC: 7044A-SX7023EXT

Link Timeout (Performance)

Gateway: Configurable via User Configuration Software

Node: Defined by Gateway

FCC Part 15 Class A for Intentional Radiators

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

(Part 15.21) Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Industry Canada Statement for Intentional Radiators

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil contient des émetteurs/récepteurs exemptés de licence conformes à la norme Innovation, Sciences, et Développement économique Canada. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage.
2. L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Q45RD Specifications

Externally Powered Sourcing Sensors

ON Condition: 2 V to 5 V

OFF Condition: Less than 1 V

Construction

Molded reinforced thermoplastic polyester housing, oring-sealed transparent Lexan® cover, molded acrylic lenses, and stainless steel hardware. Designed to withstand 1200 psi washdown.

Indicators

Red and green LEDs (radio function); amber LED indicates when input 1 is active

Default Sample Rate

62.5 milliseconds (dry contact) or 125 milliseconds (Namur)

Report Rate

On Change of State

Typical Battery Life for One Dry Contact Input

Up to 3 years at a 62.5 ms sample rate or 250 ms sample rate.

Assumes an average of 20 seconds between changes of state and a Gateway heartbeat setting of 30 seconds.

Typical Battery Life for Bi2 and Bi5 Namur Inputs

Up to 2 years at a 2 ms warmup time and 62.5 ms sample rate; 4 years at a 2 ms warmup time and 250 ms sample rate.

Assumes an average of 20 seconds between changes of state and a Gateway heartbeat setting of 30 seconds.

Typical Battery Life for Bi10 Namur Inputs

Up to 2 years at a 5 ms warmup time and 125 ms sample rate; 4 years at a 5 ms warmup time and 500 ms sample rate.

Assumes an average of 20 seconds between changes of state and a Gateway heartbeat setting of 30 seconds.

Environmental Specifications for the Q45

Operating Conditions

-40 °C to +70 °C (-40 °F to +158 °F); 90% at +50 °C maximum relative humidity (non-condensing)

Radiated Immunity: 10 V/m (EN 61000-4-3)

Environmental Rating


NEMA 6P

IP67

Operating the devices at the maximum operating conditions for extended periods can shorten the life of the device.

Accessories

Replacement Batteries (AA Cells)

<p>BWA-BATT-006</p> <ul style="list-style-type: none"> • 3.6 V Lithium AA cell • Two batteries 	
---	--


Warnings (Internal Antenna Models)

Exporting Sure Cross® Radios. It is our intent to fully comply with all national and regional regulations regarding radio frequency emissions. **Customers who want to re-export this product to a country other than that to which it was sold must ensure the device is approved in the destination country.** Consult with Banner Engineering Corp. if the destination country is not on this list.

IMPORTANT: Please download the complete Q45RD Remote Device (900 MHz) Wireless Sensor Node technical documentation, available in multiple languages, from www.bannerengineering.com for details on the proper use, applications, Warnings, and installation instructions of this device.

IMPORTANT: Por favor descargue desde www.bannerengineering.com toda la documentación técnica de los Q45RD Remote Device (900 MHz) Wireless Sensor Node, disponibles en múltiples idiomas, para detalles del uso adecuado, aplicaciones, advertencias, y las instrucciones de instalación de estos dispositivos.

IMPORTANT: Veuillez télécharger la documentation technique complète des Q45RD Remote Device (900 MHz) Wireless Sensor Node sur notre site www.bannerengineering.com pour les détails sur leur utilisation correcte, les applications, les notes de sécurité et les instructions de montage.

 **WARNING:**

- **Do not use this device for personnel protection**
- Using this device for personnel protection could result in serious injury or death.
- This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A device failure or malfunction can cause either an energized (on) or de-energized (off) output condition.

IMPORTANT:

- **Electrostatic discharge (ESD) sensitive device**
- ESD can damage the device. Damage from inappropriate handling is not covered by warranty.
- Use proper handling procedures to prevent ESD damage. Proper handling procedures include leaving devices in their anti-static packaging until ready for use; wearing anti-static wrist straps; and assembling units on a grounded, static-dissipative surface.

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.

Notas Adicionales

Información México: La operación de este equipo está sujeta a las siguientes dos condiciones: 1) es posible que este equipo o dispositivo no cause interferencia perjudicial y 2) este equipo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Banner es una marca registrada de Banner Engineering Corp. y podrán ser utilizadas de manera indistinta para referirse al fabricante. "Este equipo ha sido diseñado para operar con las antenas tipo Omnidireccional para una ganancia máxima de antena de 6 dBd y Yagi para una ganancia máxima de antena 10 dBd que en seguida se enlistan. También se incluyen aquellas con aprobación ATEX tipo Omnidireccional siempre que no excedan una ganancia máxima de antena de 6dBd. El uso con este equipo de antenas no incluidas en esta lista o que tengan una ganancia mayor que 6 dBd en tipo omnidireccional y 10 dBd en tipo Yagi, quedan prohibidas. La impedancia requerida de la antena es de 50 ohms."

Mexican Importer

Banner Engineering de México, S. de R.L. de C.V. | David Alfaro Siqueiros 103 Piso 2 Valle oriente | San Pedro Garza Garcia Nuevo León, C. P. 66269

81 8363.2714