



Features

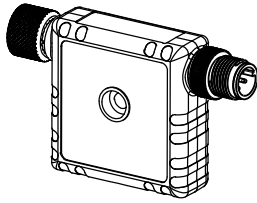

- Compact analog converter that outputs an analog value, voltage or current, as presented by a received PFM input signal
- Rugged overmolded design meets IP65, IP67, and IP68
- Connects directly to a sensor or anywhere in-line for ease of use

Models

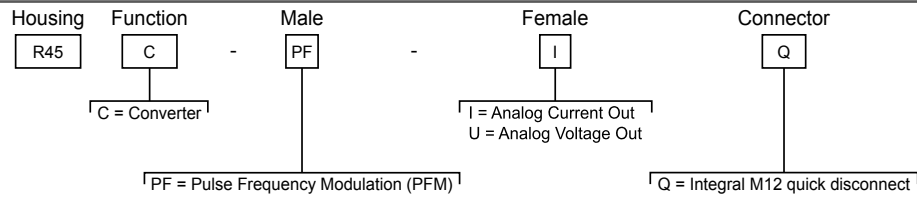

Overview


The R45C PFM to Analog Output Converter connects to the PFM output of a sensor, and converts the PFM signal into an analog output.

Pulse Frequency Modulation (PFM) is a way to represent an analog measurement value from a sensor digitally, and the R45C-PF-xx translates that digital representation into an analog output signal.

- Voltage range is 0 V to 10 V
- Current range is 4 mA to 20 mA
- PFM signal input range is 100 Hz to 600 Hz

Status Indicators

The R45C PFM to Analog Output Converter has two amber LED indicators on both sides for connected sensor status and provides adequate indication visibility. There is also a green LED indicator on both sides of the converter, which signals the device's power status.

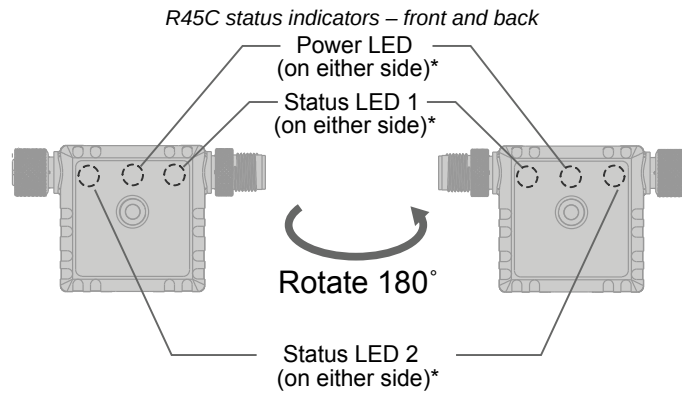

* Indicator LEDs are visible through translucent housing

Status 1 LED – Amber	
Indication	Status
Solid On/Off	On: PFM is within valid range Off: PFM is outside of valid range, or no sensor is connected




Status 2 LED – Amber	
Indication	Status
Solid On/Off	On: Analog output is within valid range Off: Analog output is outside of valid range, or no sensor is connected

Installation

Mechanical Installation

Install the R45C to allow access for functional checks, maintenance, and service or replacement. Do not install the R45C in such a way to allow for intentional defeat.


Fasteners must be of sufficient strength to guard against breakage. The use of permanent fasteners or locking hardware is recommended to prevent the loosening or displacement of the device. The mounting hole (4.5 mm) in the R45C accepts M4 (#8) hardware. See the figure below to help in determining the minimum screw length.

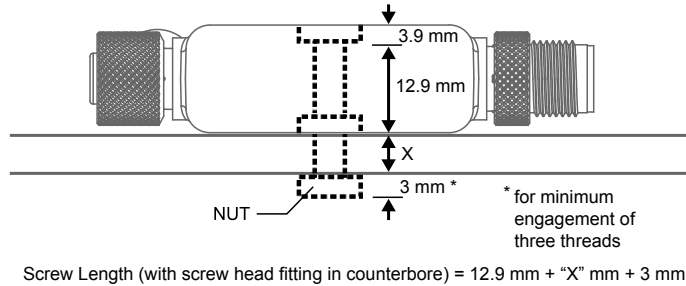

CAUTION: Do not overtighten the R45C's mounting screw during installation. Overtightening can affect the performance of the R45C.

Wiring

The following wiring diagrams are examples of different R45C outputs.

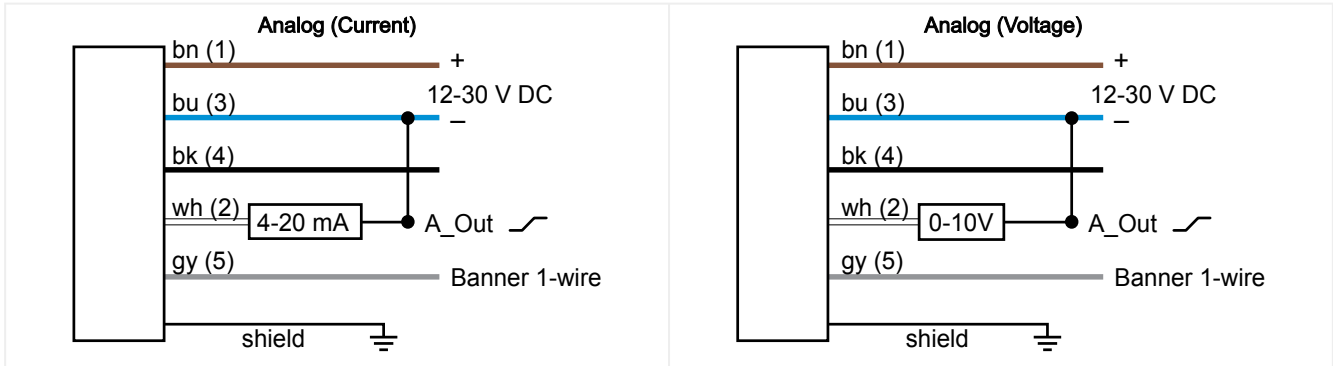

Female	Male	Pin	Wire Color
		1	Brown
		2	White
		3	Blue
		4	Black
		5	Gray

Pin Number	Signal Description - Female	Signal Description - Male
Pin 1	12 V DC to 30 V DC	12 V DC to 30 V DC
Pin 2	PFM Input Signal	Analog Out

Continued on page 3

Continued from page 2

Pin Number	Signal Description - Female	Signal Description - Male
Pin 3	Ground	Ground
Pin 4	Pass-through to Pin 4 (Male)	Pass-through to Pin 4 (Female)
Pin 5	No Connection (N/C)	Banner 1-wire

Specifications

Supply Voltage

12 V DC to 30 V DC at 50 mA maximum

Supply Protection Circuitry

Protected against reverse polarity and transient voltages

Leakage Current Immunity

400 μ A

Resolution

14 bits

Accuracy

0.5%

Indicators

Green: Power LED
Amber: Status 1 LED
Amber: Status 2 LED

Connections

Integral male/female 5-pin M12 quick disconnect

Construction

Coupling Material: Nickel-plated brass
Connector Body: PVC translucent black

Vibration and Mechanical Shock

Meets IEC 60068-2-6 requirements (Vibration: 10 Hz to 55 Hz, 0.5 mm amplitude, 5 minutes sweep, 30 minutes dwell)
Meets IEC 60068-2-27 requirements (Shock: 15G 11 ms duration, half sine wave)

Environmental Rating

IP65, IP67, IP68
NEMA/UL Type 1

Operating Conditions

Temperature: -40°C to $+70^{\circ}\text{C}$ (-40°F to $+158^{\circ}\text{F}$)
90% at $+70^{\circ}\text{C}$ maximum relative humidity (non-condensing)
Storage Temperature: -40°C to $+80^{\circ}\text{C}$ (-40°F to $+176^{\circ}\text{F}$)

Required Overcurrent Protection



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.

Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.

Supply wiring leads < 24 AWG shall not be spliced.

For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (A)	Supply Wiring (AWG)	Required Overcurrent Protection (A)
20	5.0	26	1.0
22	3.0	28	0.8
24	1.0	30	0.5

Certifications



Banner Engineering BV
Park Lane, Culliganlaan 2F bus 3
1831 Diegem, BELGIUM



Turck Banner LTD Blenheim House
Blenheim Court
Wickford, Essex SS11 8YT
GREAT BRITAIN



Product Identification



FCC Part 15 Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


Industry Canada ICES-003(B)

This device complies with CAN ICES-3 (B)/NMB-3(B). Operation is subject to the following two conditions: 1) This device may not cause harmful interference; and 2) This device must accept any interference received, including interference that may cause undesired operation.

Cet appareil est conforme à la norme NMB-3(B). Le fonctionnement est soumis aux deux conditions suivantes : (1) ce dispositif ne peut pas occasionner d'interférences, et (2) il doit tolérer toute interférence, y compris celles susceptibles de provoquer un fonctionnement non souhaité du dispositif.

Dimensions

All measurements are listed in millimeters [inches], unless noted otherwise.

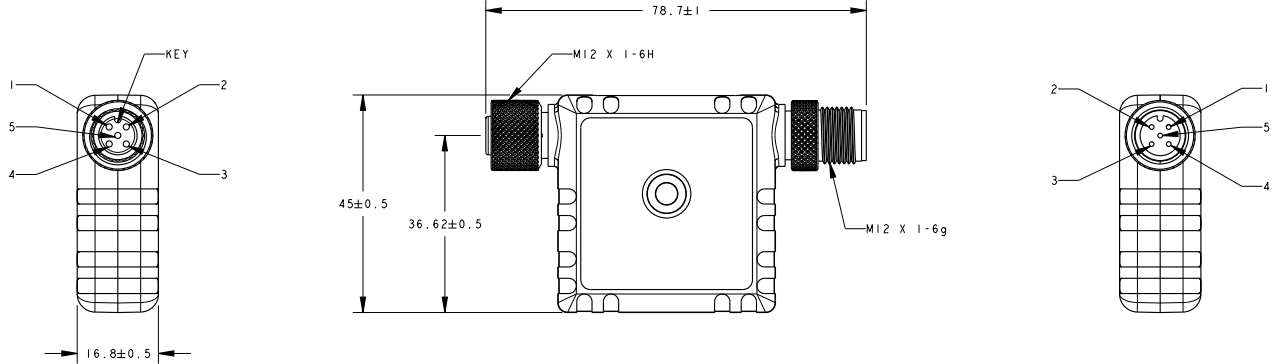

Accessories

Cordsets

Use these cordsets to extend the distance between the R45C-PF-UQ or R45C-PF-IQ and the PLC/Host.

5-Pin Male Threaded and 5-Pin Female Quick Disconnect M12 Cordset with Shield—Double Ended				
Model	Length "L1"	Style	Pinout (Male)	Pinout (Female)
MQDEC3-503SS	0.91 m (2.99 ft)	Female Straight/Male Straight		
MQDEC3-506SS	1.83 m (6 ft)			
MQDEC3-515SS	4.58 m (15 ft)			
MQDEC3-530SS	9.2 m (30.2 ft)			
			<p>1 = Brown 2 = White 3 = Blue</p>	<p>4 = Black 5 = Gray</p>

Use these cordsets to extend the distance between a sensor with a 4-pin M12 male connector and the R45C-PF-UQ or R45C-PF-IQ.

4-Pin Threaded M12 Cordsets—Double Ended				
Model	Length	Style	Dimensions	Pinout
MQDEC-401SS	0.31 m (1 ft)	Male Straight/Female Straight		Female
MQDEC-403SS	0.91 m (2.99 ft)			
MQDEC-406SS	1.83 m (6 ft)			
MQDEC-412SS	3.66 m (12 ft)			
MQDEC-420SS	6.10 m (20 ft)			
MQDEC-430SS	9.14 m (30.2 ft)			Male
MQDEC-450SS	15.2 m (49.9 ft)	<p>1 = Brown 2 = White 3 = Blue 4 = Black</p>		

Use these cordsets or adapter to connect between a sensor with a 4-pin M8 male connector and the R45C-PF-UQ or R45C-PF-IQ.

4-pin M12 Male A-Code to 4-pin M8 Female Connector				
Model	Length	M12 Male A-Code	M8 Female	Pinout Key
BC-M12M4-M8F4-26-0.16M	0.16 m (0.50 ft)			<p>1 = Brown 2 = White 3 = Blue 4 = Black</p>
BC-M12M4-M8F4-26-2.5M	2.5 m (8.2 ft)			

4-pin M12 Male to 4-pin M8 Female Adapter				
Model	Style	Dimensions	Pinout	
S15A-M12M4M8F4	In-Line Adapter		Female	
			Male	<p>1 = Brown 2 = White 3 = Blue 4 = Black</p>

Banner Engineering Corp Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT**

DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.

For patent information, see www.bannerengineering.com/patents.