

XS/SC26-2E (FID 2 1716-)

Industrial Ethernet User's Guide

EtherNet/IP and Modbus/TCP

11/21/2017



This document covers the instructions for safety controllers with the “FID 2” designation on the sticker label and date codes of 1716 or earlier. For “FID 2” controllers with date codes of 1717 or later, see “XS26/SC26-2E (FID2 1717+) Industrial Ethernet User’s Guide”. For “FID 1” controllers with date codes of 1547 or later, see “XS/SC26-2E (FID 1) Industrial Ethernet User’s Guide”. For older versions of the “FID 1” controller, please refer to “XS/SC26-2E (OLD) Industrial Ethernet User’s Guide”.

For PROFINET connections on “FID 2” please see “XS/SC26-2E (FID 2 1706+) PROFINET User’s Guide”.

An aid for use in establishing Ethernet communications between the safety controller and a PLC or HMI.

Table of Contents

| | |
|---|----|
| Chapter 1: Configuring the Controller | 1 |
| Chapter 2: EtherNet/IP | 2 |
| 2.1 EtherNet/IP Configuration Using EDS File..... | 2 |
| 2.2 RSLogix5000 Configuration (Implicit Messaging)..... | 10 |
| 2.3 Assembly Objects..... | 16 |
| 2.4 Fault Examples | 22 |
| 2.5 Flags | 24 |
| 2.6 RSLogix5000 Configuration (Explicit Messaging) | 26 |
| 2.6.2 Examples of Explicit Message Connections | 28 |
| 2.7 EIP on Omron PLC Configuration | 33 |
| Chapter 3: Modbus/TCP..... | 48 |
| Chapter 4: PCCC | 57 |
| 4.1 PLC Configuration..... | 57 |
| 4.2 Outputs from Safety Controller (Inputs to PLC)..... | 59 |
| 4.3 Inputs to Safety Controller (Outputs from PLC)..... | 63 |
| 4.4 Flags | 63 |
| 4.4.1 Flags | 64 |
| Chapter 5: Error Codes..... | 65 |
| 5.1 VO Fault Index..... | 65 |
| 5.2 Error Code/Advanced Error Code/Error Message Index/Fault Code Table | 65 |
| Appendix A: Virtual Reset and Cancel Delay (RCD) Sequence | 71 |


XS/SC26-2E

Chapter 1: Configuring the Controller

By default, the XS/SC26-2E Ethernet port is disabled. To enable the port, connect the safety controller to your PC via USB cable (SC-USB2, p/n 29480). Open the Banner XS26-2 Expandable Safety Controller PC Software and click on the Network Settings icon along the top of the screen (shown here in red box).



Place a check mark in the “Enable Network Interface” box then configure the IP Address and Subnet Mask as needed for your network and click on the Send button. Users can configure the Advanced network settings, if desired, by clicking on the arrow next to the word “Advanced”.

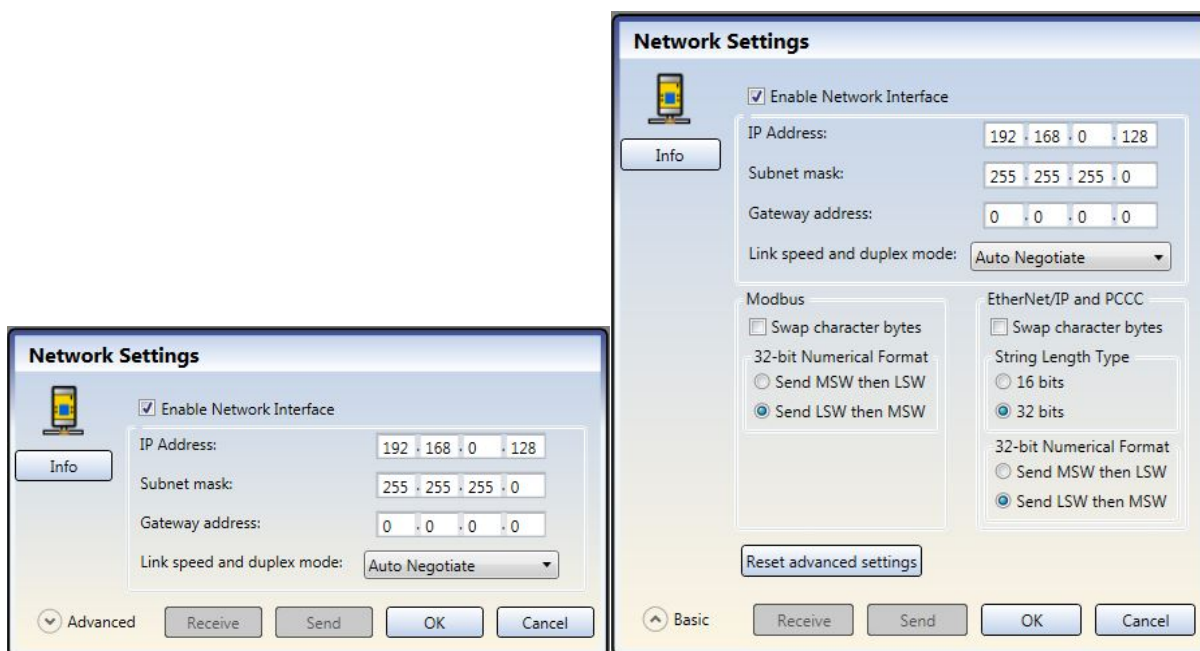

These are the default values for the XS/SC26 Ethernet port and Industrial Ethernet options.

You will need to provide the appropriate password in order to change the configuration and network settings for the safety controller.


The final step to enabling the Ethernet port is to make sure the controller has a valid and confirmed configuration file.

Chapter 2: EtherNet/IP

2.1 EtherNet/IP Configuration Using EDS File

Here is an example of using the XS26 EDS file to create a connection on a ControlLogix PLC.

1. First we use the EDS Hardware Installation Tool to register the EDS file.

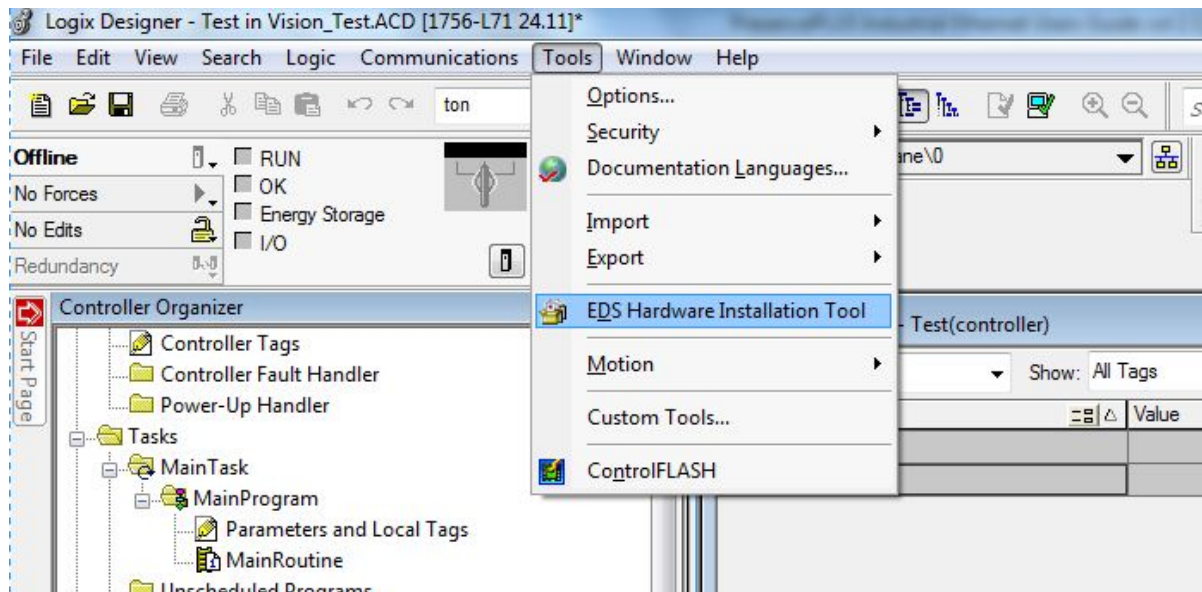


2. Click Next




3. Choose the "Register and EDS file(s)" option




4. Browse to find the EDS file, then click Next. See "Which XS/SC26-2E EDS File Should You Use?" at end of this document for more information.

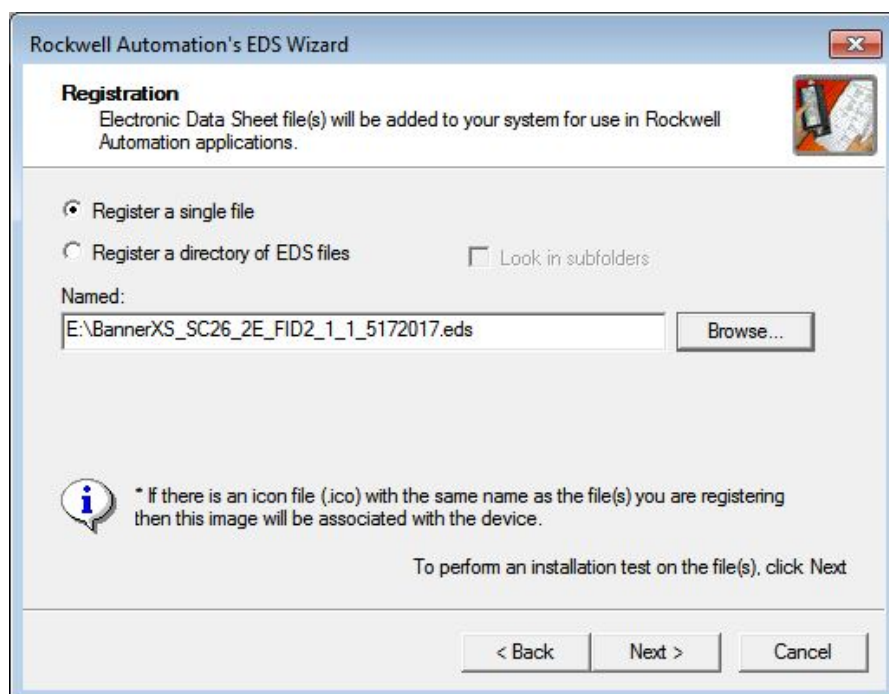


5. The file has been tested and can be registered. Click Next.

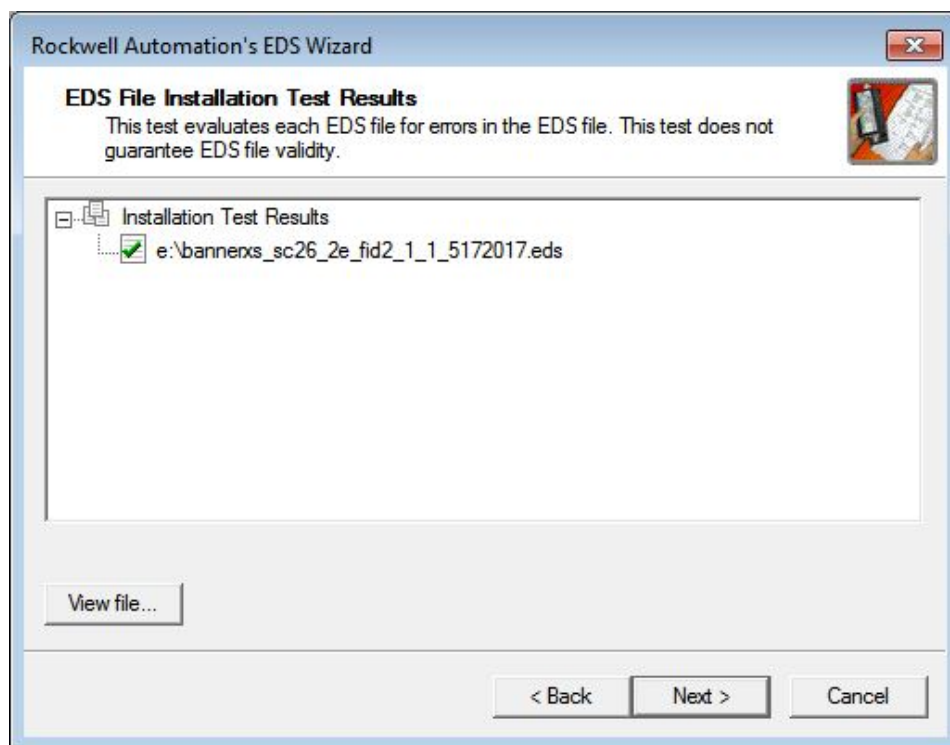


6. Here is the icon associated with the EDS file. Click Next.

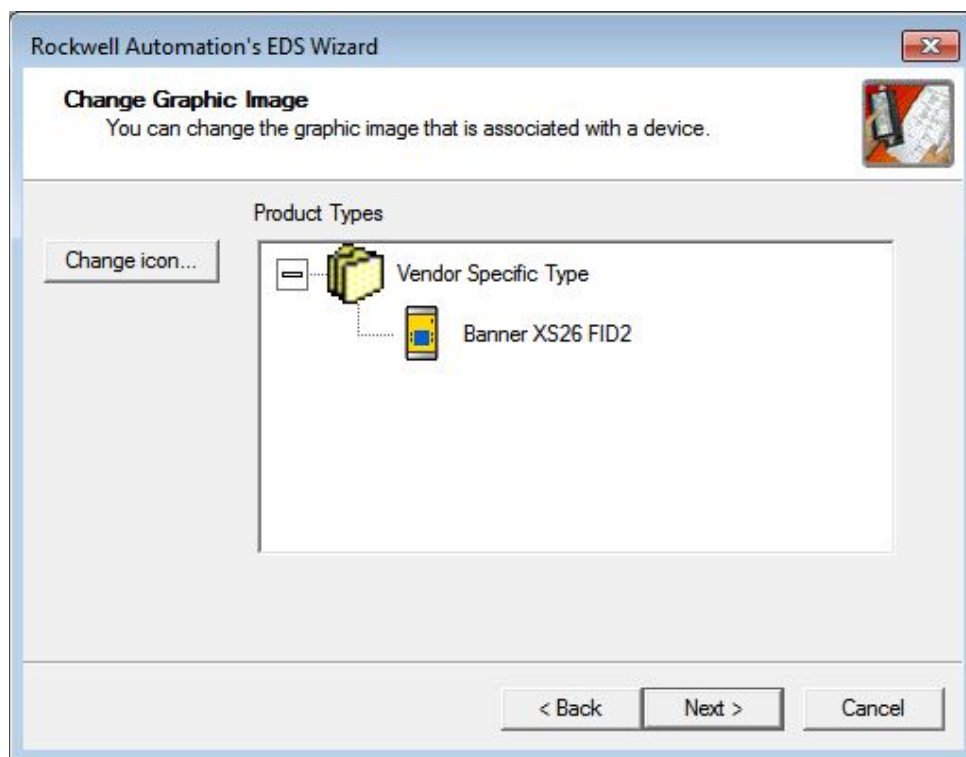


7. Everything looks good. Click Next to register this EDS file.

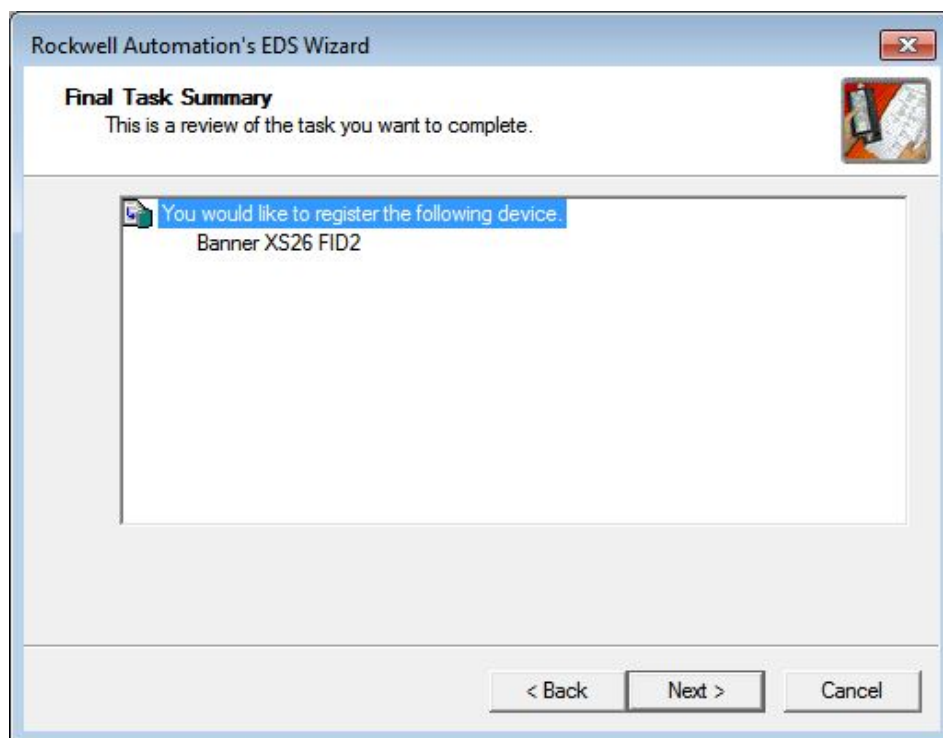


8. Complete! Click Finish. The EDS file is now registered in the Rockwell software.

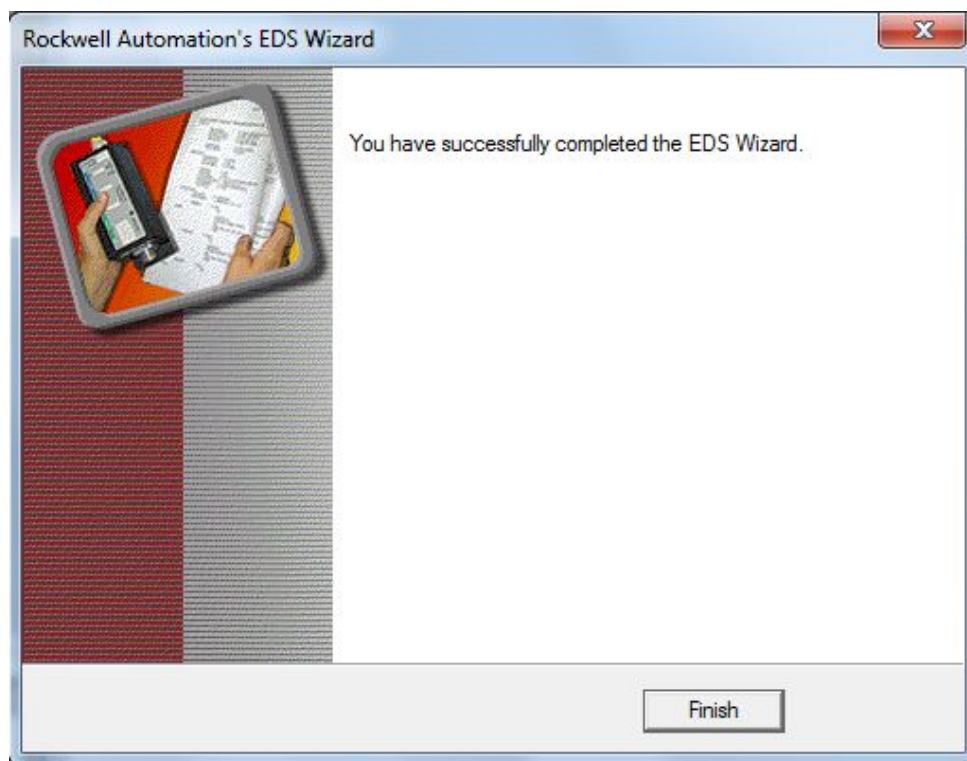

9. Now we will make a new module using the EDS file. Right click on the PLC's Ethernet adapter and choose "New Module".

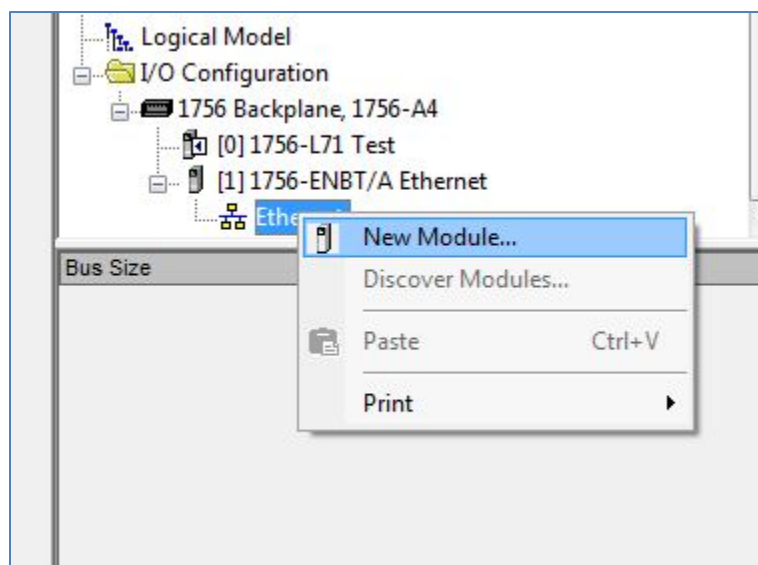

10. From the list, locate "XS26" then click Create.

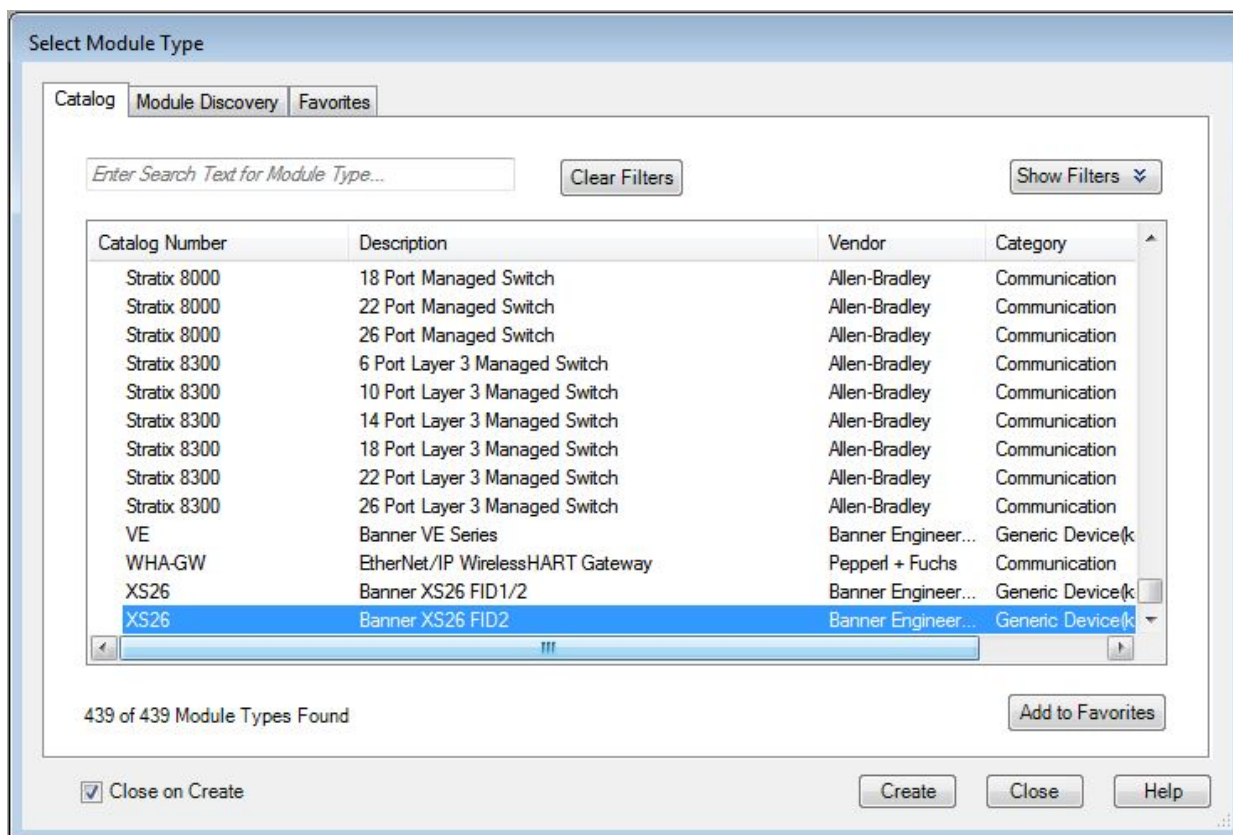

11. Fill in a name, optional description, and IP address for the safety controller. Then click the "Change" button in the Module Definition box.

New Module

General* | Connection | Module Info | Internet Protocol | Port Configuration

Type: XS26 Banner XS26 FID2
Vendor: Banner Engineering Corporation
Parent: Ethernet
Name: XS26
Description: Safety Controller


Ethernet Address
☐ Private Network: 192.168.1.
☒ IP Address: 192 . 168 . 0 . 128
☐ Host Name:

Module Definition
Revision: 2.050
Electronic Keying: Compatible Module
Connections: VO Status/Fault(100)
Change ...

Status: Creating

OK Cancel Help

12. In the Module Definition window you can select which type of connection you'd like to create. Each of the menu items in the Connections window stands for a fixed grouping of Input and Output Assembly Instances, as defined here. See section 2.3 for more information on the Assembly Instances.

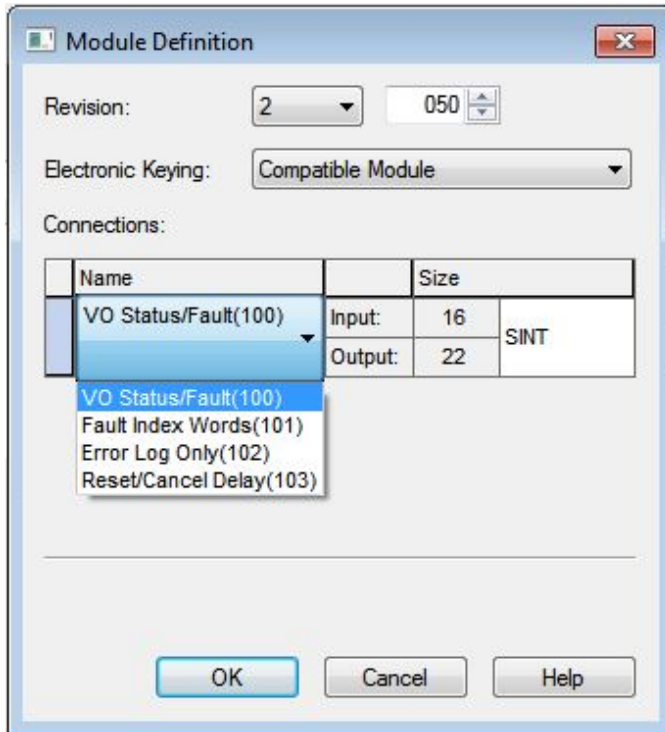

VO Status/Fault (100)-

O→T PLC Output/Safety Controller Input Assembly 112 (0x70), size 11 16-bit registers

T→O PLC Input/Safety Controller Output Assembly 100 (0x64), size 8 16-bit registers

Fault Index Words (101)-

O→T PLC Output/Safety Controller Input Assembly 112 (0x70), size 11 16-bit registers

T→O PLC Input/Safety Controller Output Assembly 101 (0x65), size 104 16-bit registers

Error Log Only (102)-

O→T PLC Output/Safety Controller Input Assembly 112 (0x70), size 11 16-bit registers


T→O PLC Input/Safety Controller Output Assembly 102 (0x66), size 150 16-bit registers

Reset/Cancel Delay (103)-


O→T PLC Output/Safety Controller Input Assembly 112 (0x70), size 11 16-bit registers

T→O PLC Input/Safety Controller Output Assembly 103 (0x67), size 35 16-bit registers

13. Make sure to select "INT" as the data type.

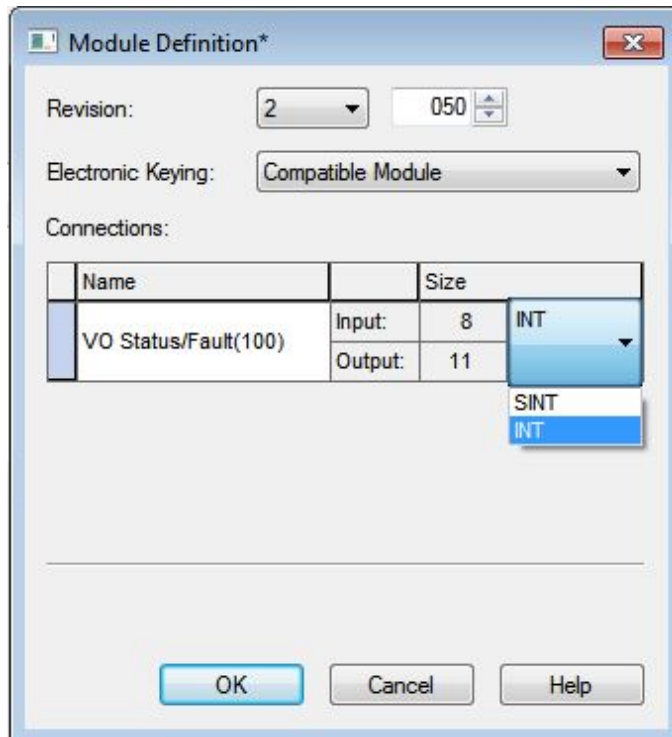


14. Click OK, then OK again and download the program to the PLC. The connection will look like that seen below.

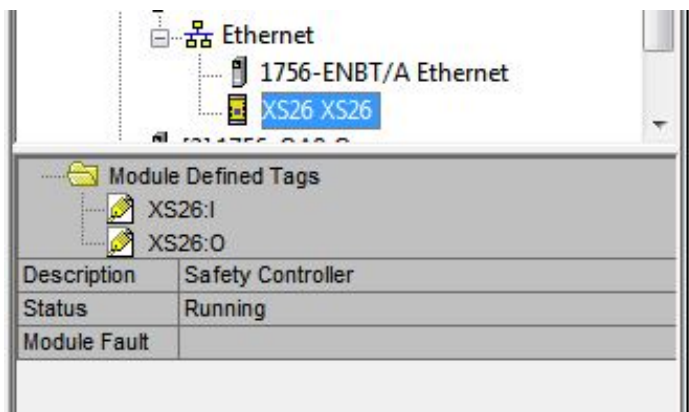


2.2 RSLogix5000 Configuration (Implicit Messaging)

Another method for creating an implicit Class 1 configuration between a Safety Controller and a ControlLogix family PLC is to configure the Safety Controller as a “Generic Ethernet Module”. The following is a sample setup:


1. Add a module to the PLC's Ethernet card.

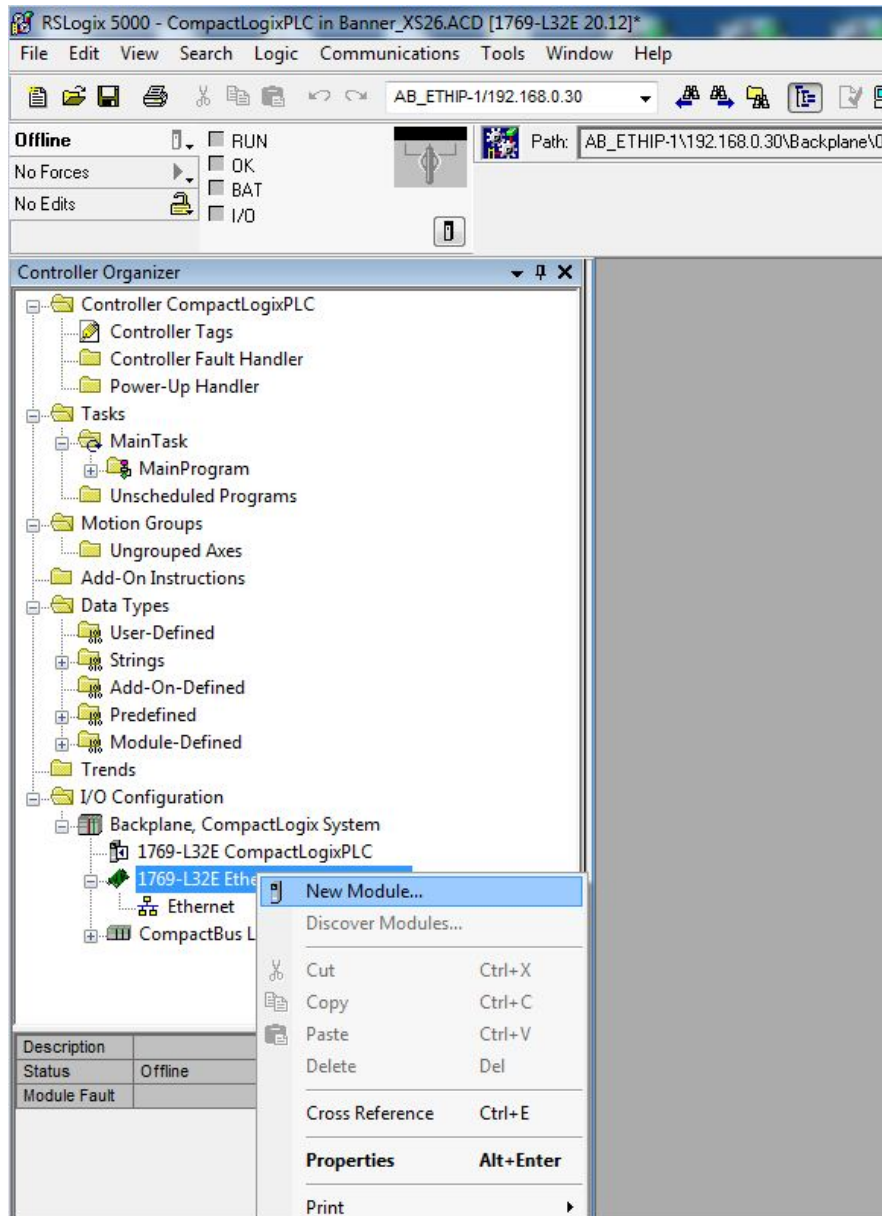

2. Select Module as "Generic Ethernet Module"

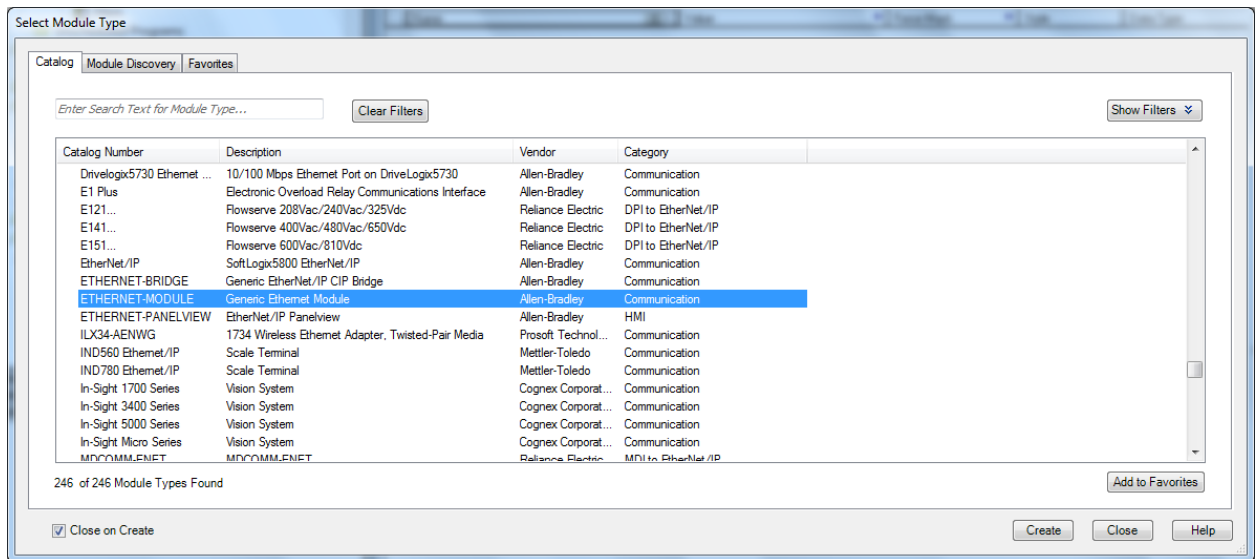

3. Change Comm Format to INT (default is DINT)

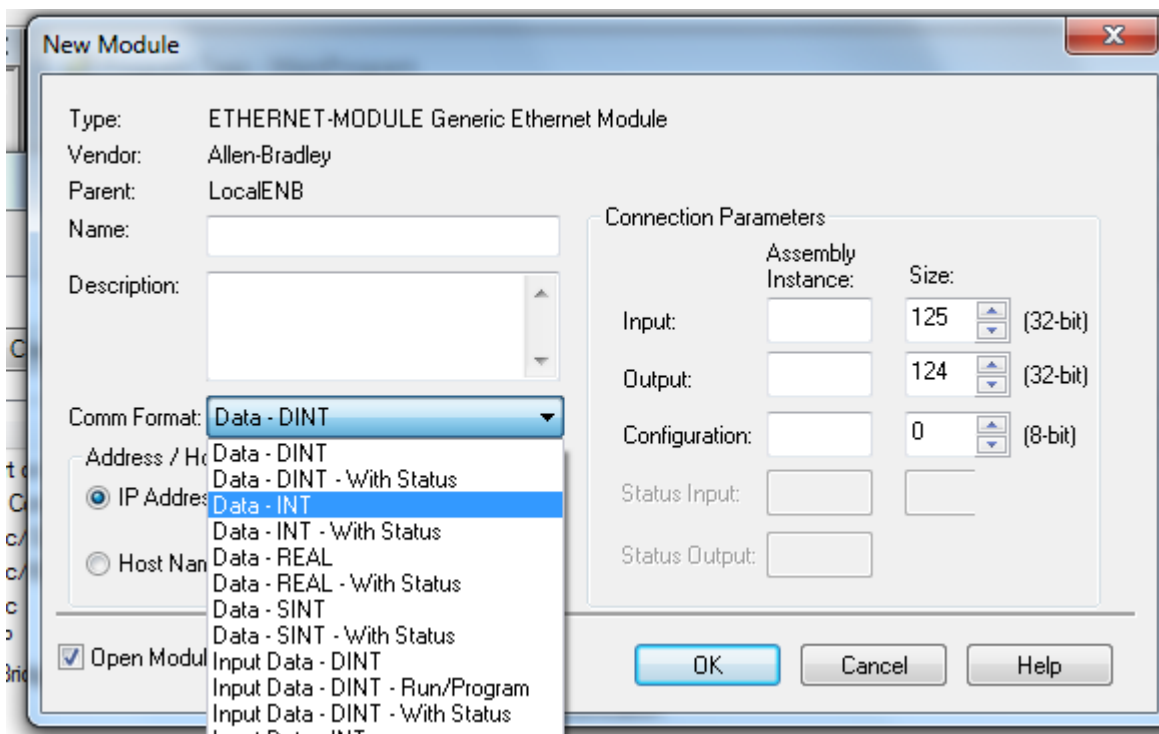

4. Add a module name and the IP address of the Safety Controller (default controller IP address is 192.168.0.128 with a subnet mask of 255.255.255.0)

The 'New Module' dialog box is shown with the following settings:

- Type: ETHERNET-MODULE Generic Ethernet Module
- Vendor: Allen-Bradley
- Parent: LocalENB
- Name: XS26
- Description: (empty text box)
- Comm Format: Data - INT
- Address / Host Name:
 - ☒ IP Address: 192 . 168 . 0 . 1
 - ☐ Host Name: (empty text box)
- Connection Parameters:
 - Input: (empty text box) Size: 125 (16-bit)
 - Output: (empty text box) Size: 124 (16-bit)
 - Configuration: (empty text box) Size: 0 (8-bit)
 - Status Input: (empty text box)
 - Status Output: (empty text box)
- ☒ Open Module Properties
- Buttons: OK, Cancel, Help

5. Choose one of four possible Assembly Object setups. See section 2.3.3 for more information on each choice.

PLC Input Assembly 100 (0x64), size 8 words (VO Status/Fault)

The 'New Module' dialog box is shown with the following settings:

- Type: ETHERNET-MODULE Generic Ethernet Module
- Vendor: Allen-Bradley
- Parent: Ethernet
- Name: XS26
- Description: (empty text box)
- Comm Format: Data - INT
- Address / Host Name:
 - ☒ IP Address: 192 . 168 . 0 . 1
 - ☐ Host Name: (empty text box)
- Connection Parameters:
 - Input: 100 Size: 8 (16-bit)
 - Output: 112 Size: 11 (16-bit)
 - Configuration: 128 Size: 0 (8-bit)
 - Status Input: (empty text box)
 - Status Output: (empty text box)
- ☒ Open Module Properties
- Buttons: OK, Cancel, Help

PLC Input Assembly 101 (0x65), size 104 words (Fault Index Words)

New Module

Type: ETHERNET-MODULE Generic Ethernet Module
Vendor: Allen-Bradley
Parent: Ethernet
Name: XS26
Description:
Comm Format: Data - INT
Address / Host Name
☒ IP Address: 192 . 168 . 0 . 1
☐ Host Name:
☒ Open Module Properties

Connection Parameters

| | Assembly Instance: | Size: | |
|----------------|--------------------|-------|----------|
| Input: | 101 | 104 | (16-bit) |
| Output: | 112 | 11 | (16-bit) |
| Configuration: | 128 | 0 | (8-bit) |
| Status Input: | | | |
| Status Output: | | | |

OK Cancel Help

PLC Input Assembly 102 (0x66), size 150 words (Safety Controller Fault Log Only)


New Module

Type: ETHERNET-MODULE Generic Ethernet Module
Vendor: Allen-Bradley
Parent: Ethernet
Name: XS26
Description:
Comm Format: Data - INT
Address / Host Name
☒ IP Address: 192 . 168 . 0 . 1
☐ Host Name:
☒ Open Module Properties

Connection Parameters

| | Assembly Instance: | Size: | |
|----------------|--------------------|-------|----------|
| Input: | 102 | 150 | (16-bit) |
| Output: | 112 | 11 | (16-bit) |
| Configuration: | 128 | 0 | (8-bit) |
| Status Input: | | | |
| Status Output: | | | |

OK Cancel Help

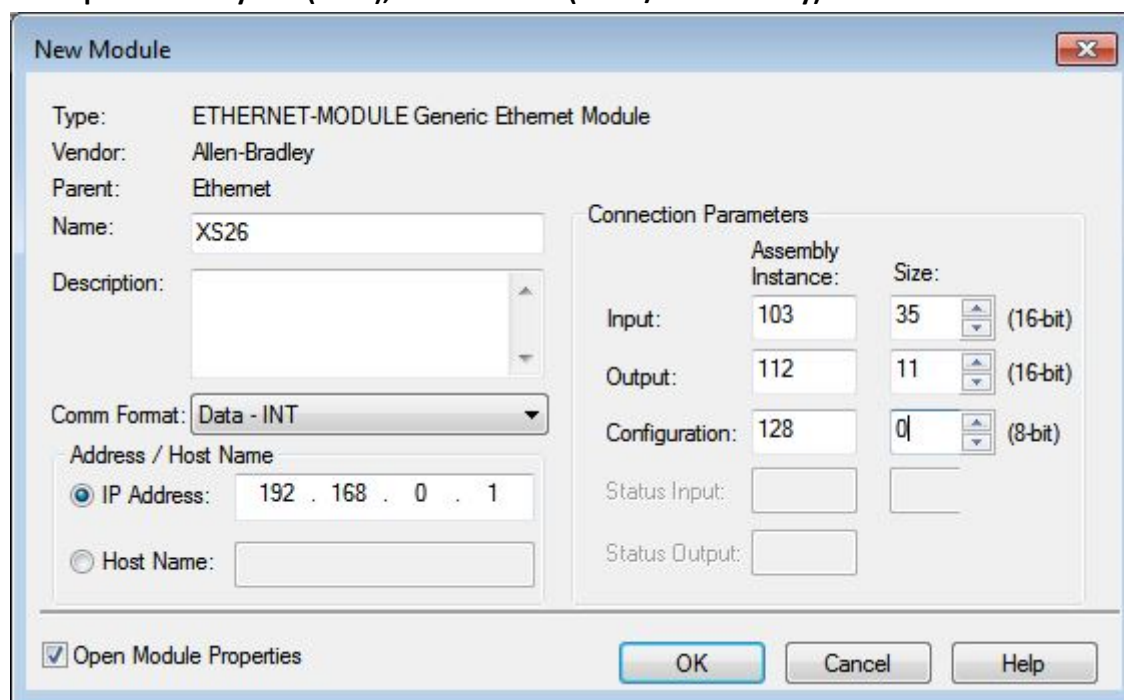PLC Input Assembly 103 (0x67), size 35 words (Reset/Cancel Delay)


New Module


Type: ETHERNET-MODULE Generic Ethernet Module
 Vendor: Allen-Bradley
 Parent: Ethernet
 Name: XS26
 Description:
 Comm Format: Data - INT
 Address / Host Name
☒ IP Address: 192 . 168 . 0 . 1
☐ Host Name:
☒ Open Module Properties

Connection Parameters

| | Assembly Instance: | Size: | |
|----------------|--------------------|-------|----------|
| Input: | 103 | 35 | (16-bit) |
| Output: | 112 | 11 | (16-bit) |
| Configuration: | 128 | 0 | (8-bit) |
| Status Input: | | | |
| Status Output: | | | |

OK Cancel Help

6. Set the Connection parameters: RPI and Unicast yes/no. Note that the recommended minimum RPI is 100 msec.

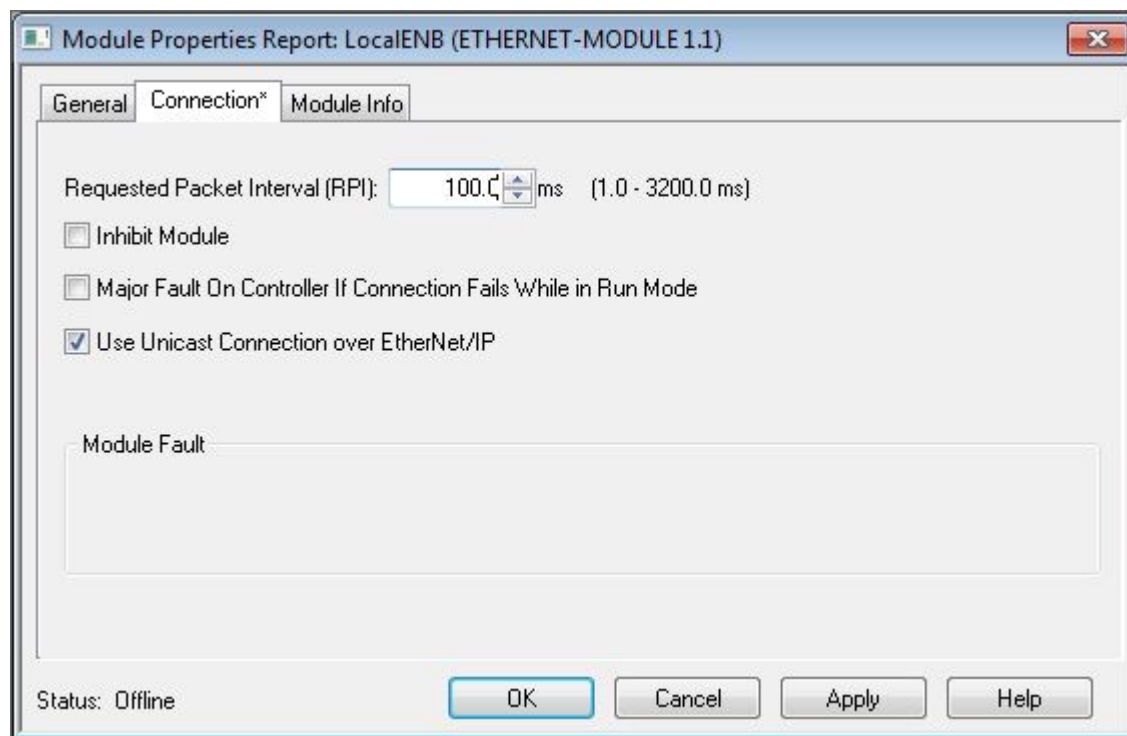

Module Properties Report: LocalENB (ETHERNET-MODULE 1.1)

General Connection* Module Info

Requested Packet Interval (RPI): 100.0 ms (1.0 - 3200.0 ms)

☐ Inhibit Module

☐ Major Fault On Controller If Connection Fails While in Run Mode


☒ Use Unicast Connection over EtherNet/IP

Module Fault

Status: Offline

OK Cancel Apply Help

7. If the module configuration was successful, the following information should be displayed:

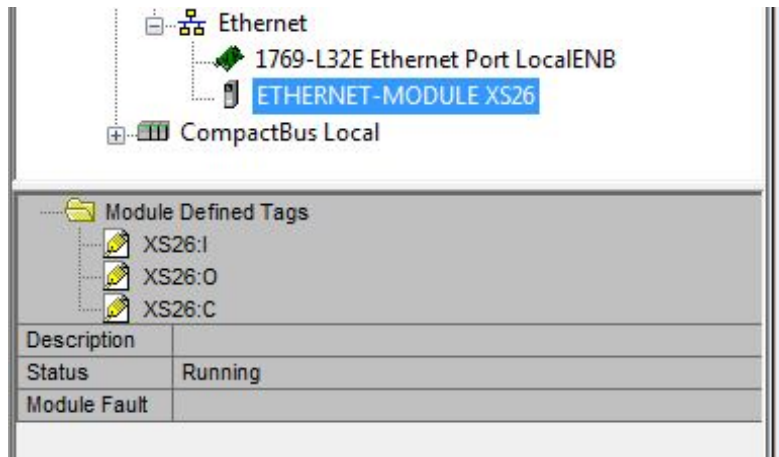

I = Inputs to PLC (outputs from the Safety Controller)
 O = Outputs from PLC (inputs to the Safety Controller- not used)
 C = Configuration (not used)

8. Locate the memory map in the Controller Tags list. The 8 input words from Assembly Instance 100 are shown below as an example.

| | | | | |
|--------------------|-------|-------|---------|---------------------|
| [-] XS26:I | {...} | {...} | | AB:ETHERNET_MODULE_ |
| [-] XS26:I.Data | {...} | {...} | Decimal | INT[8] |
| [+] XS26:I.Data[0] | 1 | | Decimal | INT |
| [+] XS26:I.Data[1] | 128 | | Decimal | INT |
| [+] XS26:I.Data[2] | 0 | | Decimal | INT |
| [+] XS26:I.Data[3] | 8 | | Decimal | INT |
| [+] XS26:I.Data[4] | 0 | | Decimal | INT |
| [+] XS26:I.Data[5] | 0 | | Decimal | INT |
| [+] XS26:I.Data[6] | 0 | | Decimal | INT |
| [+] XS26:I.Data[7] | 0 | | Decimal | INT |

In the example pictured above, we see that Virtual Outputs 1, 24, and 52 are ON.
 VO1 is word 0, bit 0 $\rightarrow 2^0 = 1$; VO24 is word 1, bit 7 $\rightarrow 2^7 = 128$; VO52 is word 3, bit 3 $\rightarrow 2^3 = 8$

2.3 Assembly Objects

2.3.1 Safety Controller Inputs (Outputs from PLC) $O \rightarrow T$

The Safety Controller uses Instance 112 (0x70)* with a size of eleven registers (16-bit) as its Input Assembly (PLC Output).

PLC Output Assembly Instance 112 (0x70) – Safety Controller Inputs $O \rightarrow T$

| WORD # | WORD NAME | DATA TYPE |
|--------|---|----------------|
| 0 | Virtual Input On/Off (1-16) | 16-bit integer |
| 1 | Virtual Input On/Off (17-32) | 16-bit integer |
| 2 | Virtual Input On/Off (33-48) | 16-bit integer |
| 3 | Virtual Input On/Off (49-64) | 16-bit integer |
| 4 | <i>reserved</i> | 16-bit integer |
| 5 | <i>reserved</i> | 16-bit integer |
| 6 | <i>reserved</i> | 16-bit integer |
| 7 | <i>reserved</i> | 16-bit integer |
| 8 | Virtual Reset/Cancel Delay (1-16) [RCD Register Bits] | 16-bit integer |
| 9 | <i>reserved</i> | 16-bit integer |
| 10 | RCD Actuation Code [RCD Enable Register] | 16-bit integer |

***NOTE:** This eleven word assembly is only called 113 (0x71) for FID 2 controllers with date codes of “1717” or later. See “Which EDS File should I use?” at the end of this document for more information.

2.3.3 Safety Controller Configuration Assembly Object

The Safety Controller does not use a Configuration Assembly Object. As some EtherNet/IP clients require one, use Instance 128 (0x80) with a size of zero registers (16-bit).

2.3.4 Safety Controller Outputs (Inputs to PLC) $T \rightarrow O$

There are four choices for Safety Controller Output Assembly Objects. The first and smallest choice includes just information about Virtual Outputs and whether they have faults. The second choice adds to the Virtual Output information some more advanced data like the reason why each of the safety outputs is off, and more descriptive fault information for the Virtual Outputs. The third choice of Output Assembly Object is used exclusively to access the Safety Controller's fault log. The fourth choice is used for the Virtual Manual Reset and Cancel Off Delay feedback. All four options are shown below.

PLC Input Assembly Instance 100 (0x64) - 8 Registers (VO Status/Fault)

This Assembly Instance includes only basic information about the status of the first 64 Virtual Outputs.

PLC Input Assembly Instance 100 (0x64) – Safety Controller Outputs $T \rightarrow O$

| WORD # | WORD NAME | DATA TYPE |
|--------|---|----------------|
| 0 | VO1 – VO16 (see Flags, section 2.5) | 16-bit integer |
| 1 | VO17 – VO32 (see Flags, section 2.5) | 16-bit integer |
| 2 | VO33 – VO48 (see Flags, section 2.5) | 16-bit integer |
| 3 | VO49 – VO64 (see Flags, section 2.5) | 16-bit integer |
| 4 | Fault bits for VO1 – VO16 (see Flags, section 2.5) | 16-bit integer |
| 5 | Fault bits for VO17 – VO32 (see Flags, section 2.5) | 16-bit integer |
| 6 | Fault bits for VO33 – VO48 (see Flags, section 2.5) | 16-bit integer |
| 7 | Fault bits for VO49 – VO64 (see Flags, section 2.5) | 16-bit integer |

PLC Input Assembly Instance 101 (0x65)- 104 Registers (Fault Index Words)

This Assembly Instance includes the status of the first 64 Virtual Outputs plus advanced information about potential error codes and the status of the 2 safety outputs.

PLC Input Assembly Instance 101 (0x65) – Safety Controller Outputs T→O

| WORD # | WORD NAME | DATA TYPE |
|--------|---|----------------|
| 0 | VO1 – VO16 (see Flags, section 2.5) | 16-bit integer |
| 1 | VO17 – VO32 (see Flags, section 2.5) | 16-bit integer |
| 2 | VO33 – VO48 (see Flags, section 2.5) | 16-bit integer |
| 3 | VO49 – VO64 (see Flags, section 2.5) | 16-bit integer |
| 4 | Fault bits for VO1 – VO16 (see Flags, section 2.5) | 16-bit integer |
| 5 | Fault bits for VO17 – VO32 (see Flags, section 2.5) | 16-bit integer |
| 6 | Fault bits for VO33 – VO48 (see Flags, section 2.5) | 16-bit integer |
| 7 | Fault bits for VO49 – VO64 (see Flags, section 2.5) | 16-bit integer |
| 8-39 | <i>reserved</i> | 16-bit integer |
| 40 | VO1 Fault Index | 16-bit integer |
| 41 | VO2 Fault Index | 16-bit integer |
| 42 | VO3 Fault Index | 16-bit integer |
| 43 | VO4 Fault Index | 16-bit integer |
| 44 | VO5 Fault Index | 16-bit integer |
| 45 | VO6 Fault Index | 16-bit integer |
| 46 | VO7 Fault Index | 16-bit integer |
| 47 | VO8 Fault Index | 16-bit integer |
| 48 | VO9 Fault Index | 16-bit integer |
| 49 | VO10 Fault Index | 16-bit integer |
| 50 | VO11 Fault Index | 16-bit integer |
| 51 | VO12 Fault Index | 16-bit integer |
| 52 | VO13 Fault Index | 16-bit integer |
| 53 | VO14 Fault Index | 16-bit integer |
| 54 | VO15 Fault Index | 16-bit integer |
| 55 | VO16 Fault Index | 16-bit integer |
| 56 | VO17 Fault Index | 16-bit integer |
| 57 | VO18 Fault Index | 16-bit integer |
| 58 | VO19 Fault Index | 16-bit integer |
| 59 | VO20 Fault Index | 16-bit integer |
| 60 | VO21 Fault Index | 16-bit integer |
| 61 | VO22 Fault Index | 16-bit integer |
| 62 | VO23 Fault Index | 16-bit integer |
| 63 | VO24 Fault Index | 16-bit integer |
| 64 | VO25 Fault Index | 16-bit integer |
| 65 | VO26 Fault Index | 16-bit integer |
| 66 | VO27 Fault Index | 16-bit integer |
| 67 | VO28 Fault Index | 16-bit integer |
| 68 | VO29 Fault Index | 16-bit integer |
| 69 | VO30 Fault Index | 16-bit integer |
| 70 | VO31 Fault Index | 16-bit integer |
| 71 | VO32 Fault Index | 16-bit integer |
| 72 | VO33 Fault Index | 16-bit integer |
| 73 | VO34 Fault Index | 16-bit integer |

| | | |
|-----|------------------|----------------|
| 74 | VO35 Fault Index | 16-bit integer |
| 75 | VO36 Fault Index | 16-bit integer |
| 76 | VO37 Fault Index | 16-bit integer |
| 77 | VO38 Fault Index | 16-bit integer |
| 78 | VO39 Fault Index | 16-bit integer |
| 79 | VO40 Fault Index | 16-bit integer |
| 80 | VO41 Fault Index | 16-bit integer |
| 81 | VO42 Fault Index | 16-bit integer |
| 82 | VO43 Fault Index | 16-bit integer |
| 83 | VO44 Fault Index | 16-bit integer |
| 84 | VO45 Fault Index | 16-bit integer |
| 85 | VO46 Fault Index | 16-bit integer |
| 86 | VO47 Fault Index | 16-bit integer |
| 87 | VO48 Fault Index | 16-bit integer |
| 88 | VO49 Fault Index | 16-bit integer |
| 89 | VO50 Fault Index | 16-bit integer |
| 90 | VO51 Fault Index | 16-bit integer |
| 91 | VO52 Fault Index | 16-bit integer |
| 92 | VO53 Fault Index | 16-bit integer |
| 93 | VO54 Fault Index | 16-bit integer |
| 94 | VO55 Fault Index | 16-bit integer |
| 95 | VO56 Fault Index | 16-bit integer |
| 96 | VO57 Fault Index | 16-bit integer |
| 97 | VO58 Fault Index | 16-bit integer |
| 98 | VO59 Fault Index | 16-bit integer |
| 99 | VO60 Fault Index | 16-bit integer |
| 100 | VO61 Fault Index | 16-bit integer |
| 101 | VO62 Fault Index | 16-bit integer |
| 102 | VO63 Fault Index | 16-bit integer |
| 103 | VO64 Fault Index | 16-bit integer |

Virtual Output Fault Index words

Note that not every Virtual Output has an associated Fault Index. See Chapter 5 for definitions of Fault Index words.

PLC Input Assembly Instance 102 (0x66)- 150 Registers (Error Log Only)

This Assembly Instance is used exclusively to access the fault log information on the Safety Controller. Note that this Assembly Instance contains no information about the status of the Virtual Outputs.

The Safety Controller can store 10 faults in the log. Fault #1 is the most recent fault while higher fault numbers represent successively older faults.

PLC Input Assembly Instance 102 (0x66) – Safety Controller Outputs T→O

| WORD # | WORD NAME | DATA TYPE |
|--------|--------------------------------|--------------------------------|
| 0-1 | Fault #1 Time Stamp | 32-bit integer |
| 2-9 | Fault #1 Name of I/O or System | 2-word length + 12-ASCII chars |
| 10 | Fault #1 Error Code | 16-bit integer |
| 11 | Fault #1 Advanced Error Code | 16-bit integer |
| 12 | Fault #1 Error Message Index | 16-bit integer |
| 13-14 | <i>reserved</i> | 16-bit integer |
| 15-16 | Fault #2 Time Stamp | 32-bit integer |
| 17-24 | Fault #2 Name of I/O or System | 2-word length + 12-ASCII chars |
| 25 | Fault #2 Error Code | 16-bit integer |
| 26 | Fault #2 Advanced Error Code | 16-bit integer |
| 27 | Fault #2 Error Message Index | 16-bit integer |
| 28-29 | <i>reserved</i> | 16-bit integer |
| 30-31 | Fault #3 Time Stamp | 32-bit integer |
| 32-39 | Fault #3 Name of I/O or System | 2-word length + 12-ASCII chars |
| 40 | Fault #3 Error Code | 16-bit integer |
| 41 | Fault #3 Advanced Error Code | 16-bit integer |
| 42 | Fault #3 Error Message Index | 16-bit integer |
| 43-44 | <i>reserved</i> | 16-bit integer |
| 45-46 | Fault #4 Time Stamp | 32-bit integer |
| 47-54 | Fault #4 Name of I/O or System | 2-word length + 12-ASCII chars |
| 55 | Fault #4 Error Code | 16-bit integer |
| 56 | Fault #4 Advanced Error Code | 16-bit integer |
| 57 | Fault #4 Error Message Index | 16-bit integer |
| 58-59 | <i>reserved</i> | 16-bit integer |
| 60-61 | Fault #5 Time Stamp | 32-bit integer |
| 62-69 | Fault #5 Name of I/O or System | 2-word length + 12-ASCII chars |
| 70 | Fault #5 Error Code | 16-bit integer |
| 71 | Fault #5 Advanced Error Code | 16-bit integer |
| 72 | Fault #5 Error Message Index | 16-bit integer |
| 73-74 | <i>reserved</i> | 16-bit integer |
| 75-76 | Fault #6 Time Stamp | 32-bit integer |
| 77-84 | Fault #6 Name of I/O or System | 2-word length + 12-ASCII chars |
| 85 | Fault #6 Error Code | 16-bit integer |
| 86 | Fault #6 Advanced Error Code | 16-bit integer |
| 87 | Fault #6 Error Message Index | 16-bit integer |
| 88-89 | <i>reserved</i> | 16-bit integer |
| 90-91 | Fault #7 Time Stamp | 32-bit integer |
| 92-99 | Fault #7 Name of I/O or System | 2-word length + 12-ASCII chars |
| 100 | Fault #7 Error Code | 16-bit integer |
| 101 | Fault #7 Advanced Error Code | 16-bit integer |
| 102 | Fault #7 Error Message Index | 16-bit integer |

| | | |
|---------|---------------------------------|--------------------------------|
| 103-104 | <i>reserved</i> | 16-bit integer |
| 105-106 | Fault #8 Time Stamp | 32-bit integer |
| 107-114 | Fault #8 Name of I/O or System | 2-word length + 12-ASCII chars |
| 115 | Fault #8 Error Code | 16-bit integer |
| 116 | Fault #8 Advanced Error Code | 16-bit integer |
| 117 | Fault #8 Error Message Index | 16-bit integer |
| 118-119 | <i>reserved</i> | 16-bit integer |
| 120-121 | Fault #9 Time Stamp | 32-bit integer |
| 122-129 | Fault #9 Name of I/O or System | 2-word length + 12-ASCII chars |
| 130 | Fault #9 Error Code | 16-bit integer |
| 131 | Fault #9 Advanced Error Code | 16-bit integer |
| 132 | Fault #9 Error Message Index | 16-bit integer |
| 133-134 | <i>reserved</i> | 16-bit integer |
| 135-136 | Fault #10 Time Stamp | 32-bit integer |
| 137-144 | Fault #10 Name of I/O or System | 2-word length + 12-ASCII chars |
| 145 | Fault #10 Error Code | 16-bit integer |
| 146 | Fault #10 Advanced Error Code | 16-bit integer |
| 147 | Fault #10 Error Message Index | 16-bit integer |
| 148-149 | <i>reserved</i> | 16-bit integer |

Fault Time Stamp

This is a 32-bit integer representation of the fault time, listed as the number of seconds since powering up the Safety Controller when the fault occurred.

Name of I/O or System

This is an ASCII-string describing the source of the fault.

Error Code

See Chapter 5 for Error Codes.

Advanced Error Code

See Chapter 5 for Advanced Error Codes.

Error Index Message

See Chapter 5 for Error Index Messages.


PLC Input Assembly Instance 103 (0x67)- 35 Registers (Reset/Cancel Delay)

This Assembly Instance is used to communicate the state of all 256 Virtual Outputs and Faults and to provide the feedback information required to execute virtual resets and cancel delays.

PLC Input Assembly Instance 103 (0x67) – Safety Controller Outputs T→O

| WORD # | WORD NAME | DATA TYPE |
|---------------|---|------------------|
| 0 | VO1 – VO16 (see Flags, section 2.5) | 16-bit integer |
| 1 | VO17 – VO32 (see Flags, section 2.5) | 16-bit integer |
| 2 | VO33 – VO48 (see Flags, section 2.5) | 16-bit integer |
| 3 | VO49 – VO64 (see Flags, section 2.5) | 16-bit integer |
| 4 | VO65 – VO80 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 5 | VO81 – VO96 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 6 | VO97 – VO112 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 7 | VO113 – VO128 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 8 | VO129 – VO144 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 9 | VO145 – VO160 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 10 | VO161 – VO176 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 11 | VO177 – VO192 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 12 | VO193 – VO208 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 13 | VO209 – VO224 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 14 | VO225 – VO240 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 15 | VO241 – VO256 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 16 | Fault bits for VO1 – VO16 (see Flags, section 2.5) | 16-bit integer |
| 17 | Fault bits for VO17 – VO32 (see Flags, section 2.5) | 16-bit integer |
| 18 | Fault bits for VO33 – VO48 (see Flags, section 2.5) | 16-bit integer |
| 19 | Fault bits for VO49 – VO64 (see Flags, section 2.5) | 16-bit integer |
| 20 | Fault bits for VO65 – VO80 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 21 | Fault bits for VO81 – VO96 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 22 | Fault bits for VO97 – VO112 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 23 | Fault bits for VO113 – VO128 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 24 | Fault bits for VO129 – VO144 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 25 | Fault bits for VO145 – VO160 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 26 | Fault bits for VO161 – VO176 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 27 | Fault bits for VO177 – VO192 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 28 | Fault bits for VO193 – VO208 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 29 | Fault bits for VO209 – VO224 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 30 | Fault bits for VO225 – VO240 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 31 | Fault bits for VO241 – VO256 (see Extended Flags, section 2.5.1) | 16-bit integer |
| 32-33 | Virtual Reset/Cancel Delay (1-16) Feedback [RCD Feedback Register Bits] | 32-bit integer |
| 34 | RCD Actuation Code Feedback [RCD Enable Feedback Register] | 16-bit integer |

2.4 Fault Examples

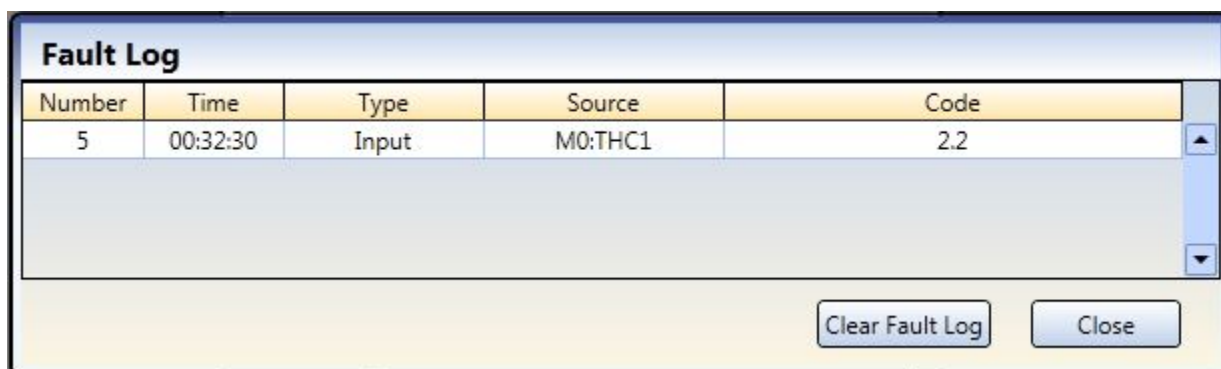

Here is a fault from the XS26-2E software fault log.

| | | | | |
|-------------------|-------------------------------|---------|---------|----------|
| - XS26:I | { ... } | { ... } | | AB:ETHER |
| - XS26:I.Data | { ... } | { ... } | Decimal | INT[150] |
| + XS26:I.Data[0] | Time Stamp | 1950 | Decimal | INT |
| + XS26:I.Data[1] | | 0 | Decimal | INT |
| + XS26:I.Data[2] | I/O or System Name length | 4 | Decimal | INT |
| + XS26:I.Data[3] | (# of ASCII characters) | 0 | Decimal | INT |
| + XS26:I.Data[4] | | 'HT' | ASCII | INT |
| + XS26:I.Data[5] | | '1C' | ASCII | INT |
| + XS26:I.Data[6] | I/O or System Name (space for | 0 | Decimal | INT |
| + XS26:I.Data[7] | 12 ASCII characters) | 0 | Decimal | INT |
| + XS26:I.Data[8] | | 0 | Decimal | INT |
| + XS26:I.Data[9] | | 0 | Decimal | INT |
| + XS26:I.Data[10] | Error Code | 2 | Decimal | INT |
| + XS26:I.Data[11] | Advanced Error Code | 2 | Decimal | INT |
| + XS26:I.Data[12] | Fault Error Message Index | 202 | Decimal | INT |
| + XS26:I.Data[13] | | 34 | Decimal | INT |
| + XS26:I.Data[14] | reserved | 1 | Decimal | INT |

And the same fault as seen in the EtherNet/IP registers.

Note the ControlLogix string format, wherein the ASCII characters are shown, two per register, "backwards". "THC1" becomes "HT" in register 4, followed by "1C" in register 5.

Fault Error Message Index 202 = Fault Code 2.2 (Simultaneity Fault). See Chapter 5 for more Fault information.

| Fault Log | | | | |
|---|----------|-------|---------|------|
| Number | Time | Type | Source | Code |
| 6 | 00:35:25 | Input | M0:THC1 | 2.2 |
| 5 | 00:32:30 | Input | M0:THC1 | 2.2 |
| <div>Clear Fault Log</div> <div>Close</div> | | | | |

Now we see two faults in the XS26-2E software fault log.

| | | | | |
|-------------------|-------------------------------|-------|---------|-----------------|
| - XS26:I | {...} | {...} | | AB:ETHERNET_... |
| - XS26:I.Data | {...} | {...} | Decimal | INT[150] |
| + XS26:I.Data[0] | Time Stamp | 2125 | Decimal | INT |
| + XS26:I.Data[1] | | 0 | Decimal | INT |
| + XS26:I.Data[2] | I/O or System Name length | 4 | Decimal | INT |
| + XS26:I.Data[3] | (# of ASCII characters) | 0 | Decimal | INT |
| + XS26:I.Data[4] | | 'HT' | ASCII | INT |
| + XS26:I.Data[5] | | '1C' | ASCII | INT |
| + XS26:I.Data[6] | I/O or System Name (space for | 0 | Decimal | INT |
| + XS26:I.Data[7] | 12 ASCII characters) | 0 | Decimal | INT |
| + XS26:I.Data[8] | | 0 | Decimal | INT |
| + XS26:I.Data[9] | | 0 | Decimal | INT |
| + XS26:I.Data[10] | Error Code | 2 | Decimal | INT |
| + XS26:I.Data[11] | Advanced Error Code | 2 | Decimal | INT |
| + XS26:I.Data[12] | Fault Error Message Index | 202 | Decimal | INT |
| + XS26:I.Data[13] | reserved | 34 | Decimal | INT |
| + XS26:I.Data[14] | | 1 | Decimal | INT |
| + XS26:I.Data[15] | Time Stamp | 1950 | Decimal | INT |
| + XS26:I.Data[16] | | 0 | Decimal | INT |
| + XS26:I.Data[17] | I/O or System Name length | 4 | Decimal | INT |
| + XS26:I.Data[18] | (# of ASCII characters) | 0 | Decimal | INT |
| + XS26:I.Data[19] | | 'HT' | ASCII | INT |
| + XS26:I.Data[20] | | '1C' | ASCII | INT |
| + XS26:I.Data[21] | I/O or System Name (space for | 0 | Decimal | INT |
| + XS26:I.Data[22] | 12 ASCII characters) | 0 | Decimal | INT |
| + XS26:I.Data[23] | | 0 | Decimal | INT |
| + XS26:I.Data[24] | | 0 | Decimal | INT |
| + XS26:I.Data[25] | Error Code | 2 | Decimal | INT |
| + XS26:I.Data[26] | Advanced Error Code | 2 | Decimal | INT |
| + XS26:I.Data[27] | Fault Error Message Index | 202 | Decimal | INT |
| + XS26:I.Data[28] | reserved | 34 | Decimal | INT |
| + XS26:I.Data[29] | | 1 | Decimal | INT |

And the two faults in the PLC registers. Note how the newer Error #2 pushes Error #1 down the list.

2.5 Flags

Words 0 through 7, defined below, appear as the first 8 words in Assembly Instances 100, 101, and 103.

Word #0, Virtual Output 1-16, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| VO16 | VO15 | VO14 | VO13 | VO12 | VO11 | VO10 | VO9 | VO8 | VO7 | VO6 | VO5 | VO4 | VO3 | VO2 | VO1 |

Word #1, Virtual Output 17-32, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO32 | VO31 | VO30 | VO29 | VO28 | VO27 | VO26 | VO25 | VO24 | VO23 | VO22 | VO21 | VO20 | VO19 | VO18 | VO17 |

Word #2, Virtual Output 33-48, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO48 | VO47 | VO46 | VO45 | VO44 | VO43 | VO42 | VO41 | VO40 | VO39 | VO38 | VO37 | VO36 | VO35 | VO34 | VO33 |

Word #3, Virtual Output 49-64, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO64 | VO63 | VO62 | VO61 | VO60 | VO59 | VO58 | VO57 | VO56 | VO55 | VO54 | VO53 | VO52 | VO51 | VO50 | VO49 |

Word #4, Fault Flag bits for Virtual Output 1-16, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| VO16 | VO15 | VO14 | VO13 | VO12 | VO11 | VO10 | VO9 | VO8 | VO7 | VO6 | VO5 | VO4 | VO3 | VO2 | VO1 |

Word #5, Fault Flag bits for Virtual Output 17-32 Fault Flag, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO32 | VO31 | VO30 | VO29 | VO28 | VO27 | VO26 | VO25 | VO24 | VO23 | VO22 | VO21 | VO20 | VO19 | VO18 | VO17 |

Word #6, Fault Flag bits for Virtual Output 33-48, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO48 | VO47 | VO46 | VO45 | VO44 | VO43 | VO42 | VO41 | VO40 | VO39 | VO38 | VO37 | VO36 | VO35 | VO34 | VO33 |

Word #7, Fault Flag bits for Virtual Output 49-64, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO64 | VO63 | VO62 | VO61 | VO60 | VO59 | VO58 | VO57 | VO56 | VO55 | VO54 | VO53 | VO52 | VO51 | VO50 | VO49 |

2.5.1 Extended Flags

In addition to the first 64 virtual outputs shown above, Assembly Instance 103 adds 192 more (for a total of 256). The fault flag bits are shifted downward to make room for all 256 virtual outputs to be together.

Words 0 through 3 are the same as seen in section 2.5. In the case of Assembly Instance 103 the following changes are made.

Word #4 – Virtual Outputs 65 through 80, where VO65 is found in bit 0 and VO80 in bit 15.

Word #5 – Virtual Outputs 81 through 96, where VO81 is found in bit 0 and VO96 in bit 15.

Word #6 – Virtual Outputs 97 through 112, where VO97 is found in bit 0 and VO112 in bit 15.

Word #7 – Virtual Outputs 113 through 128, where VO113 is found in bit 0 and VO128 in bit 15.

Word #8 – Virtual Outputs 129 through 144, where VO129 is found in bit 0 and VO144 in bit 15.

Word #9 – Virtual Outputs 145 through 160, where VO145 is found in bit 0 and VO160 in bit 15.

Word #10 – Virtual Outputs 161 through 176, where VO161 is found in bit 0 and VO176 in bit 15.

Word #11 – Virtual Outputs 177 through 192, where VO177 is found in bit 0 and VO192 in bit 15.

Word #12 – Virtual Outputs 193 through 208, where VO193 is found in bit 0 and VO208 in bit 15.

Word #13 – Virtual Outputs 209 through 224, where VO209 is found in bit 0 and VO224 in bit 15.

Word #14 – Virtual Outputs 225 through 240, where VO225 is found in bit 0 and VO240 in bit 15.

Word #15 – Virtual Outputs 241 through 256, where VO241 is found in bit 0 and VO256 in bit 15.

Word 16 through 19 are the same as Words 4 through 7 as seen in section 2.5. Assembly Instance 103 also includes more fault flag bits, as seen below.

Word #20 – Fault Bits for VO65 through 80, where the fault for VO65 is found in bit 0 and VO80 in bit 15.

This pattern continues for Words 21 through 31, covering the remainder of the fault bits for the 256 total Virtual Outputs.

2.6 RSLogix5000 Configuration (Explicit Messaging)

The XS/SC26-2E supports a number of different Explicit Messaging connections. In addition to the Assembly Instances from the previous section, there are some extra Assembly Instances that can only be accessed via Explicit Messaging.

2.6.1 Choices for Explicit Message Connections

IO Assembly Instances

To get a copy of one of the Assembly Instances from section 2.2.3, use Service Type 14 (Get Attribute Single, hex 0E), Class 4, Instance 100 (0x64) or 101 (0x65) or 102 (0x66), Attribute 3. A successful Explicit Message of this type will return the appropriate Assembly Instance as show in section 2.3.3. See an example of this type of connection in section 2.6.2.1.

Virtual Output Status

To get the current status of all 64 Virtual Outputs, use Service Type 14 (Get Attribute Single, hex 0E), Class 0x64, Instance 1, Attribute 1. A successful Explicit Message of this type will return two 32-bit integers representing the status of VO1 through VO64. See an example of this type of connection in section 2.6.2.2.

Virtual Output Fault Bits

To get the current status of all 64 Virtual Output Fault Bits, use Service Type 14 (Get Attribute Single, hex 0E), Class 0x65, Instance 1, Attribute 1. A successful Explicit Message of this type will return two 32-bit integers representing the status of the Fault Bits for VO1 through VO64.

Individual Fault Index Values

To get a specific Fault Index Value for one of the 64 Virtual Outputs, use Service Type 14 (Get Attribute Single, hex 0E), Class 0x6F, Instance 1-64 (choose one), Attribute 1. A successful Explicit Message of this type will return a single 16-bit register representing the Fault Index value for one of the Virtual Outputs.

Individual Fault Log Entry

To get a specific entry from the 10 entry Fault Log, use Service Type 14 (Get Attribute Single, hex 0E), Class 0x71, Instance 1, Attribute 1-10 (choose one). A successful Explicit Message of this type will return a single 15 register entry from the fault log, as defined below. Note that Attribute = 1 references the most recent entry in the error log, while Attribute = 10 is the oldest entry.

| WORD # | WORD NAME | DATA TYPE |
|--------|--------------------------------|--------------------------------|
| 0-1 | Fault #1 Time Stamp | 32-bit integer |
| 2-9 | Fault #1 Name of I/O or System | 2-word length + 12-ASCII chars |
| 10 | Fault #1 Error Code | 16-bit integer |
| 11 | Fault #1 Advanced Error Code | 16-bit integer |
| 12 | Fault #1 Error Message Index | 16-bit integer |
| 13-14 | <i>reserved</i> | 16-bit integer |

System Information

Some system information can be accessed using Service Type 14 (Get Attribute Single, hex 0E), Class 0x72, Instance 1, Attribute 1-4 (choose one, see table below). A successful Explicit Message of this type will return the system information seen below (size and data type vary). See an example of this type of connection in section 2.6.2.3.


| Attribute | System Value | Data Type |
|-----------|--------------------|--------------------------------|
| 1 | Seconds Since Boot | 32-bit integer |
| 2 | Operating Mode | 16-bit integer |
| 3 | ConfigName | 2-word length + 16-ASCII chars |
| 4 | Config CRC | 32-bit integer |

2.6.2 Examples of Explicit Message Connections


2.6.2.1 Assembly Instance 0x64 (100)

To get the 100 (0x64) Assembly Instance, use Service Type 14 (Get Attribute Single, hex 0E), Class 4, Instance 100, Attribute 3. A successful Explicit Message of this type will return all 8 registers of the 100 (0x64) Assembly Instance, as defined in section 2.3.3.

Here is the MSG command for this explicit message.

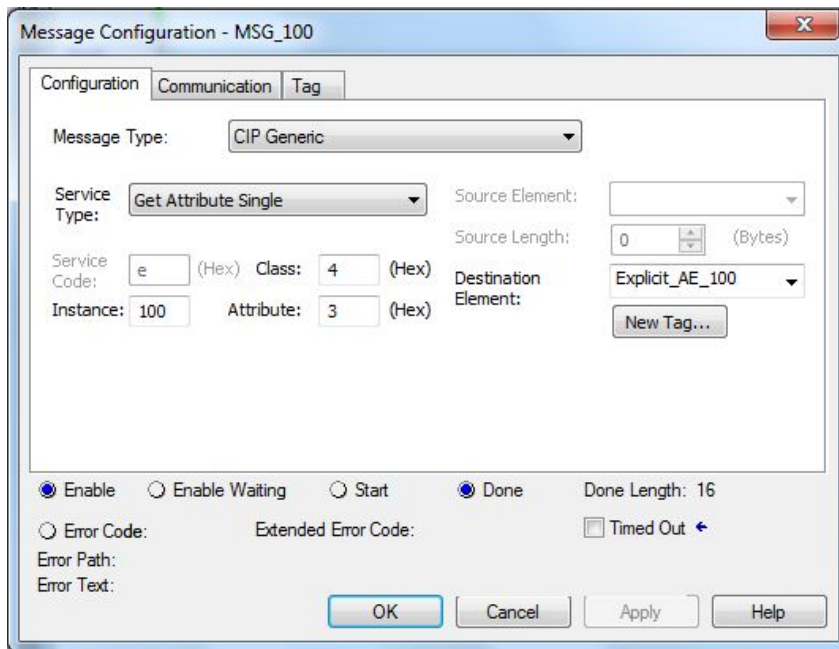

The 'Message Configuration - MSG_100' dialog box is shown with the 'Configuration' tab selected. The 'Message Type' is set to 'CIP Generic'. The 'Service Type' is 'Get Attribute Single'. The 'Service Code' is 'e' (Hex), 'Class' is '4' (Hex), 'Instance' is '100', and 'Attribute' is '3' (Hex). The 'Source Element' is empty, 'Source Length' is '0' (Bytes), and 'Destination Element' is 'Explicit_AE_100'. There is a 'New Tag...' button. At the bottom, the 'Done' radio button is selected, and 'Done Length' is '16'. There are also fields for 'Error Code', 'Extended Error Code', 'Error Path', and 'Error Text', and buttons for 'OK', 'Cancel', 'Apply', and 'Help'.

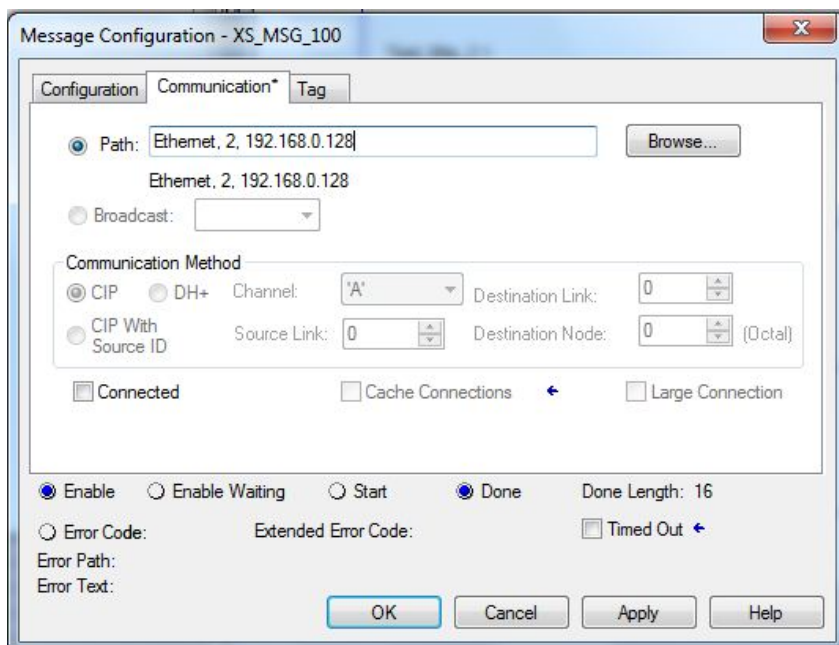

The 'Message Configuration - XS_MSG_100' dialog box is shown with the 'Communication' tab selected. The 'Path' is 'Ethernet, 2, 192.168.0.128' with a 'Browse...' button. The 'Broadcast' dropdown is empty. Under 'Communication Method', 'CIP' is selected, 'Channel' is 'A', 'Destination Link' is '0', 'Source Link' is '0', and 'Destination Node' is '0' (Octal). There are checkboxes for 'Connected', 'Cache Connections', and 'Large Connection'. At the bottom, the 'Done' radio button is selected, and 'Done Length' is '16'. There are also fields for 'Error Code', 'Extended Error Code', 'Error Path', and 'Error Text', and buttons for 'OK', 'Cancel', 'Apply', and 'Help'.

Here is the user defined array (called **XS_Explicit_AE_100**) showing all 8 registers.

| | | | | |
|-------------------------|---------|---------|---------|--------|
| - XS_Explicit_AE_100 | { ... } | { ... } | Decimal | INT[8] |
| + XS_Explicit_AE_100[0] | 2 | | Decimal | INT |
| + XS_Explicit_AE_100[1] | 0 | | Decimal | INT |
| + XS_Explicit_AE_100[2] | 0 | | Decimal | INT |
| + XS_Explicit_AE_100[3] | 0 | | Decimal | INT |
| + XS_Explicit_AE_100[4] | 0 | | Decimal | INT |
| + XS_Explicit_AE_100[5] | 0 | | Decimal | INT |
| + XS_Explicit_AE_100[6] | 0 | | Decimal | INT |
| + XS_Explicit_AE_100[7] | 0 | | Decimal | INT |

In this example data, we can see that VO2 is currently ON. VO2 is word 0, bit 1 $\rightarrow 2^1 = 2$

2.6.2.2 Virtual Output Status

To get the current status of all 64 Virtual Outputs, use Service Type 14 (Get Attribute Single, hex 0E), Class 0x64, Instance 1, Attribute 1. A successful Explicit Message of this type will return two 32-bit integers representing the status of VO1 through VO64.

Here is the MSG command for this explicit message.

Message Configuration - XS_VO_MSG

Configuration Communication Tag

Message Type: CIP Generic

Service Type: Get Attribute Single

Source Element:

Source Length: 0 (Bytes)

Service Code: e (Hex) Class: 64 (Hex) Destination Element: XS_Explicit_VO_Statu

Instance: 1 Attribute: 1 (Hex)

New Tag...


☐ Enable
 ☐ Enable Waiting
 ☐ Start
 ☐ Done
 Done Length: 0

☐ Error Code:
 Extended Error Code:
 ☐ Timed Out

Error Path:

Error Text:

OK Cancel Apply Help

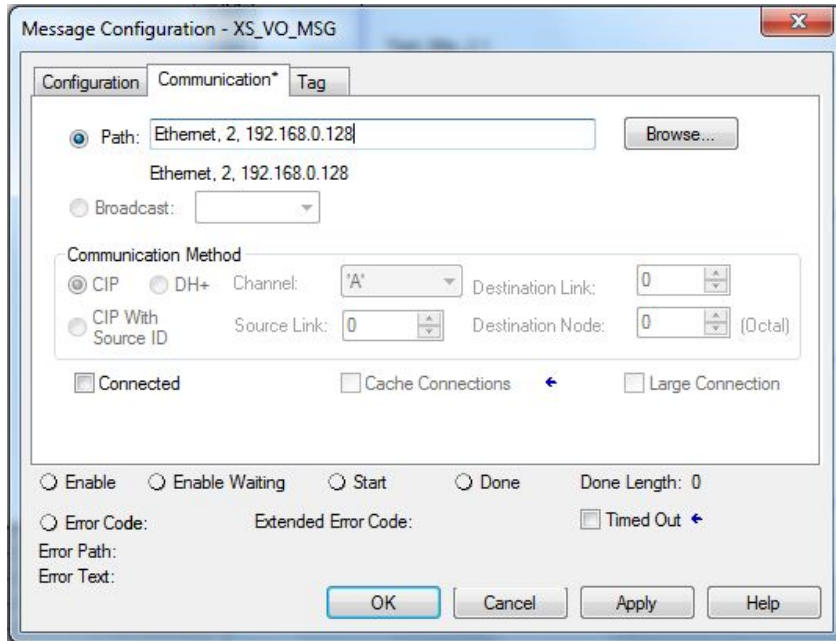

Here is the user defined array (called **XS_Explicit_VO_Status**) showing two 32-bit integers.

| | | | | |
|----------------------------|---------|---------|---------|---------|
| - XS_Explicit_VO_Status | { ... } | { ... } | Decimal | DINT[2] |
| + XS_Explicit_VO_Status[0] | 1 | | Decimal | DINT |
| + XS_Explicit_VO_Status[1] | 0 | | Decimal | DINT |

In this example data, we can see that VO2 is currently ON. VO2 is word 0, bit 1 $\rightarrow 2^1 = 2$

2.6.2.3 System Information

Some system information can be accessed using EtherNet/IP Explicit Messages. One such piece of data is the Configuration Name from the safety controller. To get this information, use Service Type 14 (Get Attribute Single, hex 0E), Class 0x72, Instance 1, Attribute 3. A successful Explicit Message of this type will return the 32-bit length and ASCII string comprising the XS26's Configuration Name.

Here is the MSG command for this explicit message.

The screenshot shows the 'Message Configuration - XS_Explicit_Config_Name_MSG' dialog box with the 'Configuration' tab selected. The 'Message Type' is set to 'CIP Generic'. The 'Service Type' is 'Get Attribute Single'. The 'Service Code' is 'e' (Hex), 'Class' is '72' (Hex), 'Instance' is '1', and 'Attribute' is '3' (Hex). The 'Source Element' is empty, 'Source Length' is '0' (Bytes), and 'Destination Element' is 'XS_Explicit_Config_N'. There is a 'New Tag...' button. At the bottom, there are radio buttons for 'Enable', 'Enable Waiting', 'Start', and 'Done', with 'Done Length: 0'. There are also fields for 'Error Code:', 'Extended Error Code:', 'Error Path:', and 'Error Text:'. The 'Timed Out' checkbox is checked. The 'OK', 'Cancel', 'Apply', and 'Help' buttons are at the bottom right.

The screenshot shows the 'Message Configuration - XS_Explicit_Config_Name_MSG' dialog box with the 'Communication*' tab selected. The 'Path' is 'Ethernet, 2, 192.168.0.128' with a 'Browse...' button. Below it, 'Ethernet, 2, 192.168.0.128' is listed. The 'Broadcast' checkbox is unchecked. The 'Communication Method' section has 'CIP' selected, 'Channel' is 'A', 'Destination Link' is '0', 'Source Link' is '0', and 'Destination Node' is '0' (Octal). The 'CIP With Source ID' checkbox is unchecked. At the bottom, there are radio buttons for 'Enable', 'Enable Waiting', 'Start', and 'Done', with 'Done Length: 0'. There are also fields for 'Error Code:', 'Extended Error Code:', 'Error Path:', and 'Error Text:'. The 'Timed Out' checkbox is checked. The 'Connected', 'Cache Connections', and 'Large Connection' checkboxes are unchecked. The 'OK', 'Cancel', 'Apply', and 'Help' buttons are at the bottom right.

Here is the user defined array (called **XS_Explicit_Config_Name**) showing all 8 registers.

| | | | | |
|--------------------------------|---------|---------|---------|---------|
| [-] XS_Explicit_Config_Name | { ... } | { ... } | Decimal | INT[10] |
| [+] XS_Explicit_Config_Name[0] | 12 | | Decimal | INT |
| [+] XS_Explicit_Config_Name[1] | 0 | | Decimal | INT |
| [+] XS_Explicit_Config_Name[2] | '1B' | | ASCII | INT |
| [+] XS_Explicit_Config_Name[3] | 'na' | | ASCII | INT |
| [+] XS_Explicit_Config_Name[4] | 'k' | | ASCII | INT |
| [+] XS_Explicit_Config_Name[5] | 'oC' | | ASCII | INT |
| [+] XS_Explicit_Config_Name[6] | 'fn' | | ASCII | INT |
| [+] XS_Explicit_Config_Name[7] | 'gi' | | ASCII | INT |
| [+] XS_Explicit_Config_Name[8] | 0 | | Decimal | INT |
| [+] XS_Explicit_Config_Name[9] | 0 | | Decimal | INT |

Note that the first two registers are a 32-bit integer describing how many ASCII characters are coming in the Config Name. Here that value is "12". ASCII characters are packed, two per register, in the so-called ControlLogix String Format. The Config name here is "Blank Config", but the ControlLogix string format displays those characters, two per line, in reverse order.

2.6.2.4 Step-by-Step Explicit Messages


Making an explicit message connection from scratch in an Allen-Bradley PLC program requires the following steps:

1. Make a new tag with the Message data type
2. Make a new tag to act as a Destination Element (a 16-bit array large enough to hold the data you'll be requesting).
3. Add a MSG command to your ladder logic (using the Message tag from #1 and the Destination Element from #2). The Class, Instance, and Attribute values depend on the data desired.
4. In the Communication tab of the MSG command, type in the Path to the safety controller:
e.g. Ethernet, 2, 192.168.0.128
where
the "2" is the slot number for the EtherNet/IP card in the PLC rack and the IP Address shown is that of the safety controller


2.7 EIP on Omron PLC Configuration

The following screenshots show an EtherNet/IP Connection between an XS26 and an Omron CJ2H PLC.


1. Open the Omron Network Configurator software.

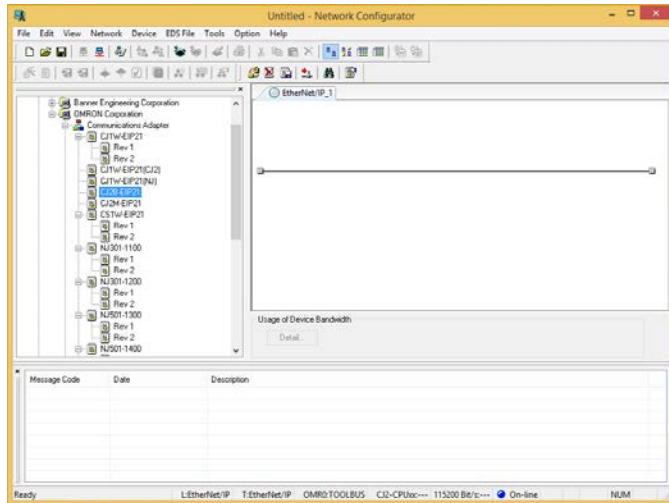


2. Add the correct PLC to the network. Then right click on the PLC to change its IP address.

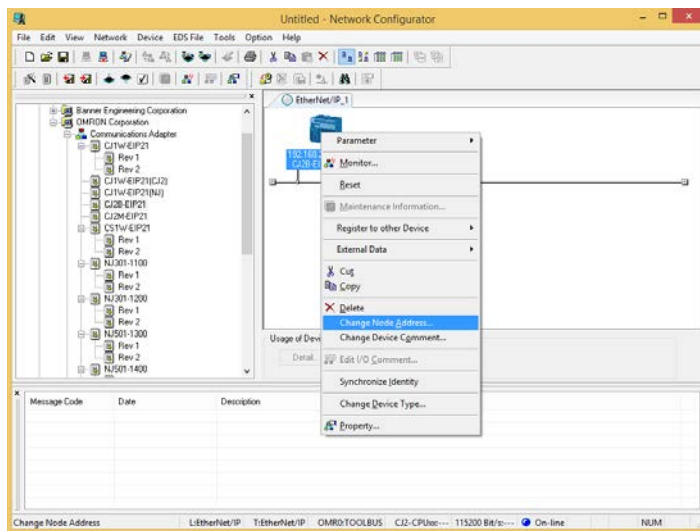


3. Here is the PLC's IP address

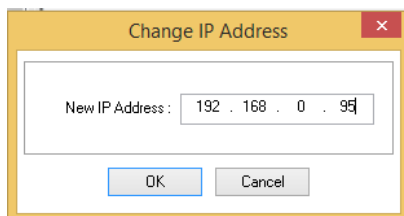


4. Install the XS26 EDS file. Choose EDS_File, then Install.

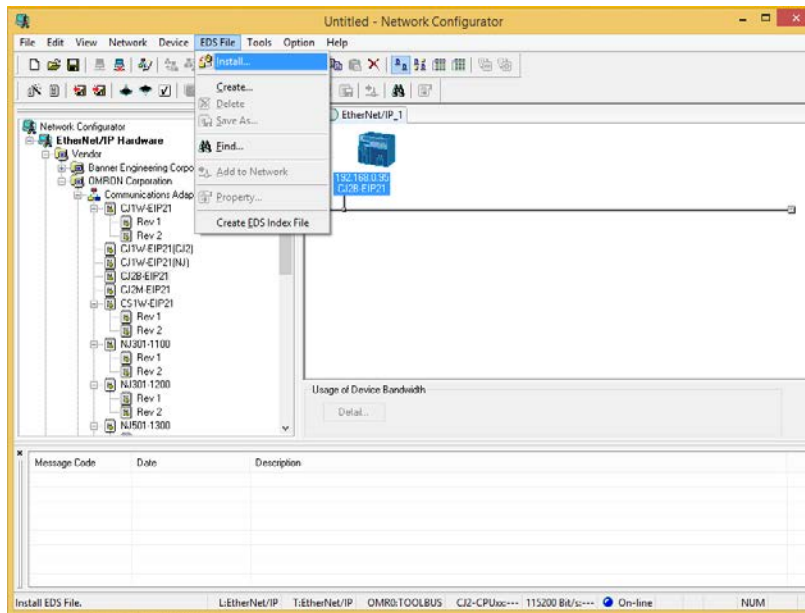


5. Choose the EDS file.

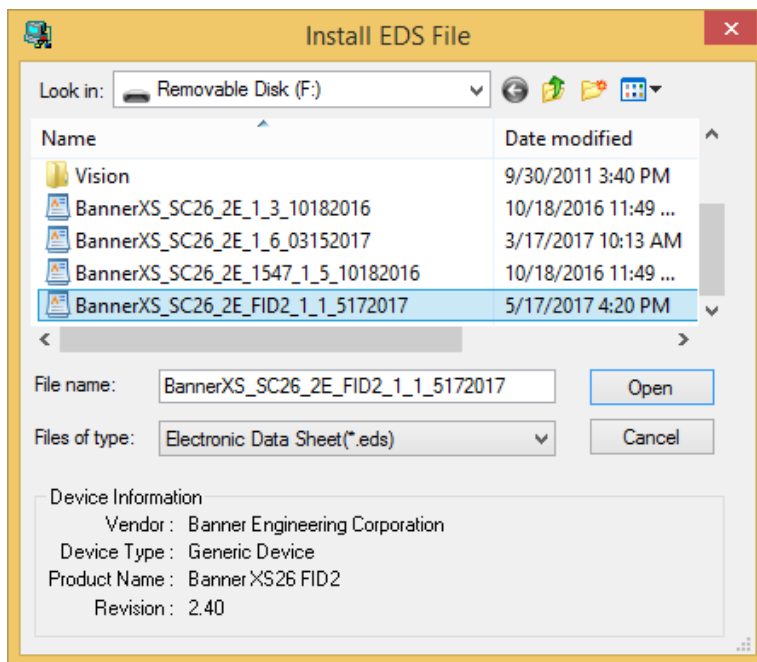


6. Double click the new item from the list at left to add it to the network.

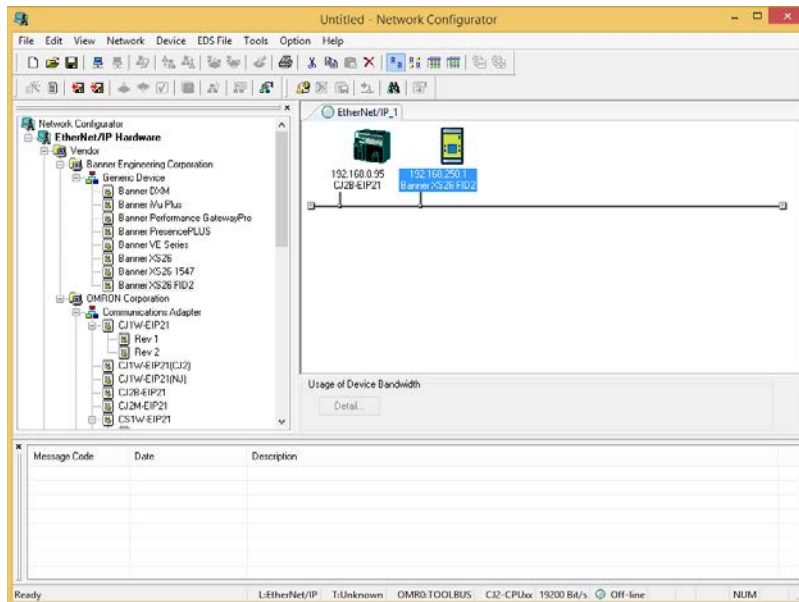



7. Right click on the safety controller to change the IP address.

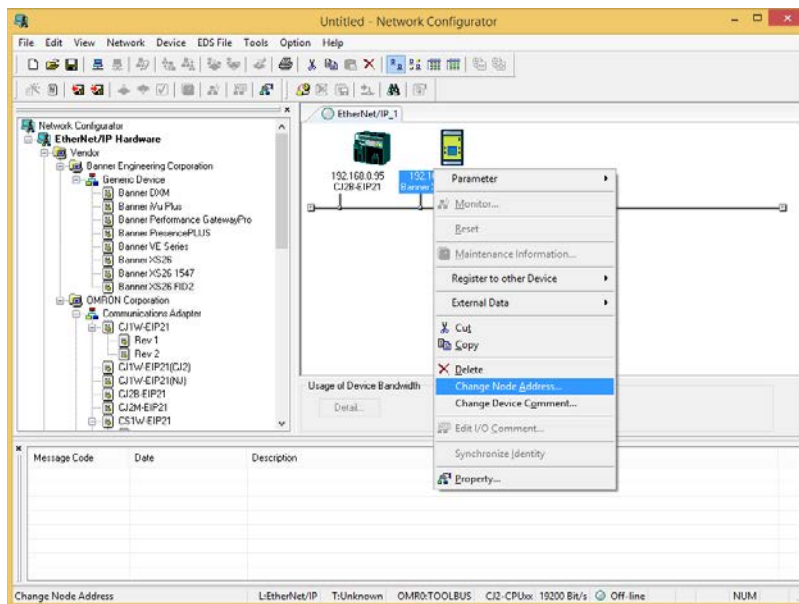


8. Enter the safety controller's IP address.

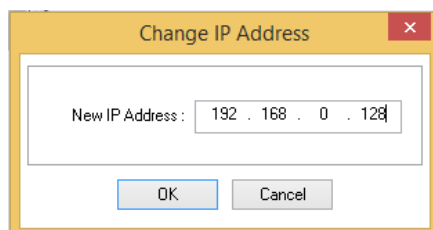


9. Double click on the PLC icon to edit the device parameters. Choose the safety controller from the “Unregister Device List”, then click the down arrow to send it to the “Register Device List”.

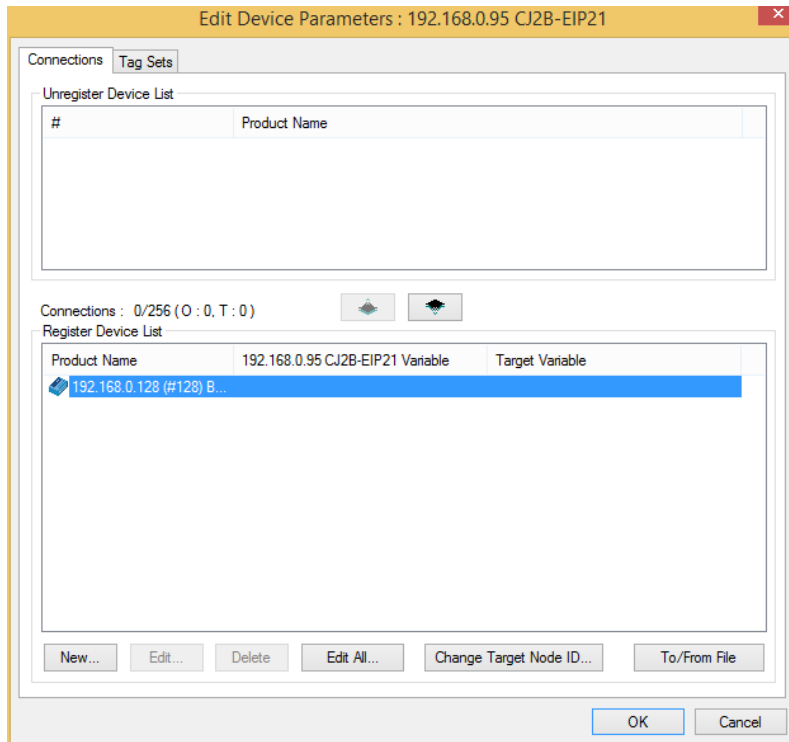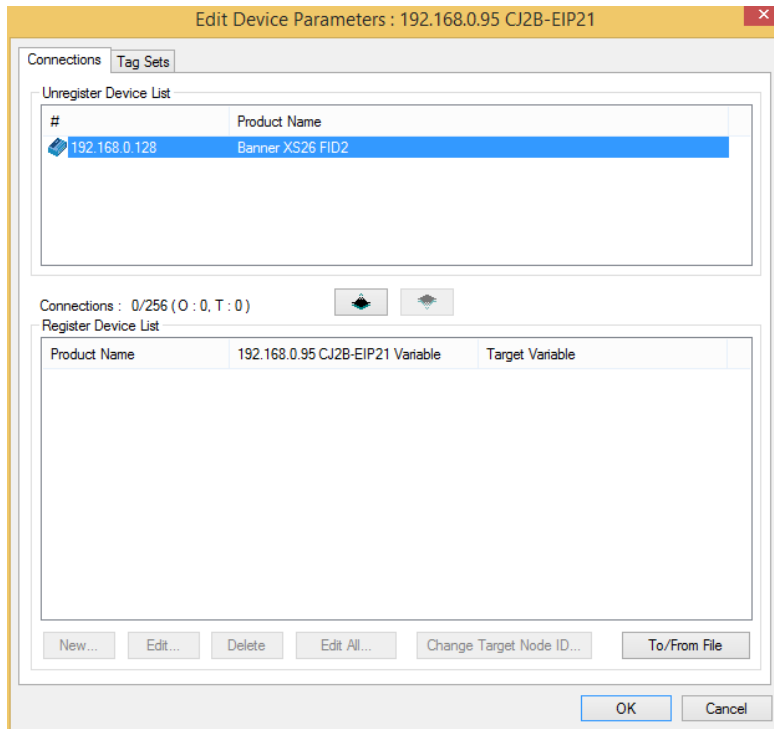

10. Click on the “Tag Sets” tab (to see the window below), then click the “Edit Tags...” button.

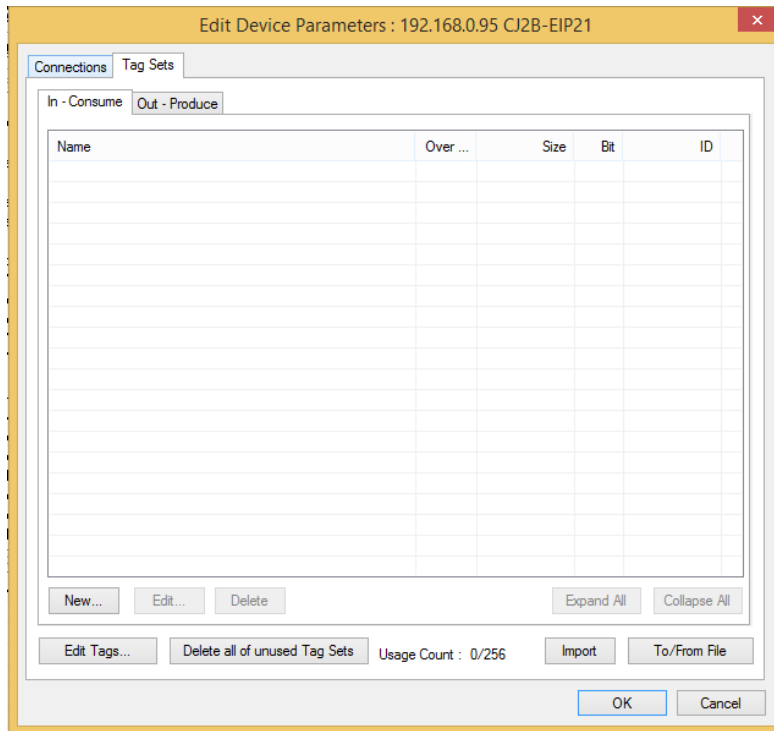

11. Choose the “In - Consume” tab, then click “New”.

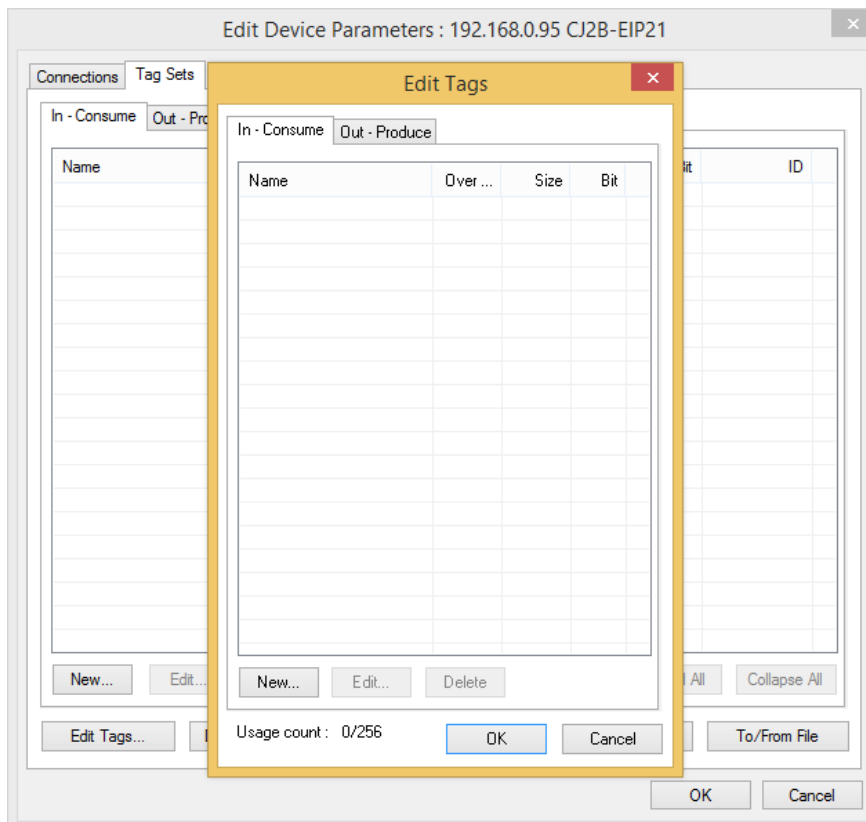

12. Choose an appropriate type and size CPU Data Area. In our case, the safety controller will be sending out 16-bit words, so the DM area works. Choose a number of bytes equal to the desired EIP assembly instance. Here we are looking at “In- Consume” (from the PLC’s point of view), which is the T→O assemblies. See the **XS/SC26-2E FID 2 Industrial Ethernet User’s Guide**, section 2.3 for more information on the assembly objects. Your choices are:
- a. VO Status/Fault - 100 (0x64), size 16 bytes
 - b. Fault Index Words - 101 (0x65), size 208 bytes
 - c. Error Log Only - 102 (0x66), size 300 bytes
 - d. Reset/Cancel Delay - 103 (0x67), size 70 bytes


The screenshot shows the 'Edit Tags' dialog box with the 'In - Consume' tab selected. An 'Edit Tag' sub-dialog is open, showing the following fields:

- Name: D00000
- Size: 208 Byte
- ☐ Use Bit Data
- Bit Size: 0 Bit
- Over Load: ☐ Disable ☒ Enable

Buttons at the bottom of the 'Edit Tag' dialog are 'Regist' and 'Close'. The 'Edit Tags' dialog has a table with columns 'Name', 'Over ...', 'Size', and 'Bit'. At the bottom of the 'Edit Tags' dialog are buttons 'New...', 'Edit...', 'Delete', 'Usage count : 0/256', 'OK', and 'Cancel'.


13. After filling in the Name (remember that this refers to a CPU Data Area on the PLC) and size in bytes, click the “Regist” button, then click “Close”.

14. Click on the Out- Produce tab, then click “New”.

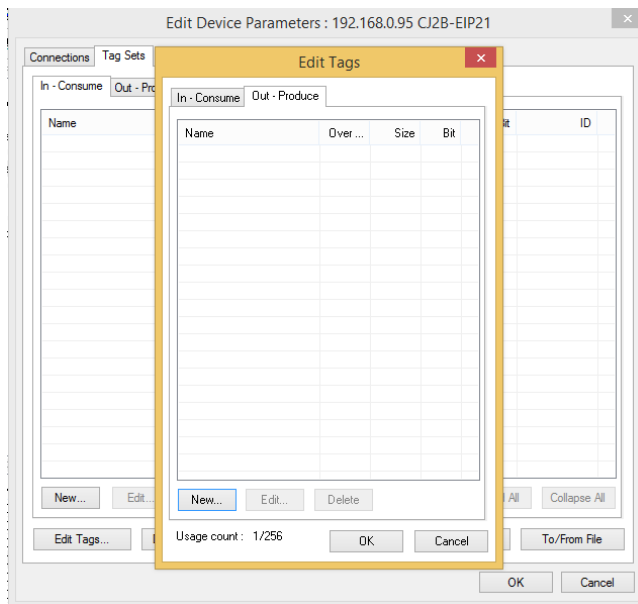


15. Choose an appropriate type and size CPU Data Area. Your only choice is:


- a. 112 (0x70), size 22 bytes

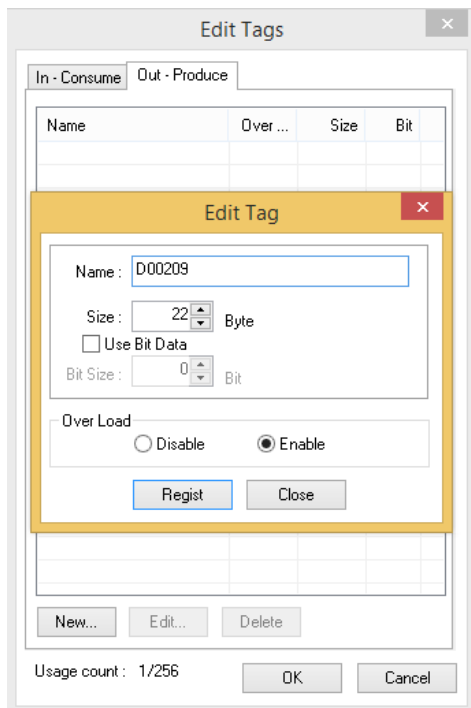


16. After filling in the Name (remember that this refers to a CPU Data Area on the PLC) and size in bytes, click the "Regist" button, then click "Close".
17. Click OK on the Edit Tags window, then click Yes when the software tells you "The new Tags will be registered as Tag sets."

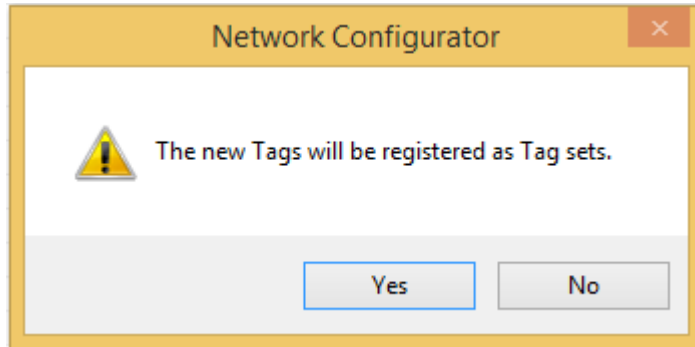


18. Double check the tags by clicking on both the In- Consume and Out- Produce tabs.

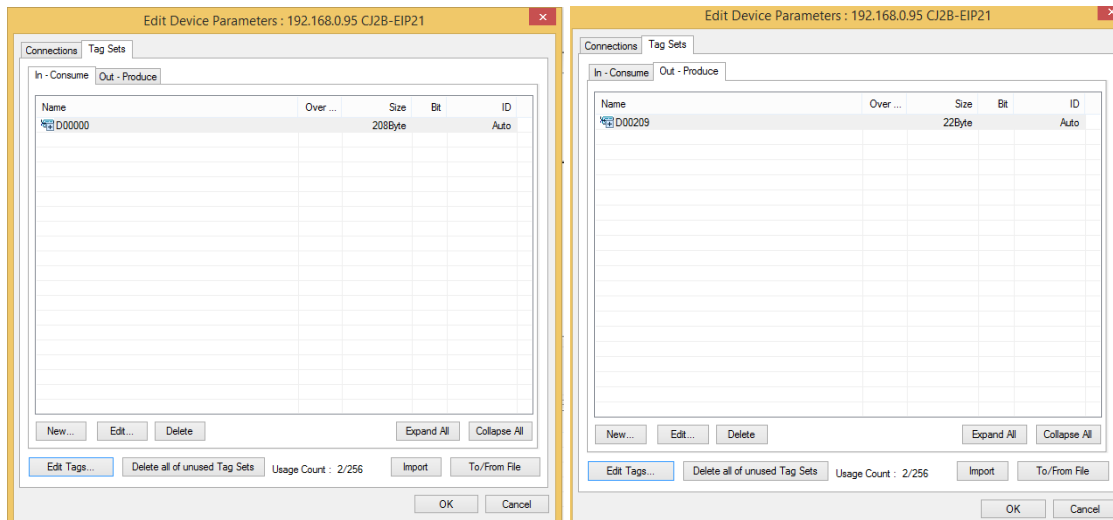


19. Go back to the “Connections” tab (to see the window below) then double click on the safety controller seen in the “Register Device List” to bring up the Edit Connection window.

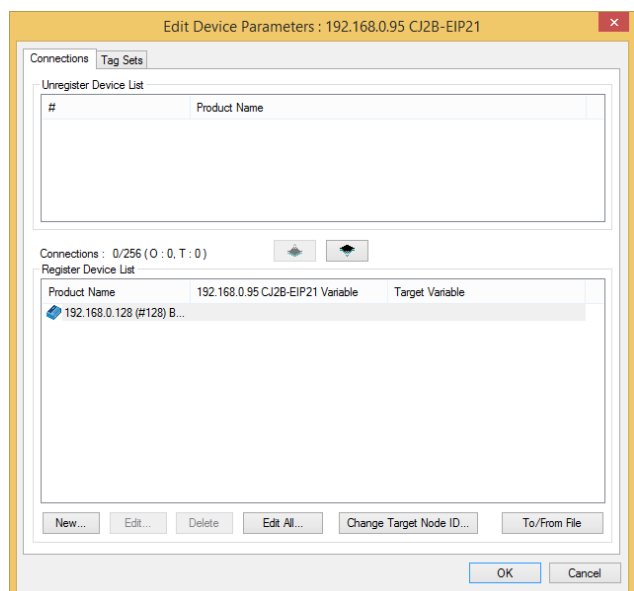


20. Fill in the connections and RPI, then click “Register”, then “Close”.

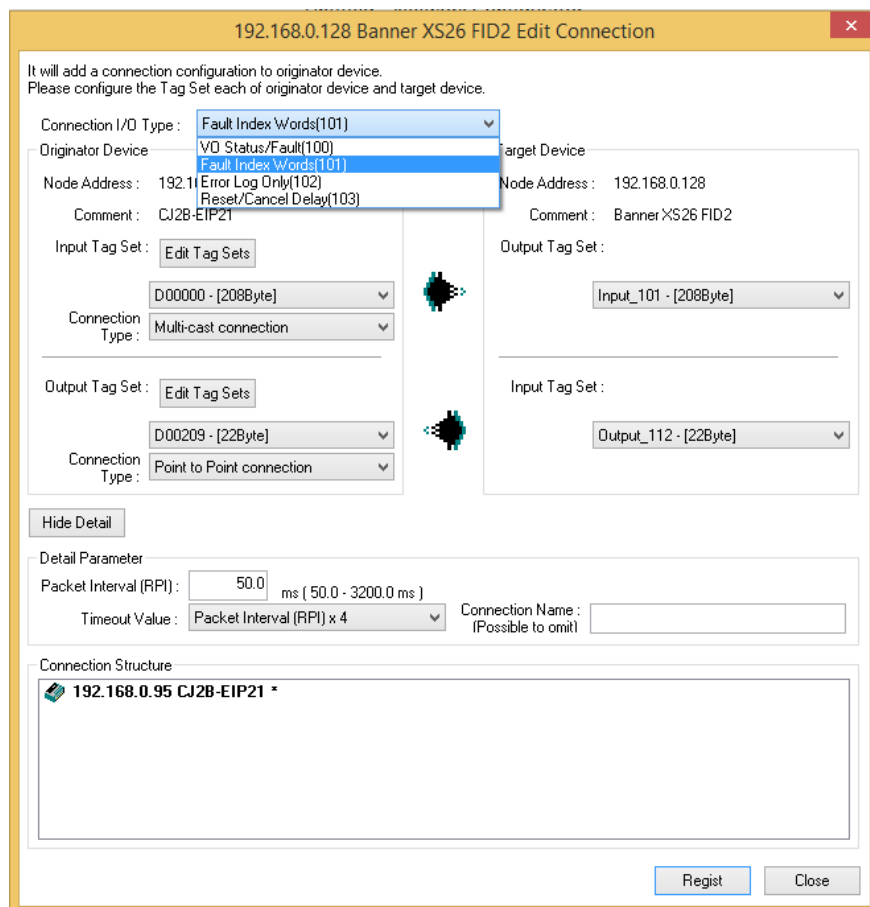


21. Now click "OK".

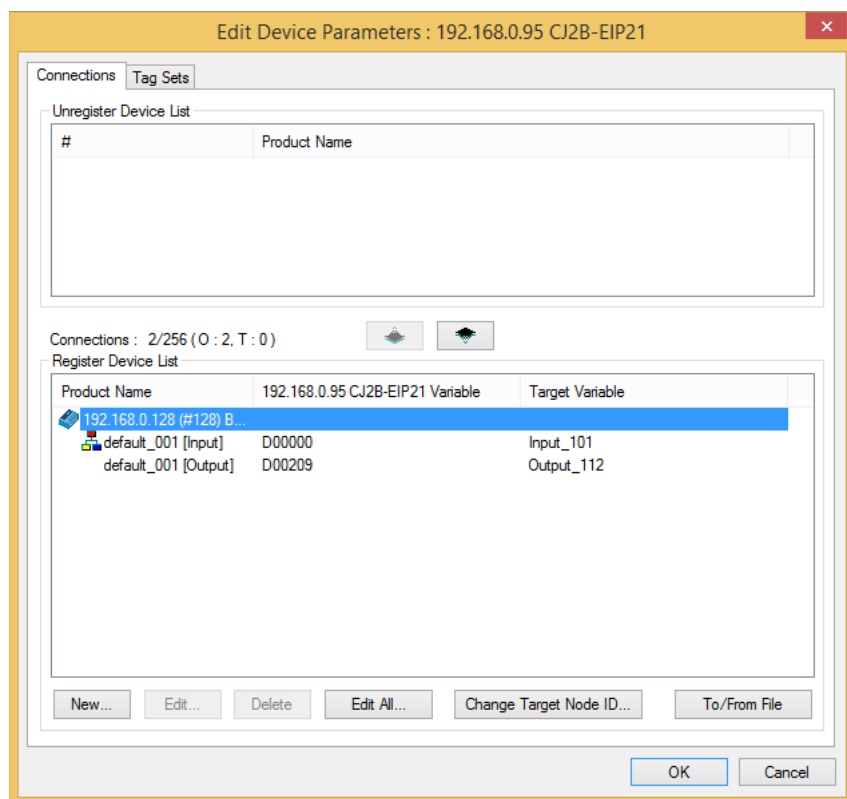


22. Go online and download the configuration to the PLC.

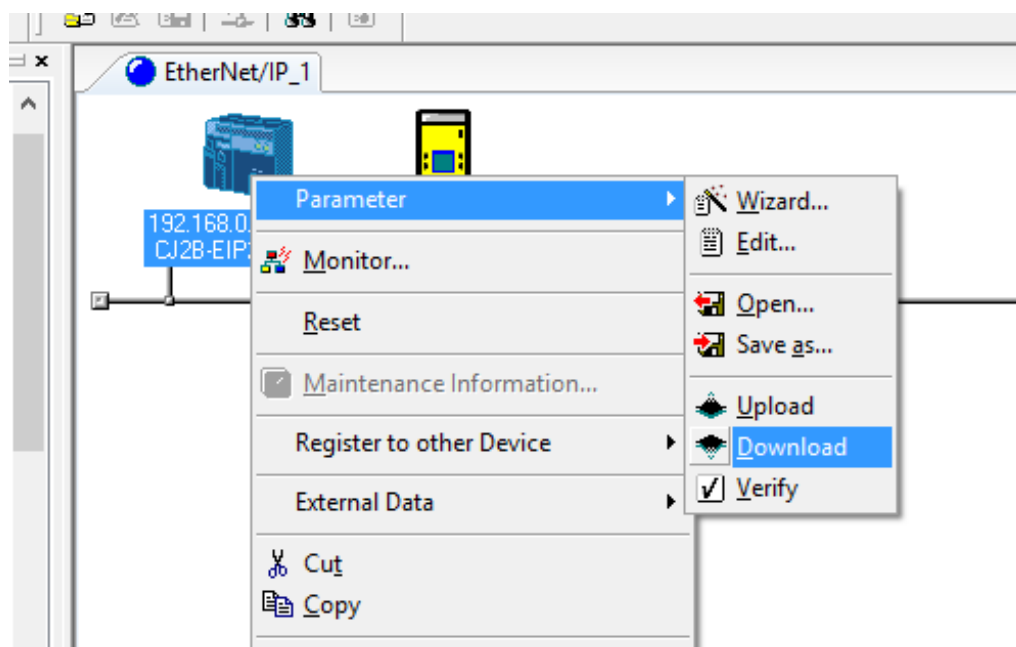


23. Click Yes.

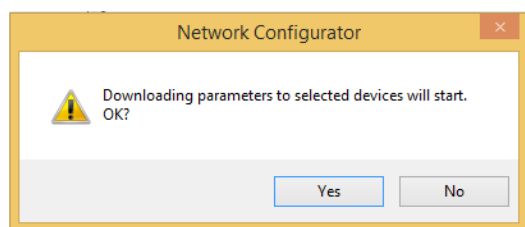



24. Choose a Download option.

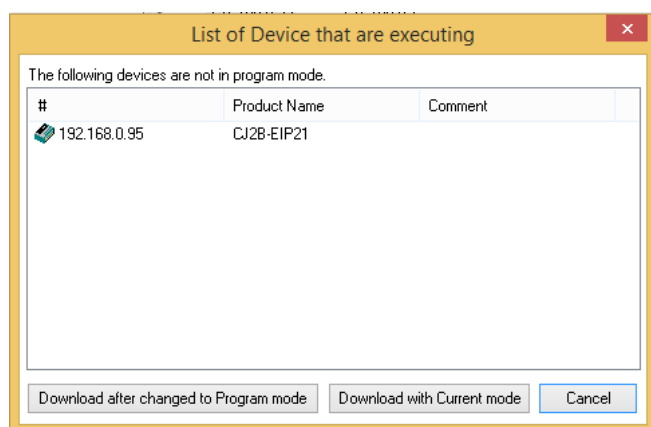



25. Downloading...

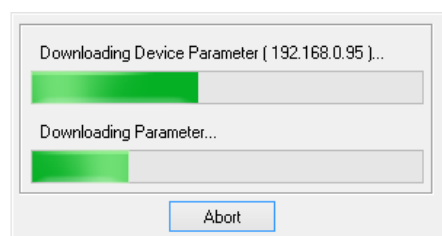


26. Click Yes, then click OK.

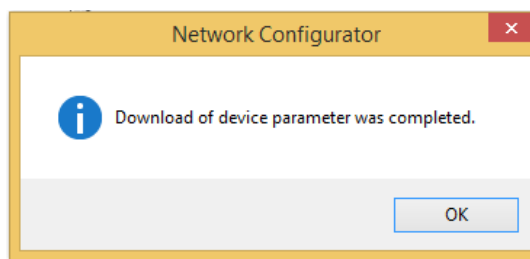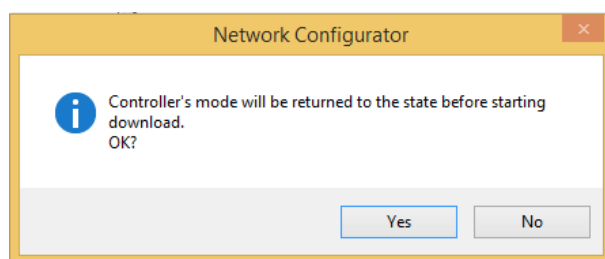


27. Now we can right click on the PLC icon and choose "Monitor". This window can tell us if the connection looks good. Blue icons indicate a connection running fine, without errors.

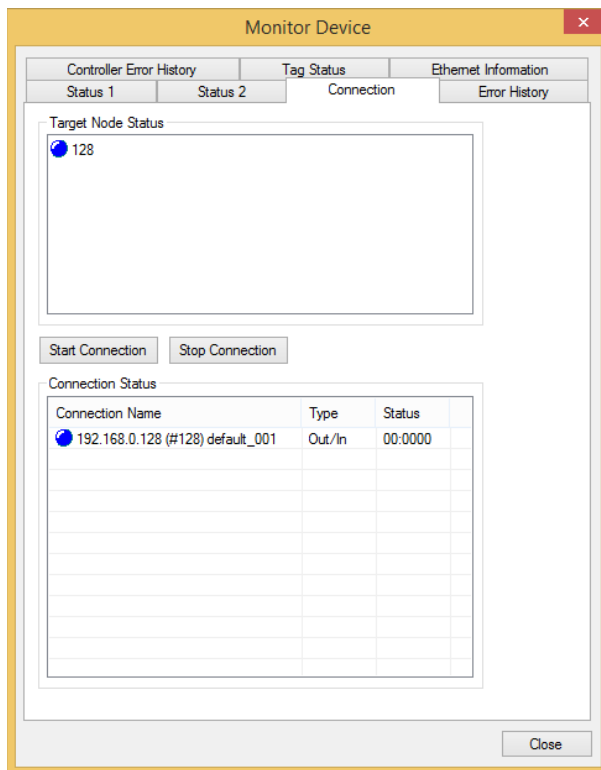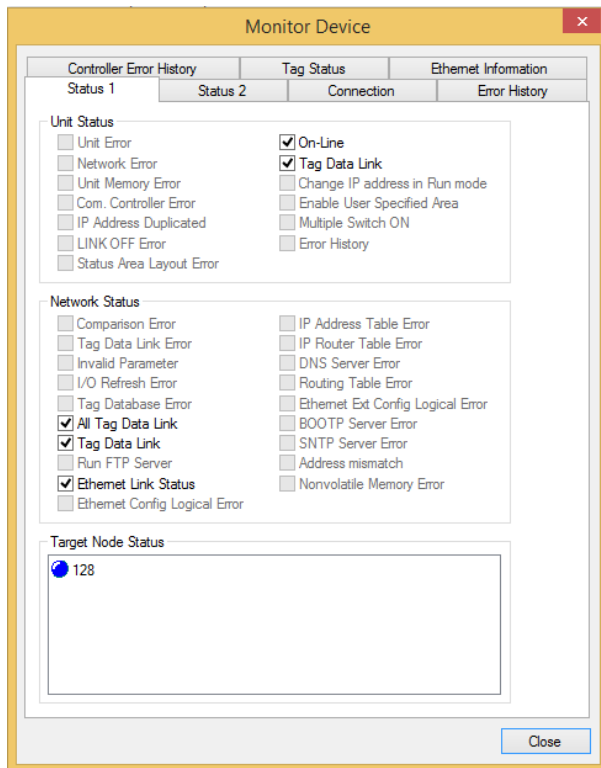


28. Now we can open the CX Programmer software. Click on File → New, then choose a PLC model and click “Settings”.

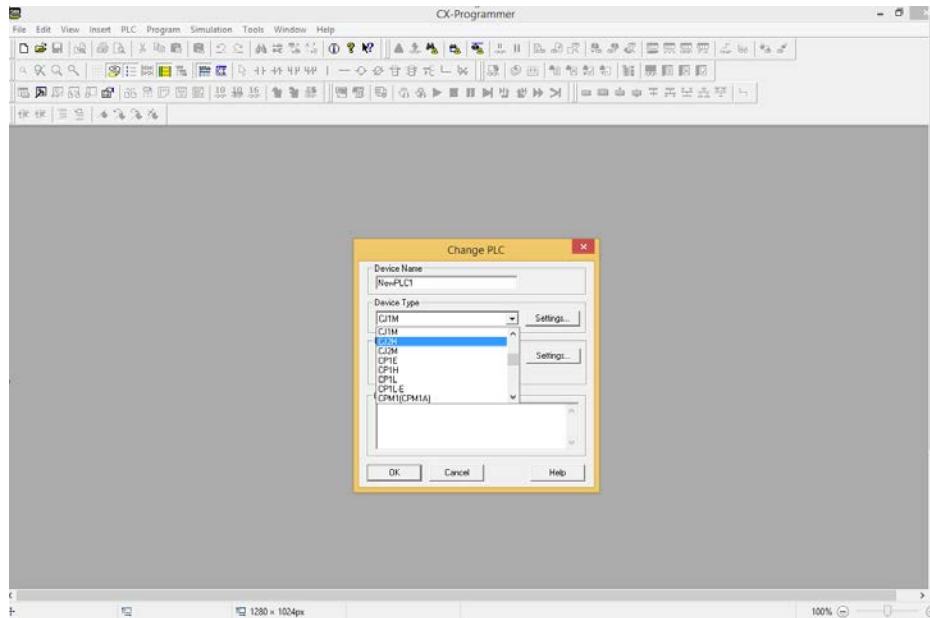


29. Choose a Type and click OK, then choose a Network Type and click OK.

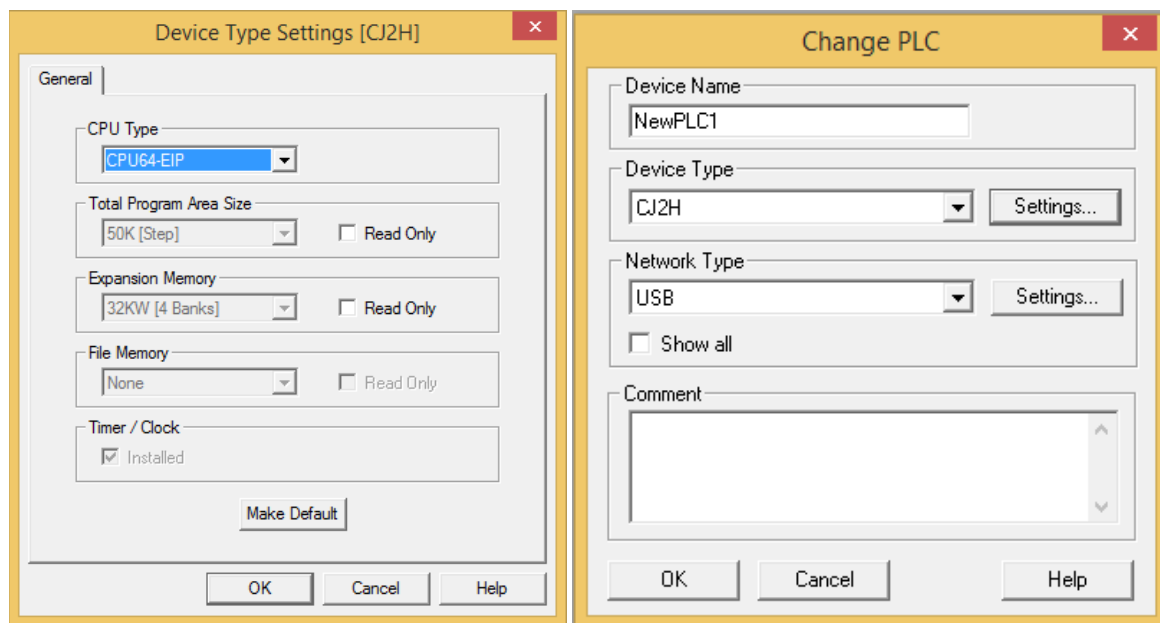

30. Go Online with the PLC. Click Yes.

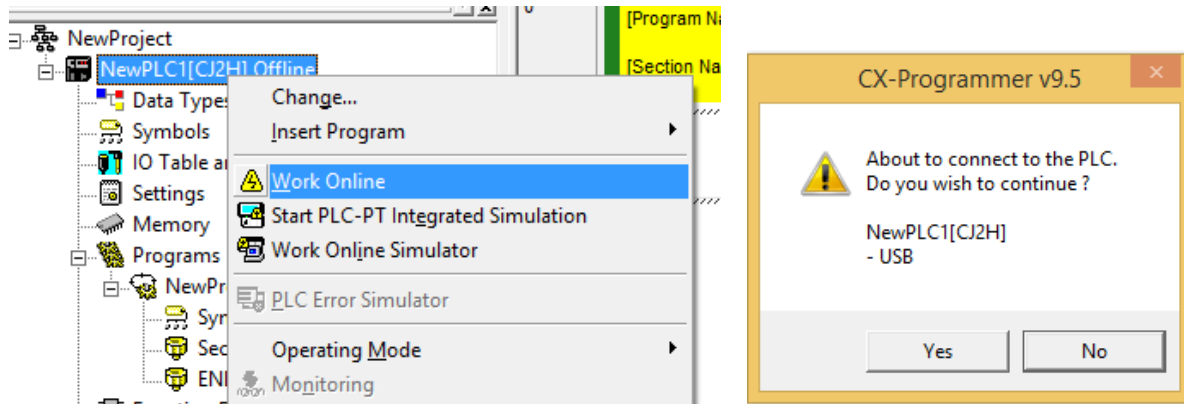

31. Go to View→Windows→Watch

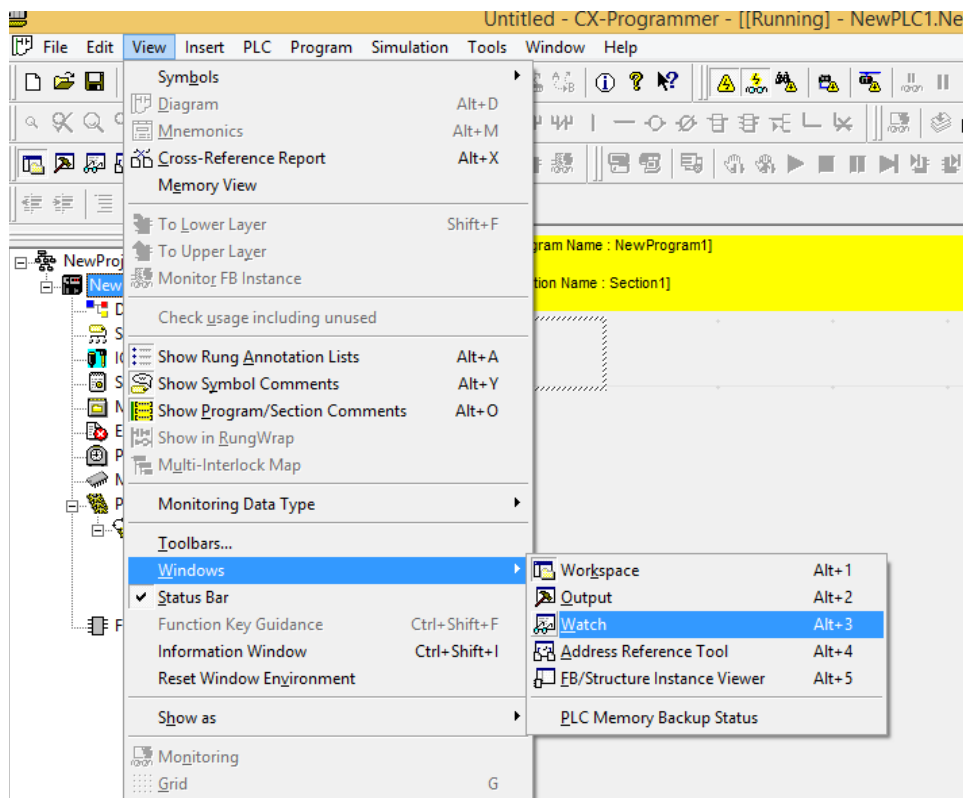

32. Click on the top line in the Watch window.

| PLC Na... | Name | Address | Data Type / Format | FB Usage | Value | Value(... | Comment |
|-----------|------|---------|--------------------|----------|-------|-----------|---------|
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

33. Add some registers to the watch window.

Edit dialog

PLC:

Name or address:

Data Type / Format:

| PLC Na... | Name | Address | Data Type / Format | FB Usage | Value | Value(Binary) | Commen |
|-----------|------|---------|------------------------------|----------|-------|---------------------|--------|
| NewPLC1 | | D0 | INT (Signed Decimal,Channel) | | +2 | 0000 0000 0000 0010 | |
| NewPLC1 | | D1 | INT (Signed Decimal,Channel) | | 0 | 0000 0000 0000 0000 | |
| NewPLC1 | | D2 | INT (Signed Decimal,Channel) | | 0 | 0000 0000 0000 0000 | |
| NewPLC1 | | D3 | INT (Signed Decimal,Channel) | | 0 | 0000 0000 0000 0000 | |
| | | | | | | | |
| | | | | | | | |

In the watch window above, we see 4 registers of Safety Controller Output (PLC Input) data. Notice how Virtual Output #2 is currently on (D0 register, bit 1).

Chapter 3: Modbus/TCP

The Modbus/TCP protocol provides device information using register and coil banks defined by the slave device. This section defines the register and coil banks. By specification, Modbus/TCP uses TCP port 502. The XS/SC26 does not support a Unit ID of 0 (sometimes called Slave ID or Device ID).

The following registers are used to send output values from the safety controller to the PLC. These can be read as Input Registers (30000) using Modbus function code 04 (Read Input Registers). The same values can also be read as Holding Registers (40000) using Modbus function code 03 (Read Holding Registers). The status information for all the virtual outputs and their fault flags, contained in the first 8 registers, can also be read as Inputs (10000) using Modbus function code 02 (Read Input Status).

The First 64 Virtual Outputs and Virtual Output Faults (Inputs 10001-10128)

02: Read Input Status

| Input # | NAME |
|---------|------|
| 10001 | VO1 |
| 10002 | VO2 |
| 10003 | VO3 |
| ... | ... |
| 10063 | VO63 |
| 10064 | VO64 |

| Input # | NAME |
|---------|----------------|
| 10065 | VO1 Fault bit |
| 10066 | VO2 Fault bit |
| 10067 | VO3 Fault bit |
| ... | ... |
| 10127 | VO63 Fault bit |
| 10128 | VO64 Fault bit |

NOTE:

FID 2 safety controllers differ from FID 1 models in that FID 2 no longer allows access to the first 64 Virtual Outputs using Modbus/TCP Coils 0001-00064, nor the first 64 Virtual Output Faults bits using Modbus/TCP Coils 00065 – 00128.

All 256 Virtual Outputs and Virtual Output Faults (Inputs 11001-11256, 12001-12256)

02: Read Input Status

| Input # | NAME |
|---------|-------|
| 11001 | VO1 |
| 11002 | VO2 |
| 11003 | VO3 |
| ... | ... |
| 11255 | VO255 |
| 11256 | VO256 |

| Input # | NAME |
|---------|-----------------|
| 12001 | VO1 Fault bit |
| 12002 | VO2 Fault bit |
| 12003 | VO3 Fault bit |
| ... | ... |
| 12255 | VO255 Fault bit |
| 12256 | VO256 Fault bit |

Virtual Input, Virtual Reset/Cancel Delay Control and Feedback (Coils 3001-30064, 4001-4016, Inputs 15001-15016)

05: Write Single Coil; 02: Read Input Status

| Coil # | NAME |
|--------|---------------|
| 3001 | VI1 On/Off |
| 3002 | VI2 On/Off |
| ... | ... |
| 3064 | VI 64 On/Off |
| 4001 | VRCD1 On/Off |
| 4002 | VRCD2 On/Off |
| ... | ... |
| 4016 | VRCD16 On/Off |

| Input # | NAME |
|---------|-----------------|
| 15001 | VRCD1 Feedback |
| 15002 | VRCD2 Feedback |
| ... | ... |
| 15016 | VRCD16 Feedback |

Safety Controller Output Registers (Modbus/TCP Input or Holding Registers)

04: Read Input Registers or 03: Read Holding Registers or 06: Write Single Holding Register

| Input REG # | Holding REG # | WORD NAME | DATA TYPE |
|-------------|---------------|---|----------------|
| 1 | 1 | VO1 – VO16 (see Flags, section 3.1) | 16-bit integer |
| 2 | 2 | VO17 – VO32 (see Flags, section 3.1) | 16-bit integer |
| 3 | 3 | VO33 – VO48 (see Flags, section 3.1) | 16-bit integer |
| 4 | 4 | VO49 – VO64 (see Flags, section 3.1) | 16-bit integer |
| 5 | 5 | Fault bits for VO1 – VO16 (see Flags, section 3.1) | 16-bit integer |
| 6 | 6 | Fault bits for VO17 – VO32 (see Flags, section 3.1) | 16-bit integer |
| 7 | 7 | Fault bits for VO33 – VO48 (see Flags, section 3.1) | 16-bit integer |
| 8 | 8 | Fault bits for VO49 – VO64 (see Flags, section 3.1) | 16-bit integer |
| | 9 | Virtual Input On/Off (1-16) | 16-bit integer |
| | 10 | Virtual Input On/Off (17-32) | 16-bit integer |
| | 11 | Virtual Input On/Off (33-48) | 16-bit integer |
| | 12 | Virtual Input On/Off (49-64) | 16-bit integer |
| 13-16 | 13-16 | <i>reserved</i> | 16-bit integer |
| | 17 | Virtual Reset/Cancel Delay (1-16) [RCD Register Bits] | 16-bit integer |
| 18 | 18 | <i>reserved</i> | 16-bit integer |
| | 19 | RCD Actuation Code [RCD Enable Register] | 16-bit integer |
| 20 | 20 | Virtual Reset/Cancel Delay (1-16) Feedback [RCD Feedback Register Bits] | 16-bit integer |
| 21 | 21 | <i>reserved</i> | 16-bit integer |
| 22 | 22 | RCD Actuation Code Feedback [RCD Enable Feedback Register] | 16-bit integer |
| 23-40 | 23-40 | <i>reserved</i> | 16-bit integer |
| 41 | 41 | VO1 Fault Index | 16-bit integer |
| 42 | 42 | VO2 Fault Index | 16-bit integer |
| 43 | 43 | VO3 Fault Index | 16-bit integer |
| 44 | 44 | VO4 Fault Index | 16-bit integer |
| 45 | 45 | VO5 Fault Index | 16-bit integer |
| 46 | 46 | VO6 Fault Index | 16-bit integer |
| 47 | 47 | VO7 Fault Index | 16-bit integer |
| 48 | 48 | VO8 Fault Index | 16-bit integer |
| 49 | 49 | VO9 Fault Index | 16-bit integer |
| 50 | 50 | VO10 Fault Index | 16-bit integer |
| 51 | 51 | VO11 Fault Index | 16-bit integer |
| 52 | 52 | VO12 Fault Index | 16-bit integer |
| 53 | 53 | VO13 Fault Index | 16-bit integer |
| 54 | 54 | VO14 Fault Index | 16-bit integer |
| 55 | 55 | VO15 Fault Index | 16-bit integer |
| 56 | 56 | VO16 Fault Index | 16-bit integer |
| 57 | 57 | VO17 Fault Index | 16-bit integer |
| 58 | 58 | VO18 Fault Index | 16-bit integer |
| 59 | 59 | VO19 Fault Index | 16-bit integer |
| 60 | 60 | VO20 Fault Index | 16-bit integer |
| 61 | 61 | VO21 Fault Index | 16-bit integer |
| 62 | 62 | VO22 Fault Index | 16-bit integer |
| 63 | 63 | VO23 Fault Index | 16-bit integer |
| 64 | 64 | VO24 Fault Index | 16-bit integer |

| | | | |
|---------|---------|--------------------------|----------------|
| 65 | 65 | VO25 Fault Index | 16-bit integer |
| 66 | 66 | VO26 Fault Index | 16-bit integer |
| 67 | 67 | VO27 Fault Index | 16-bit integer |
| 68 | 68 | VO28 Fault Index | 16-bit integer |
| 69 | 69 | VO29 Fault Index | 16-bit integer |
| 70 | 70 | VO30 Fault Index | 16-bit integer |
| 71 | 71 | VO31 Fault Index | 16-bit integer |
| 72 | 72 | VO32 Fault Index | 16-bit integer |
| 73 | 73 | VO33 Fault Index | 16-bit integer |
| 74 | 74 | VO34 Fault Index | 16-bit integer |
| 75 | 75 | VO35 Fault Index | 16-bit integer |
| 76 | 76 | VO36 Fault Index | 16-bit integer |
| 77 | 77 | VO37 Fault Index | 16-bit integer |
| 78 | 78 | VO38 Fault Index | 16-bit integer |
| 79 | 79 | VO39 Fault Index | 16-bit integer |
| 80 | 80 | VO40 Fault Index | 16-bit integer |
| 81 | 81 | VO41 Fault Index | 16-bit integer |
| 82 | 82 | VO42 Fault Index | 16-bit integer |
| 83 | 83 | VO43 Fault Index | 16-bit integer |
| 84 | 84 | VO44 Fault Index | 16-bit integer |
| 85 | 85 | VO45 Fault Index | 16-bit integer |
| 86 | 86 | VO46 Fault Index | 16-bit integer |
| 87 | 87 | VO47 Fault Index | 16-bit integer |
| 88 | 88 | VO48 Fault Index | 16-bit integer |
| 89 | 89 | VO49 Fault Index | 16-bit integer |
| 90 | 90 | VO50 Fault Index | 16-bit integer |
| 91 | 91 | VO51 Fault Index | 16-bit integer |
| 92 | 92 | VO52 Fault Index | 16-bit integer |
| 93 | 93 | VO53 Fault Index | 16-bit integer |
| 94 | 94 | VO54 Fault Index | 16-bit integer |
| 95 | 95 | VO55 Fault Index | 16-bit integer |
| 96 | 96 | VO56 Fault Index | 16-bit integer |
| 97 | 97 | VO57 Fault Index | 16-bit integer |
| 98 | 98 | VO58 Fault Index | 16-bit integer |
| 99 | 99 | VO59 Fault Index | 16-bit integer |
| 100 | 100 | VO60 Fault Index | 16-bit integer |
| 101 | 101 | VO61 Fault Index | 16-bit integer |
| 102 | 102 | VO62 Fault Index | 16-bit integer |
| 103 | 103 | VO63 Fault Index | 16-bit integer |
| 104 | 104 | VO64 Fault Index | 16-bit integer |
| 105-106 | 105-106 | VO1 Complete Fault Code | 32-bit integer |
| 107-108 | 107-108 | VO2 Complete Fault Code | 32-bit integer |
| 109-110 | 109-110 | VO3 Complete Fault Code | 32-bit integer |
| 111-112 | 111-112 | VO4 Complete Fault Code | 32-bit integer |
| 113-114 | 113-114 | VO5 Complete Fault Code | 32-bit integer |
| 115-116 | 115-116 | VO6 Complete Fault Code | 32-bit integer |
| 117-118 | 117-118 | VO7 Complete Fault Code | 32-bit integer |
| 119-120 | 119-120 | VO8 Complete Fault Code | 32-bit integer |
| 121-122 | 121-122 | VO9 Complete Fault Code | 32-bit integer |
| 123-124 | 123-124 | VO10 Complete Fault Code | 32-bit integer |

| | | | |
|---------|---------|--------------------------|----------------|
| 125-126 | 125-126 | VO11 Complete Fault Code | 32-bit integer |
| 127-128 | 127-128 | VO12 Complete Fault Code | 32-bit integer |
| 129-130 | 129-130 | VO13 Complete Fault Code | 32-bit integer |
| 131-132 | 131-132 | VO14 Complete Fault Code | 32-bit integer |
| 133-134 | 133-134 | VO15 Complete Fault Code | 32-bit integer |
| 135-136 | 135-136 | VO16 Complete Fault Code | 32-bit integer |
| 137-138 | 137-138 | VO17 Complete Fault Code | 32-bit integer |
| 139-140 | 139-140 | VO18 Complete Fault Code | 32-bit integer |
| 141-142 | 141-142 | VO19 Complete Fault Code | 32-bit integer |
| 143-144 | 143-144 | VO20 Complete Fault Code | 32-bit integer |
| 145-146 | 145-146 | VO21 Complete Fault Code | 32-bit integer |
| 147-148 | 147-148 | VO22 Complete Fault Code | 32-bit integer |
| 149-150 | 149-150 | VO23 Complete Fault Code | 32-bit integer |
| 151-152 | 151-152 | VO24 Complete Fault Code | 32-bit integer |
| 153-154 | 153-154 | VO25 Complete Fault Code | 32-bit integer |
| 155-156 | 155-156 | VO26 Complete Fault Code | 32-bit integer |
| 157-158 | 157-158 | VO27 Complete Fault Code | 32-bit integer |
| 159-160 | 159-160 | VO28 Complete Fault Code | 32-bit integer |
| 161-162 | 161-162 | VO29 Complete Fault Code | 32-bit integer |
| 163-164 | 163-164 | VO30 Complete Fault Code | 32-bit integer |
| 165-166 | 165-166 | VO31 Complete Fault Code | 32-bit integer |
| 167-168 | 167-168 | VO32 Complete Fault Code | 32-bit integer |
| 169-170 | 169-170 | VO33 Complete Fault Code | 32-bit integer |
| 171-172 | 171-172 | VO34 Complete Fault Code | 32-bit integer |
| 173-174 | 173-174 | VO35 Complete Fault Code | 32-bit integer |
| 175-176 | 175-176 | VO36 Complete Fault Code | 32-bit integer |
| 177-178 | 177-178 | VO37 Complete Fault Code | 32-bit integer |
| 179-180 | 179-180 | VO38 Complete Fault Code | 32-bit integer |
| 181-182 | 181-182 | VO39 Complete Fault Code | 32-bit integer |
| 183-184 | 183-184 | VO40 Complete Fault Code | 32-bit integer |
| 185-186 | 185-186 | VO41 Complete Fault Code | 32-bit integer |
| 187-188 | 187-188 | VO42 Complete Fault Code | 32-bit integer |
| 189-190 | 189-190 | VO43 Complete Fault Code | 32-bit integer |
| 191-192 | 191-192 | VO44 Complete Fault Code | 32-bit integer |
| 193-194 | 193-194 | VO45 Complete Fault Code | 32-bit integer |
| 195-196 | 195-196 | VO46 Complete Fault Code | 32-bit integer |
| 197-198 | 197-198 | VO47 Complete Fault Code | 32-bit integer |
| 199-200 | 199-200 | VO48 Complete Fault Code | 32-bit integer |
| 201-202 | 201-202 | VO49 Complete Fault Code | 32-bit integer |
| 203-204 | 203-204 | VO50 Complete Fault Code | 32-bit integer |
| 205-206 | 205-206 | VO51 Complete Fault Code | 32-bit integer |
| 207-208 | 207-208 | VO52 Complete Fault Code | 32-bit integer |
| 209-210 | 209-210 | VO53 Complete Fault Code | 32-bit integer |
| 211-212 | 211-212 | VO54 Complete Fault Code | 32-bit integer |
| 213-214 | 213-214 | VO55 Complete Fault Code | 32-bit integer |
| 215-216 | 215-216 | VO56 Complete Fault Code | 32-bit integer |
| 217-218 | 217-218 | VO57 Complete Fault Code | 32-bit integer |
| 219-220 | 219-220 | VO58 Complete Fault Code | 32-bit integer |
| 221-222 | 221-222 | VO59 Complete Fault Code | 32-bit integer |
| 223-224 | 223-224 | VO60 Complete Fault Code | 32-bit integer |

| | | | |
|---------|---------|--------------------------------|--------------------------------|
| 225-226 | 225-226 | VO61 Complete Fault Code | 32-bit integer |
| 227-228 | 227-228 | VO62 Complete Fault Code | 32-bit integer |
| 229-230 | 229-230 | VO63 Complete Fault Code | 32-bit integer |
| 231-232 | 231-232 | VO64 Complete Fault Code | 32-bit integer |
| 233-34 | 233-34 | Fault #1 Time Stamp | 32-bit integer |
| 235-42 | 235-42 | Fault #1 Name of I/O or System | 2-word length + 12-ASCII chars |
| 243 | 243 | Fault #1 Error Code | 16-bit integer |
| 244 | 244 | Fault #1 Advanced Error Code | 16-bit integer |
| 245 | 245 | Fault #1 Error Message Index | 16-bit integer |
| 246-47 | 246-47 | <i>reserved</i> | 16-bit integer |
| 248-49 | 248-49 | Fault #2 Time Stamp | 32-bit integer |
| 250-57 | 250-57 | Fault #2 Name of I/O or System | 2-word length + 12-ASCII chars |
| 258 | 258 | Fault #2 Error Code | 16-bit integer |
| 259 | 259 | Fault #2 Advanced Error Code | 16-bit integer |
| 260 | 260 | Fault #2 Error Message Index | 16-bit integer |
| 261-62 | 261-62 | <i>reserved</i> | 16-bit integer |
| 263-64 | 263-64 | Fault #3 Time Stamp | 32-bit integer |
| 265-72 | 265-72 | Fault #3 Name of I/O or System | 2-word length + 12-ASCII chars |
| 273 | 273 | Fault #3 Error Code | 16-bit integer |
| 274 | 274 | Fault #3 Advanced Error Code | 16-bit integer |
| 275 | 275 | Fault #3 Error Message Index | 16-bit integer |
| 276-77 | 276-77 | <i>reserved</i> | 16-bit integer |
| 278-79 | 278-79 | Fault #4 Time Stamp | 32-bit integer |
| 280-87 | 280-87 | Fault #4 Name of I/O or System | 2-word length + 12-ASCII chars |
| 288 | 288 | Fault #4 Error Code | 16-bit integer |
| 289 | 289 | Fault #4 Advanced Error Code | 16-bit integer |
| 290 | 290 | Fault #4 Error Message Index | 16-bit integer |
| 291-92 | 291-92 | <i>reserved</i> | 16-bit integer |
| 293-94 | 293-94 | Fault #5 Time Stamp | 32-bit integer |
| 295-302 | 295-302 | Fault #5 Name of I/O or System | 2-word length + 12-ASCII chars |
| 303 | 303 | Fault #5 Error Code | 16-bit integer |
| 304 | 304 | Fault #5 Advanced Error Code | 16-bit integer |
| 305 | 305 | Fault #5 Error Message Index | 16-bit integer |
| 306-07 | 306-07 | <i>reserved</i> | 16-bit integer |
| 308-09 | 308-09 | Fault #6 Time Stamp | 32-bit integer |
| 310-17 | 310-17 | Fault #6 Name of I/O or System | 2-word length + 12-ASCII chars |
| 318 | 318 | Fault #6 Error Code | 16-bit integer |
| 319 | 319 | Fault #6 Advanced Error Code | 16-bit integer |
| 320 | 320 | Fault #6 Error Message Index | 16-bit integer |
| 321-22 | 321-22 | <i>reserved</i> | 16-bit integer |
| 323-24 | 323-24 | Fault #7 Time Stamp | 32-bit integer |
| 325-32 | 325-32 | Fault #7 Name of I/O or System | 2-word length + 12-ASCII chars |
| 333 | 333 | Fault #7 Error Code | 16-bit integer |
| 334 | 334 | Fault #7 Advanced Error Code | 16-bit integer |

| | | | |
|---------|---------|--|--------------------------------|
| 335 | 335 | Fault #7 Error Message Index | 16-bit integer |
| 336-37 | 336-37 | <i>reserved</i> | 16-bit integer |
| 338-39 | 338-39 | Fault #8 Time Stamp | 32-bit integer |
| 340-47 | 340-47 | Fault #8 Name of I/O or System | 2-word length + 12-ASCII chars |
| 348 | 348 | Fault #8 Error Code | 16-bit integer |
| 349 | 349 | Fault #8 Advanced Error Code | 16-bit integer |
| 350 | 350 | Fault #8 Error Message Index | 16-bit integer |
| 351-52 | 351-52 | <i>reserved</i> | 16-bit integer |
| 353-54 | 353-54 | Fault #9 Time Stamp | 32-bit integer |
| 355-62 | 355-62 | Fault #9 Name of I/O or System | 2-word length + 12-ASCII chars |
| 363 | 363 | Fault #9 Error Code | 16-bit integer |
| 364 | 364 | Fault #9 Advanced Error Code | 16-bit integer |
| 365 | 365 | Fault #9 Error Message Index | 16-bit integer |
| 366-67 | 366-67 | <i>reserved</i> | 16-bit integer |
| 368-69 | 368-69 | Fault #10 Time Stamp | 32-bit integer |
| 370-77 | 370-77 | Fault #10 Name of I/O or System | 2-word length + 12-ASCII chars |
| 378 | 378 | Fault #10 Error Code | 16-bit integer |
| 379 | 379 | Fault #10 Advanced Error Code | 16-bit integer |
| 380 | 380 | Fault #10 Error Message Index | 16-bit integer |
| 381-82 | 381-82 | <i>reserved</i> | 16-bit integer |
| 383-84 | 383-84 | Seconds Since Boot | 32-bit integer |
| 385 | 385 | Operating Mode | 16-bit integer |
| 386-95 | 386-95 | ConfigName | 2-word length + 16-ASCII chars |
| 396-97 | 396-97 | Config CRC | 32-bit integer |
| 398-900 | 398-900 | <i>reserved</i> | 16-bit integer |
| 901 | 901 | VO1 – VO16 (see Flags, section 3.1) | 16-bit integer |
| 902 | 902 | VO17 – VO32 (see Flags, section 3.1) | 16-bit integer |
| 903 | 903 | VO33 – VO48 (see Flags, section 3.1) | 16-bit integer |
| 904 | 904 | VO49 – VO64 (see Flags, section 3.1) | 16-bit integer |
| 905 | 905 | VO65 – VO80 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 906 | 906 | VO81 – VO96 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 907 | 907 | VO97 – VO112 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 908 | 908 | VO113 – VO128 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 909 | 909 | VO129 – VO144 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 910 | 910 | VO145 – VO160 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 911 | 911 | VO161 – VO176 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 912 | 912 | VO177 – VO192 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 913 | 913 | VO193 – VO208 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 914 | 914 | VO209 – VO224 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 915 | 915 | VO225 – VO240 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 916 | 916 | VO241 – VO256 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 917 | 917 | Fault bits for VO1 – VO16 (see Flags, section 3.1) | 16-bit integer |
| 918 | 918 | Fault bits for VO17 – VO32 (see Flags, section 3.1) | 16-bit integer |
| 919 | 919 | Fault bits for VO33 – VO48 (see Flags, section 3.1) | 16-bit integer |
| 920 | 920 | Fault bits for VO49 – VO64 (see Flags, section 3.1) | 16-bit integer |
| 921 | 921 | Fault bits for VO65 – VO80 (see Extended Flags, section 3.1.1) | 16-bit integer |

| | | | |
|-----------|-----------|--|----------------|
| 922 | 922 | Fault bits for VO81 – VO96 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 923 | 923 | Fault bits for VO97 – VO112 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 924 | 924 | Fault bits for VO113 – VO128 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 925 | 925 | Fault bits for VO129 – VO144 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 926 | 926 | Fault bits for VO145 – VO160 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 926 | 926 | Fault bits for VO161 – VO176 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 928 | 928 | Fault bits for VO177 – VO192 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 929 | 929 | Fault bits for VO193 – VO208 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 930 | 930 | Fault bits for VO209 – VO224 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 931 | 931 | Fault bits for VO225 – VO240 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 932 | 932 | Fault bits for VO241 – VO256 (see Extended Flags, section 3.1.1) | 16-bit integer |
| 933-934 | 933-934 | RCD bits feedback | 32-bit integer |
| 935 | 935 | RCD Enable feedback | 16-bit integer |
| 936 | 936 | VO1 Fault Index | 16-bit integer |
| 937 | | VO2 Fault Index | 16-bit integer |
| 938 | | VO3 Fault Index | 16-bit integer |
| ... | | ... | ... |
| 1190 | 1190 | VO256 Fault Index | 16-bit integer |
| 1191-1192 | 1191-1192 | VO1 Complete Fault Code | 32-bit integer |
| 1193-1194 | 1193-1194 | VO2 Complete Fault Code | 32-bit integer |
| 1195-1196 | 1195-1196 | VO3 Complete Fault Code | 32-bit integer |
| 1197-1198 | 1197-1198 | VO4 Complete Fault Code | 32-bit integer |
| ... | ... | ... | ... |
| 1702-1703 | 1702-1703 | VO256 Complete Fault Code | 32-bit integer |

3.1 Flags

Registers 1 through 8, defined below, appear as the first 8 words in register map. This represents the first 64 virtual outputs and the associated fault flags. The information in these registers can be read as Input Registers (30000) using Modbus function code 04 (Read Input Registers). The same values can also be read as Holding Registers (40000) using Modbus function code 03 (Read Holding Registers).

Virtual Output 1-16

PLC Input register 30001 or Holding Register 40001, also Inputs 10001-16 or Coils 00001-16

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| VO16 | VO15 | VO14 | VO13 | VO12 | VO11 | VO10 | VO9 | VO8 | VO7 | VO6 | VO5 | VO4 | VO3 | VO2 | VO1 |

Virtual Output 17-32

PLC Input register 30002 or Holding Register 40002, also Inputs 10017-32 or Coils 00017-32

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| VO32 | VO31 | VO30 | VO29 | VO28 | VO27 | VO26 | VO25 | VO24 | VO23 | VO22 | VO21 | VO20 | VO19 | VO18 | VO17 |

Virtual Output 33-48

PLC Input register 30003 or Holding Register 40003, also Inputs 10033-48 or Coils 00033-48

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| VO48 | VO47 | VO46 | VO45 | VO44 | VO43 | VO42 | VO41 | VO40 | VO39 | VO38 | VO37 | VO36 | VO35 | VO34 | VO33 |

Virtual Output 49-64

PLC Input register 30004 or Holding Register 40004, also Inputs 10049-64 or Coils 00049-64

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|--------|--------|--------|--------|--------|--------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| VO64 | VO63 | VO62 | VO61 | VO60 | VO59 | VO58 | VO57 | VO56 | VO55 | VO54 | VO53 | VO52 | VO51 | VO50 | VO49 |

Virtual Output Fault 1-16**PLC Input register 30005 or Holding Register 40005, also Inputs 10033-48 or Coils 00033-48**

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|---------------|---------------|---------------|---------------|---------------|---------------|---------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|--------------|
| VO16 fault | VO15 fault | VO14 fault | VO13 fault | VO12 fault | VO11 fault | VO10 fault | VO9 fault | VO8 fault | VO7 fault | VO6 fault | VO5 fault | VO4 fault | VO3 fault | VO2 fault | VO1 fault |

Virtual Output Fault 17-32**PLC Input register 30006 or Holding Register 40006, also Inputs 10049-64 or Coils 00049-64**

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| VO32 fault | VO31 fault | VO30 fault | VO29 fault | VO28 fault | VO27 fault | VO26 fault | VO25 fault | VO24 fault | VO23 fault | VO22 fault | VO21 fault | VO20 fault | VO19 fault | VO18 fault | VO17 fault |

Virtual Output Fault 33-48**PLC Input register 30007 or Holding Register 40007, also Inputs 10033-48 or Coils 00033-48**

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| VO48 fault | VO47 fault | VO46 fault | VO45 fault | VO44 fault | VO43 fault | VO42 fault | VO41 fault | VO40 fault | VO39 fault | VO38 fault | VO37 fault | VO36 fault | VO35 fault | VO34 fault | VO33 fault |

Virtual Output Fault 49-64**PLC Input register 30008 or Holding Register 40008, also Inputs 10049-64 or Coils 00049-64**

| bit 15 | bit 14 | bit 13 | bit 12 | bit 11 | bit 10 | bit 9 | bit 8 | bit 7 | bit 6 | bit 5 | bit 4 | bit 3 | bit 2 | bit 1 | bit 0 |
|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| VO64 fault | VO63 fault | VO62 fault | VO61 fault | VO60 fault | VO59 fault | VO58 fault | VO57 fault | VO56 fault | VO55 fault | VO54 fault | VO53 fault | VO52 fault | VO51 fault | VO50 fault | VO49 fault |

3.1.1 Extended Flags

All 256 Virtual Outputs can be accessed in a way similar to that seen in section 3.1.

Inputs 11001 through 11256 represent all 256 possible Virtual Outputs. These Virtual Outputs can also be read as Input Registers 901-916 or Holding Registers 901-916.

Inputs 12001 through 12256 are all 256 Virtual Output Faults. These Virtual Output Faults can also be read as Input Registers 917-932 or Holding Registers 917-932.

Chapter 4: PCCC

Allen-Bradley's PLC5 and SLC 500 family of devices use PCCC communications protocol. The safety controller will support these PLCs using an input register array. The term "Input" is from the point of view of the PLC.

4.1 PLC Configuration

The images below represent a typical configuration:

1. Read. Message command reading from N7 table on safety controller

MSG - N20:0 : (51 Elements)

General MultiHop

This Controller

Communication Command:

Data Table Address:

Size in Elements:

Channel:

Target Device

Message Timeout:

Data Table Address:

Local / Remote: MultiHop: ☒

Control Bits

Ignore if timed out (TO):

To be retried (NR):

Awaiting Execution (EW):

Continuous Run (CO):

Error (ER):

Message done (DN):

Message Transmitting (ST):

Message Enabled (EN):

Waiting for Queue Space:

Error

Error Code(Hex):

Error Description

No errors

2. Read. IP Address of the safety controller is entered here.


MSG - N20:0 : (51 Elements)

General MultiHop

Ins = Add Hop Del = Remove Hop

| From Device | From Port | To Address Type | To Address |
|---------------|-----------|--------------------------|---------------|
| This SLC 5/05 | Channel 1 | EtherNet/IP Device (str) | 192.168.0.128 |

Write. Message command writing to N11 table on safety controller.

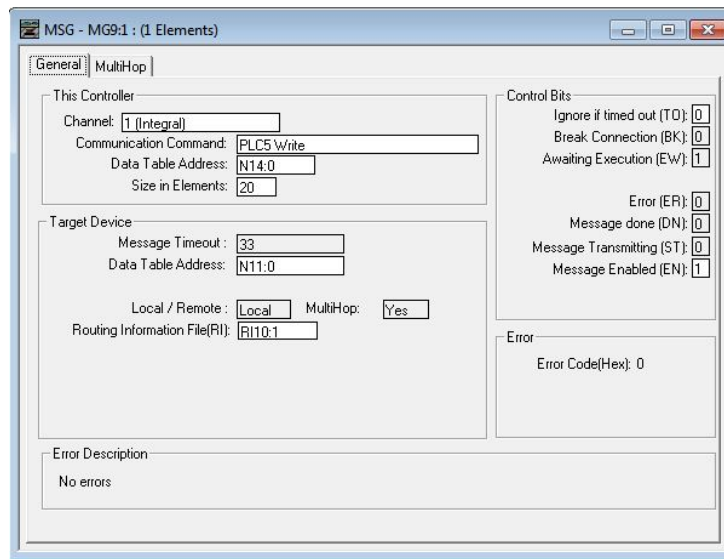

MSG - MG9:1 : (1 Elements)

General | MultiHop

This Controller

Channel: 1 (Integral)

Communication Command: PLC5 Write

Data Table Address: N14:0

Size in Elements: 20

Target Device

Message Timeout: 33

Data Table Address: N11:0

Local / Remote: Local MultiHop: Yes

Routing Information File(RI): RI10:1

Control Bits

Ignore if timed out (TO): 0

Break Connection (BK): 0

Awaiting Execution (EW): 1

Error (ER): 0

Message done (DN): 0

Message Transmitting (ST): 0

Message Enabled (EN): 1


Error

Error Code(Hex): 0

Error Description

No errors

3. Write. IP Address of the safety controller is entered here.

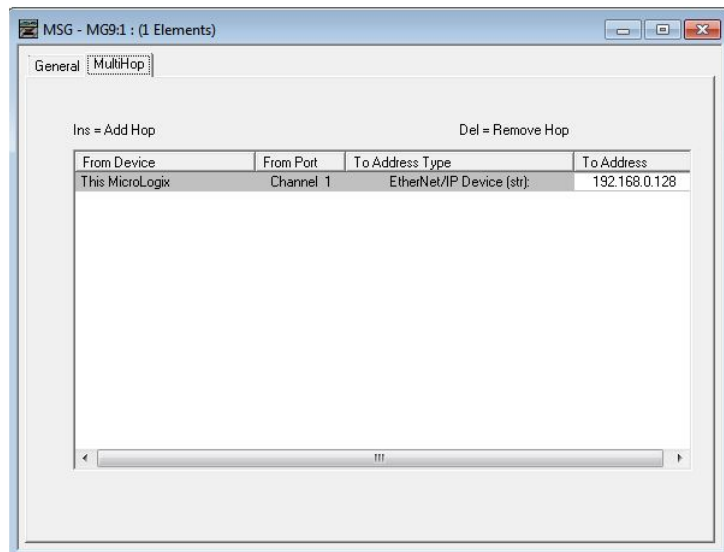

MSG - MG9:1 : (1 Elements)

General | MultiHop

Ins = Add Hop Del = Remove Hop

| From Device | From Port | To Address Type | To Address |
|-----------------|-----------|---------------------------|---------------|
| This MicroLogix | Channel 1 | EtherNet/IP Device (str): | 192.168.0.128 |

4.2 Outputs from Safety Controller (Inputs to PLC)

The Output registers are used to push output values from the safety controller to the PLC. MSG (message) commands are used to Read (N7) from the controller.

N7 REGS

| REG # | WORD NAME | DATA TYPE |
|-------|---|----------------|
| 0 | VO1 – VO16 (see Flags, section 4.4) | 16-bit integer |
| 1 | VO17 – VO32 (see Flags, section 4.4) | 16-bit integer |
| 2 | VO33 – VO48 (see Flags, section 4.4) | 16-bit integer |
| 3 | VO49 – VO64 (see Flags, section 4.4) | 16-bit integer |
| 4 | Fault bits for VO1 – VO16 (see Flags, section 4.4) | 16-bit integer |
| 5 | Fault bits for VO17 – VO32 (see Flags, section 4.4) | 16-bit integer |
| 6 | Fault bits for VO33 – VO48 (see Flags, section 4.4) | 16-bit integer |
| 7 | Fault bits for VO49 – VO64 (see Flags, section 4.4) | 16-bit integer |
| 8-39 | <i>reserved</i> | 16-bit integer |
| 40 | VO1 Fault Index | 16-bit integer |
| 41 | VO2 Fault Index | 16-bit integer |
| 42 | VO3 Fault Index | 16-bit integer |
| 43 | VO4 Fault Index | 16-bit integer |
| 44 | VO5 Fault Index | 16-bit integer |
| 45 | VO6 Fault Index | 16-bit integer |
| 46 | VO7 Fault Index | 16-bit integer |
| 47 | VO8 Fault Index | 16-bit integer |
| 48 | VO9 Fault Index | 16-bit integer |
| 49 | VO10 Fault Index | 16-bit integer |
| 50 | VO11 Fault Index | 16-bit integer |
| 51 | VO12 Fault Index | 16-bit integer |
| 52 | VO13 Fault Index | 16-bit integer |
| 53 | VO14 Fault Index | 16-bit integer |
| 54 | VO15 Fault Index | 16-bit integer |
| 55 | VO16 Fault Index | 16-bit integer |
| 56 | VO17 Fault Index | 16-bit integer |
| 57 | VO18 Fault Index | 16-bit integer |
| 58 | VO19 Fault Index | 16-bit integer |
| 59 | VO20 Fault Index | 16-bit integer |
| 60 | VO21 Fault Index | 16-bit integer |
| 61 | VO22 Fault Index | 16-bit integer |
| 62 | VO23 Fault Index | 16-bit integer |
| 63 | VO24 Fault Index | 16-bit integer |
| 64 | VO25 Fault Index | 16-bit integer |
| 65 | VO26 Fault Index | 16-bit integer |
| 66 | VO27 Fault Index | 16-bit integer |
| 67 | VO28 Fault Index | 16-bit integer |
| 68 | VO29 Fault Index | 16-bit integer |
| 69 | VO30 Fault Index | 16-bit integer |
| 70 | VO31 Fault Index | 16-bit integer |
| 71 | VO32 Fault Index | 16-bit integer |
| 72 | VO33 Fault Index | 16-bit integer |
| 73 | VO34 Fault Index | 16-bit integer |

| | | |
|---------|--------------------------------|--------------------------------|
| 74 | VO35 Fault Index | 16-bit integer |
| 75 | VO36 Fault Index | 16-bit integer |
| 76 | VO37 Fault Index | 16-bit integer |
| 77 | VO38 Fault Index | 16-bit integer |
| 78 | VO39 Fault Index | 16-bit integer |
| 79 | VO40 Fault Index | 16-bit integer |
| 80 | VO41 Fault Index | 16-bit integer |
| 81 | VO42 Fault Index | 16-bit integer |
| 82 | VO43 Fault Index | 16-bit integer |
| 83 | VO44 Fault Index | 16-bit integer |
| 84 | VO45 Fault Index | 16-bit integer |
| 85 | VO46 Fault Index | 16-bit integer |
| 86 | VO47 Fault Index | 16-bit integer |
| 87 | VO48 Fault Index | 16-bit integer |
| 88 | VO49 Fault Index | 16-bit integer |
| 89 | VO50 Fault Index | 16-bit integer |
| 90 | VO51 Fault Index | 16-bit integer |
| 91 | VO52 Fault Index | 16-bit integer |
| 92 | VO53 Fault Index | 16-bit integer |
| 93 | VO54 Fault Index | 16-bit integer |
| 94 | VO55 Fault Index | 16-bit integer |
| 95 | VO56 Fault Index | 16-bit integer |
| 96 | VO57 Fault Index | 16-bit integer |
| 97 | VO58 Fault Index | 16-bit integer |
| 98 | VO59 Fault Index | 16-bit integer |
| 99 | VO60 Fault Index | 16-bit integer |
| 100 | VO61 Fault Index | 16-bit integer |
| 101 | VO62 Fault Index | 16-bit integer |
| 102 | VO63 Fault Index | 16-bit integer |
| 103 | VO64 Fault Index | 16-bit integer |
| 104-231 | <i>reserved</i> | 16-bit integer |
| 232-33 | Fault #1 Time Stamp | 32-bit integer |
| 234-41 | Fault #1 Name of I/O or System | 2-word length + 12-ASCII chars |
| 242 | Fault #1 Error Code | 16-bit integer |
| 243 | Fault #1 Advanced Error Code | 16-bit integer |
| 244 | Fault #1 Error Message Index | 16-bit integer |
| 245-46 | <i>reserved</i> | 16-bit integer |
| 247-48 | Fault #2 Time Stamp | 32-bit integer |
| 249-56 | Fault #2 Name of I/O or System | 2-word length + 12-ASCII chars |
| 257 | Fault #2 Error Code | 16-bit integer |
| 258 | Fault #2 Advanced Error Code | 16-bit integer |
| 259 | Fault #2 Error Message Index | 16-bit integer |
| 260-61 | <i>reserved</i> | 16-bit integer |
| 262-63 | Fault #3 Time Stamp | 32-bit integer |
| 264-71 | Fault #3 Name of I/O or System | 2-word length + 12-ASCII chars |
| 272 | Fault #3 Error Code | 16-bit integer |
| 273 | Fault #3 Advanced Error Code | 16-bit integer |
| 274 | Fault #3 Error Message Index | 16-bit integer |

| | | |
|---------|---------------------------------|--------------------------------|
| 275-76 | <i>reserved</i> | 16-bit integer |
| 277-78 | Fault #4 Time Stamp | 32-bit integer |
| 279-86 | Fault #4 Name of I/O or System | 2-word length + 12-ASCII chars |
| 287 | Fault #4 Error Code | 16-bit integer |
| 288 | Fault #4 Advanced Error Code | 16-bit integer |
| 289 | Fault #4 Error Message Index | 16-bit integer |
| 290-91 | <i>reserved</i> | 16-bit integer |
| 292-93 | Fault #5 Time Stamp | 32-bit integer |
| 294-301 | Fault #5 Name of I/O or System | 2-word length + 12-ASCII chars |
| 302 | Fault #5 Error Code | 16-bit integer |
| 303 | Fault #5 Advanced Error Code | 16-bit integer |
| 304 | Fault #5 Error Message Index | 16-bit integer |
| 305-6 | <i>reserved</i> | 16-bit integer |
| 307-8 | Fault #6 Time Stamp | 32-bit integer |
| 309-16 | Fault #6 Name of I/O or System | 2-word length + 12-ASCII chars |
| 317 | Fault #6 Error Code | 16-bit integer |
| 318 | Fault #6 Advanced Error Code | 16-bit integer |
| 319 | Fault #6 Error Message Index | 16-bit integer |
| 320-21 | <i>reserved</i> | 16-bit integer |
| 322-23 | Fault #7 Time Stamp | 32-bit integer |
| 324-31 | Fault #7 Name of I/O or System | 2-word length + 12-ASCII chars |
| 332 | Fault #7 Error Code | 16-bit integer |
| 333 | Fault #7 Advanced Error Code | 16-bit integer |
| 334 | Fault #7 Error Message Index | 16-bit integer |
| 335-36 | <i>reserved</i> | 16-bit integer |
| 337-38 | Fault #8 Time Stamp | 32-bit integer |
| 339-46 | Fault #8 Name of I/O or System | 2-word length + 12-ASCII chars |
| 347 | Fault #8 Error Code | 16-bit integer |
| 348 | Fault #8 Advanced Error Code | 16-bit integer |
| 349 | Fault #8 Error Message Index | 16-bit integer |
| 350-51 | <i>reserved</i> | 16-bit integer |
| 352-53 | Fault #9 Time Stamp | 32-bit integer |
| 354-61 | Fault #9 Name of I/O or System | 2-word length + 12-ASCII chars |
| 362 | Fault #9 Error Code | 16-bit integer |
| 363 | Fault #9 Advanced Error Code | 16-bit integer |
| 364 | Fault #9 Error Message Index | 16-bit integer |
| 365-66 | <i>reserved</i> | 16-bit integer |
| 367-68 | Fault #10 Time Stamp | 32-bit integer |
| 369-76 | Fault #10 Name of I/O or System | 2-word length + 12-ASCII chars |
| 377 | Fault #10 Error Code | 16-bit integer |
| 378 | Fault #10 Advanced Error Code | 16-bit integer |
| 379 | Fault #10 Error Message Index | 16-bit integer |
| 380-81 | <i>reserved</i> | 16-bit integer |
| 382-83 | Seconds Since Boot | 32-bit integer |

| | | |
|---------|--|--------------------------------|
| 384 | Operating Mode | 16-bit integer |
| 385-94 | ConfigName | 2-word length + 16-ASCII chars |
| 395-96 | Config CRC | 32-bit integer |
| 397-899 | <i>reserved</i> | 16-bit integer |
| 900 | VO1 – VO16 (see Flags, section 4.4) | 16-bit integer |
| 901 | VO17 – VO32 (see Flags, section 4.4) | 16-bit integer |
| 902 | VO33 – VO48 (see Flags, section 4.4) | 16-bit integer |
| 903 | VO49 – VO64 (see Flags, section 4.4) | 16-bit integer |
| 904 | VO65 – VO80 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 905 | VO81 – VO96 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 906 | VO97 – VO112 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 907 | VO113 – VO128 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 908 | VO129 – VO144 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 909 | VO145 – VO160 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 910 | VO161 – VO176 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 911 | VO177 – VO192 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 912 | VO193 – VO208 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 913 | VO209 – VO224 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 914 | VO225 – VO240 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 915 | VO241 – VO256 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 916 | Fault bits for VO1 – VO16 (see Flags, section 4.4) | 16-bit integer |
| 917 | Fault bits for VO17 – VO32 (see Flags, section 4.4) | 16-bit integer |
| 918 | Fault bits for VO33 – VO48 (see Flags, section 4.4) | 16-bit integer |
| 919 | Fault bits for VO49 – VO64 (see Flags, section 4.4) | 16-bit integer |
| 920 | Fault bits for VO65 – VO80 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 921 | Fault bits for VO81 – VO96 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 922 | Fault bits for VO97 – VO112 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 923 | Fault bits for VO113 – VO128 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 924 | Fault bits for VO129 – VO144 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 925 | Fault bits for VO145 – VO160 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 926 | Fault bits for VO161 – VO176 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 927 | Fault bits for VO177 – VO192 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 928 | Fault bits for VO193 – VO208 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 929 | Fault bits for VO209 – VO224 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 930 | Fault bits for VO225 – VO240 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 931 | Fault bits for VO241 – VO256 (see Extended Flags, section 4.4.1) | 16-bit integer |
| 932-933 | RCD bits feedback | 32-bit integer |
| 934 | RCD Enable feedback | 16-bit integer |

| | | |
|-----------|---------------------------|----------------|
| 935 | VO1 Fault Index | 16-bit integer |
| 936 | VO2 Fault Index | 16-bit integer |
| 937 | VO3 Fault Index | 16-bit integer |
| ... | ... | ... |
| 1190 | VO256 Fault Index | 16-bit integer |
| 1191-1192 | VO1 Complete Fault Code | 32-bit integer |
| 1193-1194 | VO2 Complete Fault Code | 32-bit integer |
| 1195-1196 | VO3 Complete Fault Code | 32-bit integer |
| 1197-1198 | VO4 Complete Fault Code | 32-bit integer |
| ... | ... | ... |
| 1701-1702 | VO256 Complete Fault Code | 32-bit integer |

4.3 Inputs to Safety Controller (Outputs from PLC)

The Input registers are used to send information to the safety controller from the PLC. MSG (message) commands are used to Write (N11) to the controller.

N11 REGS

| REG # | WORD NAME | DATA TYPE |
|-------|---|----------------|
| 0-7 | reserved | 16-bit integer |
| 8 | Virtual Input On/Off (1-16) | 16-bit integer |
| 9 | Virtual Input On/Off (17-32) | 16-bit integer |
| 10 | Virtual Input On/Off (33-48) | 16-bit integer |
| 11 | Virtual Input On/Off (49-64) | 16-bit integer |
| 12-15 | reserved | 16-bit integer |
| 16 | Virtual Reset/Cancel Delay (1-16) [RCD Register Bits] | 16-bit integer |
| 17 | reserved | 16-bit integer |
| 18 | RCD Actuation Code [RCD Enable Register] | 16-bit integer |

4.4 Flags

Registers 0 through 7, defined below, appear as the first 8 words in the N7 register map.

Register #0, Virtual Output 1-16, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| VO16 | VO15 | VO14 | VO13 | VO12 | VO11 | VO10 | VO9 | VO8 | VO7 | VO6 | VO5 | VO4 | VO3 | VO2 | VO1 |

Register #1, Virtual Output 17-32, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO32 | VO31 | VO30 | VO29 | VO28 | VO27 | VO26 | VO25 | VO24 | VO23 | VO22 | VO21 | VO20 | VO19 | VO18 | VO17 |

Register #2, Virtual Output 33-48, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO48 | VO47 | VO46 | VO45 | VO44 | VO43 | VO42 | VO41 | VO40 | VO39 | VO38 | VO37 | VO36 | VO35 | VO34 | VO33 |

Register #3, Virtual Output 49-64, Bit Position

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO64 | VO63 | VO62 | VO61 | VO60 | VO59 | VO58 | VO57 | VO56 | VO55 | VO54 | VO53 | VO52 | VO51 | VO50 | VO49 |

Register #4, Fault Flag bits for Virtual Output 1-16, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| VO16 | VO15 | VO14 | VO13 | VO12 | VO11 | VO10 | VO9 | VO8 | VO7 | VO6 | VO5 | VO4 | VO3 | VO2 | VO1 |

Register #5, Fault Flag bits for Virtual Output 17-32 Fault Flag, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO32 | VO31 | VO30 | VO29 | VO28 | VO27 | VO26 | VO25 | VO24 | VO23 | VO22 | VO21 | VO20 | VO19 | VO18 | VO17 |

Register #6, Fault Flag bits for Virtual Output 33-48, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO48 | VO47 | VO46 | VO45 | VO44 | VO43 | VO42 | VO41 | VO40 | VO39 | VO38 | VO37 | VO36 | VO35 | VO34 | VO33 |

Register #7, Fault Flag bits for Virtual Output 49-64, Bit Position

Note that not every Virtual Output has a defined Fault Flag.

| 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|------|
| VO64 | VO63 | VO62 | VO61 | VO60 | VO59 | VO58 | VO57 | VO56 | VO55 | VO54 | VO53 | VO52 | VO51 | VO50 | VO49 |

4.4.1 Flags

All 256 Virtual Outputs can be accessed in a way similar to that seen in section 4.3.

All 256 possible Virtual Outputs can be read as Registers 900-915.

All 256 possible Virtual Output Faults can be read as Registers 916-931.

Chapter 5: Error Codes

5.1 VO Fault Index

The Virtual Output Fault Index number is a way to represent the Fault Code associated with a given Virtual Output as a single 16-bit integer. This value is equivalent to the Error Message Index value (from the table below) for a given Virtual Output.

5.2 Error Code/Advanced Error Code/Error Message Index/Fault Code Table

The Error Code and the Advanced Error Code, taken together, form the Safety Controller Fault Code. The format for the Fault Code is Error Code 'dot' Advanced Error Code; a safety controller Fault Code of 2.1 will be represented by an Error Code of "2" and an Advanced Error Code of "1". The Error Message Index is a convenient way to get the complete Fault Code while only reading a single 16-bit register.

For more information on troubleshooting refer to Chapter 9 of the XS/SC26-2 Safety Controller Instruction Manual.

| Error Code | Adv. Error Code | Error Message Index | Fault Code | Error Message & Remedy |
|------------|-----------------|---------------------|------------|--|
| 1 | 1 | 101 | 1.1 | Output Fault Check for shorts Safety Output appears On when it should be Off: <ul style="list-style-type: none"> • Check for a short to the external voltage source • Check the DC common wire size connected to the Safety Output loads. |
| 1 | 2 | 102 | 1.2 | Output Fault Check for shorts A Safety Output is sensing a fault to another voltage source while the output is On: <ul style="list-style-type: none"> • Check for a short between Safety Outputs • Check for a short to the external voltage source • Check load device compatibility • Check the DC common wire size connected to the Safety Output loads. |
| 1 | 3-8 | 103-108 | 1.3-1.8 | Internal Fault Internal failure—Contact Banner Engineering |
| 1 | 9 | 109 | 1.9 | Output Fault Internal Relay Failure Replace Relay module |
| 1 | 10 | 110 | 1.10 | Output Fault Check Input Timing Sequence timing error: perform a System Reset to clear the fault |
| 2 | 1 | 201 | 2.1 | Concurrency Fault Cycle Input On a dual-channel input with both inputs in the Run state, one input went to the Stop state then back to Run: <ul style="list-style-type: none"> • Check the wiring • Check the input signals • Consider adjusting the debounce times |

| Error Code | Adv. Error Code | Error Message Index | Fault Code | Error Message & Remedy |
|------------|-----------------|---------------------|------------|--|
| 2 | 2 | 202 | 2.2 | <p>Simultaneity Fault Cycle Input</p> <p>On a dual-channel input, one input went into the Run state but the other input did not follow within 3 seconds:</p> <ul style="list-style-type: none"> • Check the wiring • Check the input signal timing |
| 2 | 3 | 203 | 2.3 | <p>Concurrency Fault, Channel 1 Cycle Input</p> <p>On a complementary pair with both inputs in the Run state, one of the inputs changed to Stop then back to Run:</p> <ul style="list-style-type: none"> • Check the wiring • Check the input signals • Check the power supply providing input signals • Consider adjusting the debounce times |
| 2 | 4 | 204 | 2.4 | <p>Simultaneity Fault, Channel 1 Cycle Input</p> <p>On a complementary pair, one input went into the Run state but the other input did not follow within the time limit:</p> <ul style="list-style-type: none"> • Check the wiring • Check the input signal timing |
| 2 | 5 | 205 | 2.5 | <p>Concurrency Fault, Channel 2 Cycle Input</p> <p>On a complementary pair with both inputs in the Run state, one of the inputs changed to Stop then back to Run:</p> <ul style="list-style-type: none"> • Check the wiring • Check the input signals • Check the power supply providing input signals • Consider adjusting the debounce times |
| 2 | 6 | 206 | 2.6 | <p>Simultaneity Fault, Channel 2 Cycle Input</p> <p>On a complementary pair, one input went into the Run state but the other input did not follow within the time limit:</p> <ul style="list-style-type: none"> • Check the wiring • Check the input signal timing |
| 2 | 7 | 207 | 2.7 | <p>Internal Fault Check Terminals Internal failure—Contact Banner Engineering</p> |
| 2 | 8 | 208 | 2.8 | <p>Input Fault Check Input Terminals Input stuck high:</p> <ul style="list-style-type: none"> • Check for shorts to other inputs or other voltage sources • Check the input device compatibility |

| Error Code | Adv. Error Code | Error Message Index | Fault Code | Error Message & Remedy |
|------------|-----------------|---------------------|------------|--|
| 2 | 9 | 209 | 2.9 | Input Fault Check Input Terminals Input stuck high: <ul style="list-style-type: none"> • Check for shorts to other inputs or other voltage sources • Check the input device compatibility |
| 2 | 10 | 210 | 2.10 | Input Fault Check Input Terminals Check for a short between inputs |
| 2 | 11 | 211 | 2.11 | Input Fault Check Input Terminals Check for a short to ground |
| 2 | 12 | 212 | 2.12 | Input Fault Check Input Terminals Check for a short to ground |
| 2 | 13 | 213 | 2.13 | Input Fault, Safety Mat Check Input Terminals Input stuck low <ul style="list-style-type: none"> • Check for a short to ground |
| 2 | 14 | 214 | 2.14 | Input Fault, Safety Mat Check Input Terminals Missing test pulses: <ul style="list-style-type: none"> • Check for a short to other inputs or other voltage sources |
| 2 | 15 | 215 | 2.15 | Open Lead, Safety Mat Check for an open lead |
| 2 | 16-18 | 216-218 | 2.16-2.18 | Input Fault, Safety Mat Check Input Terminals Missing test pulses: <ul style="list-style-type: none"> • Check for a short to other inputs or other voltage sources |
| 2 | 19 | 219 | 2.19 | Open Lead, Safety Mat Check for an open lead |
| 2 | 20 | 220 | 2.20 | Input Fault, Safety Mat Check Input Terminals Missing test pulses: <ul style="list-style-type: none"> • Check for a short to ground |
| 2 | 21 | 221 | 2.21 | Open Lead, Safety Mat Check for an open lead |
| 2 | 22-23 | 222-223 | 2.22-2.23 | Input Fault Check Input Terminals Check for an unstable signal on the input |
| 2 | 24 | 224 | 2.24 | Input Activated While Bypassed Perform System Reset A Two-Hand Control input was activated (turned On) while it was bypassed. |

| Error Code | Adv. Error Code | Error Message Index | Fault Code | Error Message & Remedy |
|------------|-----------------|---------------------|------------|---|
| 2 | 25 | 225 | 2.25 | Input Fault Monitoring Timer Expired Before AVM Closed After the associated Safety Output turned Off, the AVM input did not close before its AVM monitoring time expired: <ul style="list-style-type: none"> • The AVM may be disconnected. Check the wiring to the AVM • Either the AVM is disconnected, or its response to the Safety Output turning Off is too slow • Check the wiring to the AVM • Check the timing setting; increase the setting if necessary • Contact Banner Engineering |
| 2 | 26 | 226 | 2.26 | Input Fault AVM Not Closed When Output Turned On The AVM input was open, but should have been closed, when the associated Safety Output was commanded On: <ul style="list-style-type: none"> • The AVM may be disconnected. Check the wiring to the AVM |
| 2 | 27 | 227 | 2.27 | Input Fault Inputs On During Bypass Contact Banner Engineering |
| 3 | 1 | 301 | 3.1 | EDM Fault Check EDM Terminals EDM contact opened prior to turning On the Safety Outputs: <ul style="list-style-type: none"> • Check for a stuck On contactor or relay • Check for an open wire |
| 3 | 2 | 302 | 3.2 | EDM Fault Check EDM Terminals EDM contact(s) failed to close within 250 ms after the Safety Outputs turned Off: <ul style="list-style-type: none"> • Check for a slow or stuck On contactor or relay • Check for an open wire |
| 3 | 3 | 303 | 3.3 | EDM Fault Check EDM Terminals EDM contact(s) opened prior to turning On the Safety Outputs: <ul style="list-style-type: none"> • Check for a stuck On contactor or relay • Check for an open wire |
| 3 | 4 | 304 | 3.4 | EDM Fault Check EDM Terminals EDM contact pair mismatched for longer than 250 ms: <ul style="list-style-type: none"> • Check for a slow or stuck On contactor or relay • Check for an open wire |
| 3 | 5 | 305 | 3.5 | EDM Fault Check EDM Terminals Check for an unstable signal on the input |
| 3 | 6 | 306 | 3.6 | EDM Fault Check EDM Terminals Check for a short to ground |

| Error Code | Adv. Error Code | Error Message Index | Fault Code | Error Message & Remedy |
|------------|-----------------|---------------------|------------|--|
| 3 | 7 | 307 | 3.7 | EDM Fault Check EDM Terminals Check for a short between inputs |
| 3 | 8 | 308 | 3.8 | AVM Fault Perform System Reset After this Safety Output turned Off, an AVM input associated with this output did not close before its AVM monitoring time expired: <ul style="list-style-type: none"> • The AVM may be disconnected or its response to the Safety Output turning Off may be too slow • Check the AVM input and then perform a System Reset to clear the fault |
| 3 | 9 | 309 | 3.9 | Input Fault AVM not closed when output turned ON The AVM input was open, but should have been closed, when the associated Safety Output was commanded On: <ul style="list-style-type: none"> • The AVM may be disconnected. Check the wiring to the AVM |
| 4 | 1 | 401 | 4.1 | Supply Voltage Low Check Power Supply The supply voltage dropped below the rated voltage for longer than 6 ms: <ul style="list-style-type: none"> • Check the power supply voltage and current rating • Check for an overload on the outputs that might cause the power supply to limit the current |
| 4 | 2 | 402 | 4.2 | Internal Fault A configuration parameter has become corrupt. To fix the configuration: <ul style="list-style-type: none"> • Replace the configuration by using a backup copy of the configuration • Recreate the configuration using the PC Interface and write it to the Controller |
| 4 | 3-11 | 403-411 | 4.3-4.11 | Internal Fault Internal failure—Contact Banner Engineering |
| 4 | 12 | 412 | 4.12 | Configuration Timeout Check Configuration The Safety Controller was left in Configuration mode for more than one hour without pressing any keys. |
| 4 | 13 | 413 | 4.13 | Configuration Timeout Check Configuration The Safety Controller was left in Configuration mode for more than one hour without receiving any commands from the PC Interface. |
| 4 | 14 | 414 | 4.14 | Configuration Unconfirmed Confirm Configuration The Configuration was not confirmed after being edited: <ul style="list-style-type: none"> • Confirm configuration using the PC Interface |
| 4 | 15-19 | 415-419 | 4.15-4.19 | Internal Fault Internal failure—Contact Banner Engineering |

| Error Code | Adv. Error Code | Error Message Index | Fault Code | Error Message & Remedy |
|------------|-----------------|---------------------|------------|--|
| 4 | 20 | 420 | 4.20 | Unassigned Terminal in Use Check Terminal This terminal is not mapped to any device in the present configuration and should not be active: • Check the wiring |
| 4 | 21-34 | 421-434 | 4.21-4.34 | Internal Fault Internal failure—Contact Banner Engineering |
| 4 | 35 | 435 | 4.35 | Overtemperature An internal overtemperature condition has occurred. |
| 4 | 36-39 | 436-439 | 4.36-4.39 | Internal Fault Internal failure—Contact Banner Engineering |
| 4 | 40-41 | 440-441 | 4.40-4.41 | Module Communication Failure Check module power An output expansion module lost contact with the Base Controller. |
| 4 | 42 | 442 | 4.42 | Module Mismatch The expansion module detected does not match the Controller configuration. |
| 4 | 43 | 443 | 4.43 | Module Communication Failure Check module power An expansion module lost contact with the Base Controller. |
| 4 | 44-45 | 444-445 | 4.44-4.45 | Internal Fault Internal failure—Contact Banner Engineering |
| 4 | 46-47 | 446-447 | 4.46-4.47 | Internal Fault Internal failure—Contact Banner Engineering |
| 4 | 48 | 448 | 4.48 | Unused output Check output wiring An output is detected but it is not part of the Controller Configuration. |
| 4 | 49-55 | 449-455 | 4.49-4.55 | Internal Fault Internal failure—Contact Banner Engineering |
| 4 | 56 | 456 | 4.56 | Display Comm Failure Display Communication Failure: • Cycle power to the Controller. If fault code persists, contact Banner Engineering |
| 4 | 57-59 | 457-459 | 4.57-4.59 | Internal Fault Internal failure—Contact Banner Engineering |
| 4 | 60 | 460 | 4.60 | Output Fault Check for shorts An output terminal detected a short. Check output fault for details. |
| 5 | 1-3 | 501-503 | 5.1-5.3 | Internal Fault Internal failure—Contact Banner Engineering |
| 6 | 1-42 | 601-642 | 6.1-6.42 | Internal Fault Invalid configuration data. Possible internal failure: • Try writing a new configuration to the Controller |

Appendix A: Virtual Reset and Cancel Delay (RCD) Sequence

According to section 5.2.2 of EN ISO 13849-1:2015, a "deliberate action" by the operator is required to reset a safety function. Traditionally, this requirement is met by using a mechanical switch and associated wires connected to specified terminals on the safety controller. For a monitored reset, the contacts must be open initially, then closed, and then open again within the proper timing. If the timing is not too short or too long, it is determined to be deliberate and the reset is performed.

Banner has created a virtual reset solution that requires deliberate action. For example, in place of the mechanical switch, an HMI may be used. In place of the wires, a unique Actuation Code is used for each safety controller on a network. Also, each virtual reset within a controller is associated with a specific bit in a register. This bit, along with the Actuation Code, must be written and cleared in a coordinated way. If the steps are completed with the proper sequence and timing, it is determined to be deliberate and the reset is performed.

While the standards do not require a "deliberate action" to perform a virtual cancel delay, to avoid additional complexity, Banner has implemented this function in the same way as the virtual manual reset.

The user must set matching Actuation Codes in both the safety controller and the controlling network device (PLC, HMI, etc.). The Actuation Code is part of the network settings and is not included in the configuration CRC. There is no default Actuation Code. The user must set one up. The Actuation Code can be active for up to 2 seconds for it to be effective. Different safety controllers on the same network should have different Actuation Codes.

The HMI/PLC programmer can choose from two different methods depending on their preferences; a feedback-based sequence or a timed sequence. These methods are described in the following figures.

Virtual Reset or Cancel Delay (RCD) Sequence—Feedback Method

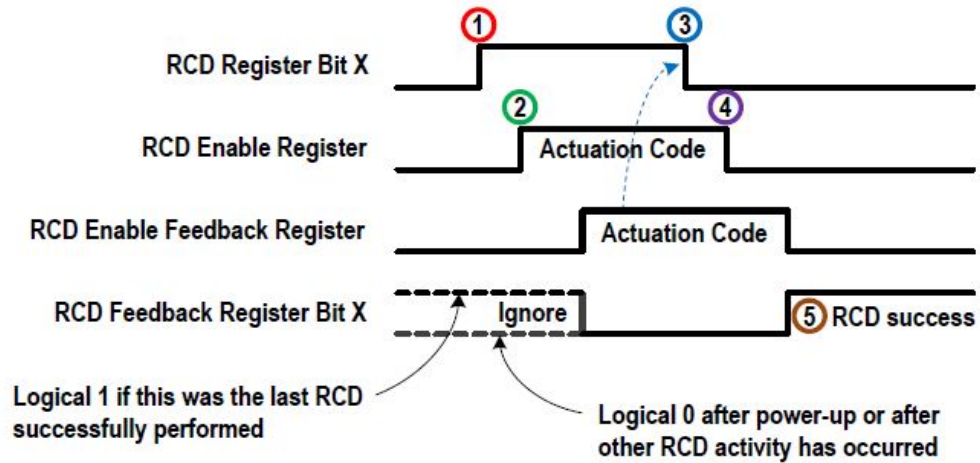


Figure 78. Virtual Reset or Cancel Delay (RCD) Sequence—Feedback Method

1. Write a logical 1 to the RCD Register Bit(s) corresponding to the desired Virtual Reset or Cancel Delay.
2. At the same time, or any time later, write the Actuation Code to the RCD Enable Register.
3. Monitor the RCD Enable Feedback Register for the Actuation Code to appear (125 ms typical). Then write a logical 0 to the RCD Register Bit.
4. At the same time, or any time later, clear the Actuation Code (write a logical 0 to the RCD Enable Register). This step must be completed within 2 seconds of when the code was first written (step 2).
5. If desired, monitor the RCD Feedback Register to know if the desired Reset or Cancel Delay was accepted (175 ms typical).


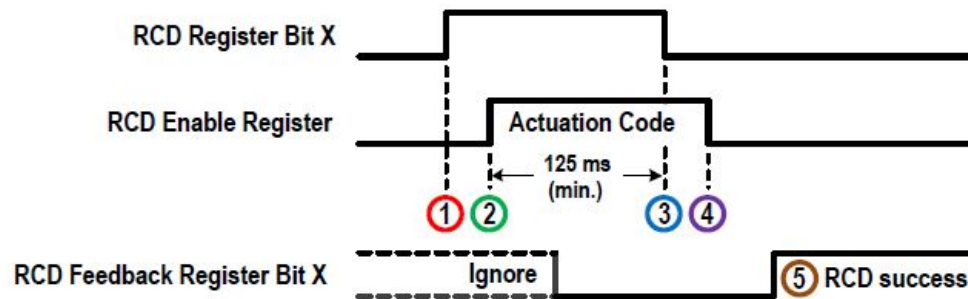
Virtual Reset or Cancel Delay (RCD) Sequence—Timed Method

Figure 79. Virtual Reset or Cancel Delay (RCD) Sequence—Timed Method

1. Write a logical 1 to the RCD Register Bit(s) corresponding to the desired Virtual Reset or Cancel Delay.
2. At the same time, or any time later, write the Actuation Code to the RCD Enable Register.
3. At least 125 ms after step 2, write a logical 0 to the RCD Register Bit.
4. At the same time, or any time later, clear the Actuation Code (write a logical 0 to the RCD Enable Register). This step must be completed within 2 seconds from when the code was first written (step 2).
5. If desired, monitor the RCD Feedback Register to know if the desired Reset or Cancel Delay was accepted (175 ms typical).

Which XS/SC26-2E EDS file/documentation should you use?

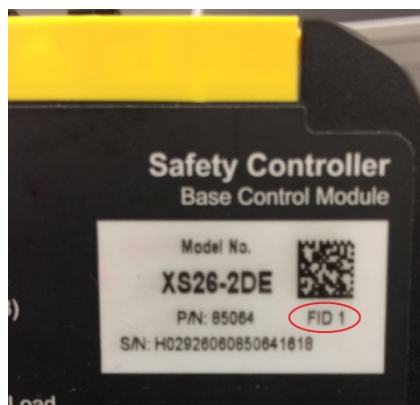

FID number on label



Last four digits

First, look at the model number sticker on the side of the device. We need to take note of the FID number and the date code.

The last 4 digits of your safety controller serial number are the date code. In the example shown, “16” means 2016 and “18” means 18th week. Use these two pieces of information to find the correct EIP parameters (and EDS file and User's Guide) from the table below.

| FID | Date Code | EIP ProdCode | O->T - size | T-> O - size | Product Name (Maj.Min Rev), EDS file & User Guide |
|-----|-----------|--------------|-----------------------------------|---|--|
| 1 | 1546- | 8193 | 112 (0x70) - 2 | 100 (0x64) - 8 101 (0x65) - 104 102 (0x66) - 150 | Banner XS26 (2.22) BannerXS_SC26_2E_1_3_10182016.eds XS/SC26-2E (OLD) Industrial Ethernet User's Guide |
| 1 | 1547+ | 300 | 112 (0x70) - 2 | 100 (0x64) - 8 101 (0x65) - 104 102 (0x66) - 150 | Banner XS26 1547 (2.002) BannerXS_SC26_2E_1547_1_5_10182016.eds XS/SC26-2E (FID 1) Industrial Ethernet User's Guide |
| 2 | 1716- | 301 | 112 (0x70) - 11 | 100 (0x64) - 8 101 (0x65) - 104 102 (0x66) - 150 103 (0x67) - 35 | Banner XS26 FID2 (2.050) BannerXS_SC26_2E_FID2_1_1_5172017.eds XS/SC26-2E (FID 2 1716-) Industrial Ethernet User's Guide |
| 2 | 1717+ | 300 | 112 (0x70) - 2 113 (0x71) - 11 | 100 (0x64) - 8 101 (0x65) - 104 102 (0x66) - 150 103 (0x67) - 35 | Banner XS26 FID1/2 (2.050) BannerXS_SC26_2E_1_6_03152017.eds XS/SC26-2E (FID 2 1717+) Industrial Ethernet User's Guide |